

### INSTALLATION INSTRUCTION SHOWER ARM

Model No.: AB12GRW


### **X** Components Checking

#### LIST OF THE STANDARD COMPONENTS:

Please double-check the component list hereinafter and contact our company or our distributor for any unconformity.


Remarks: 1. Without affecting their efficiency, components may be changed without further notice.

2. Drawings for reference only. Product size & shape refer to actual product.

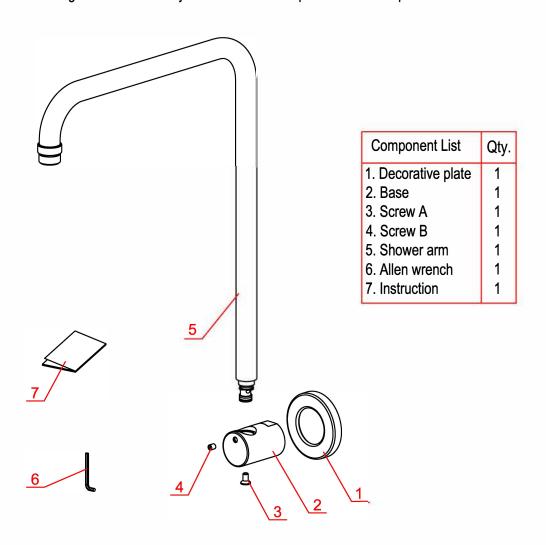


#### Installation Instructions


- ☆ Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.
- ☆ To avoid the faucet from jamming, do flush the water pipe before installation.
- ☆ After installation, make sure every joint is safely sealed and that there is no leaking.
- ☆ The nominal water pressure is 0.05 -1.0Mpa (including cold & hot water pressure), suitable for water temperature : 4% 90%.
- \( \triangle \) Make sure to connect the hot/cold inlet pipe correctly: If standing in front, hot water pipe connecting to the left & cold water pipe connecting to the right.

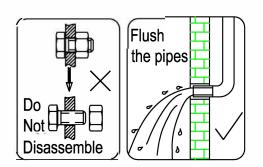



# \*Dimension Drawing

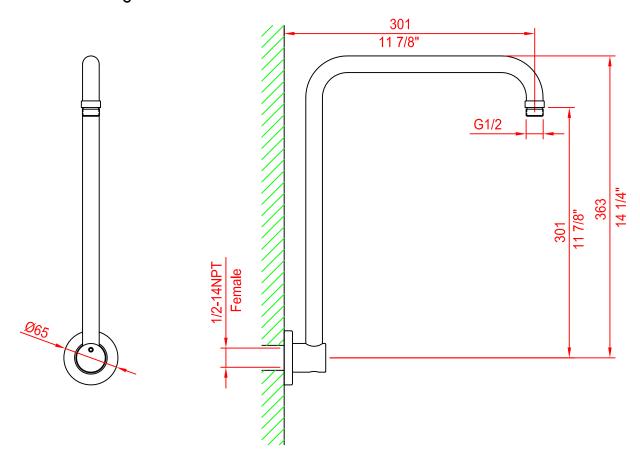

## Installation Procedures

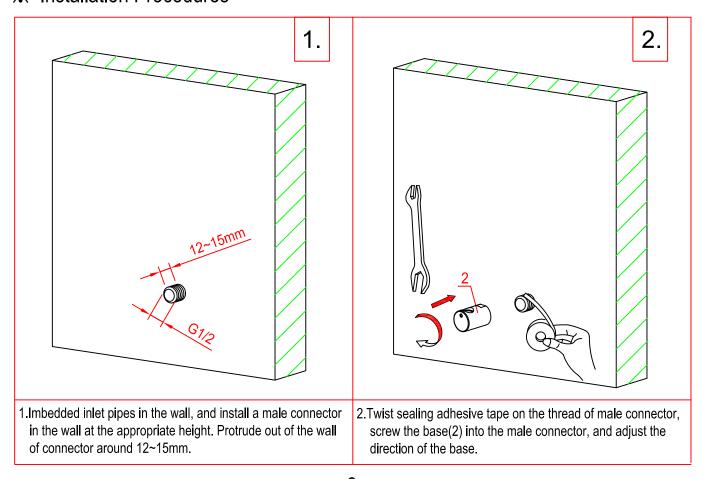

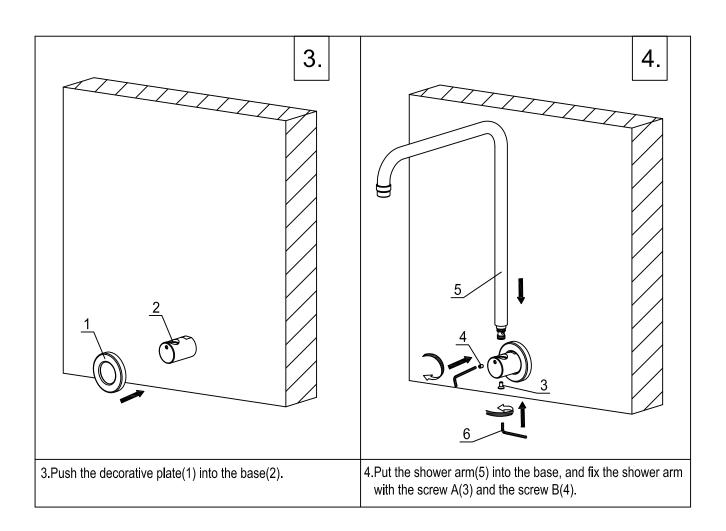

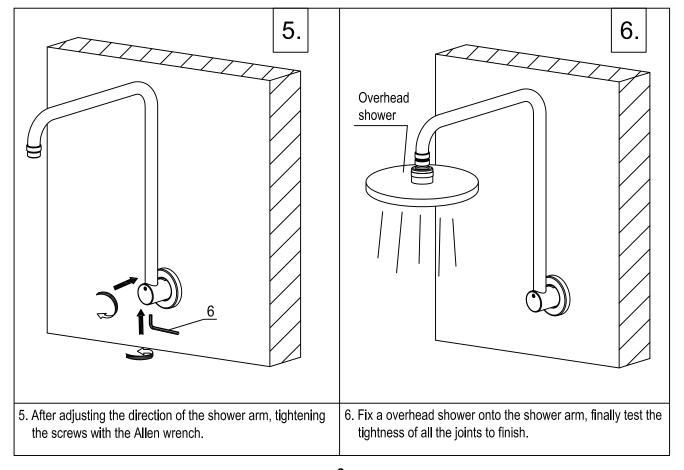

## Cleaning & Maintenance

- ☆ To keep the product clean, shining and in good condition, follow the steps as below:
  - 1.To clean, flush with clean water and dry with a soft cloth.
  - 2. If any dirt, clean with soft liquid or transparent glass detergent.
  - 3.Do not use any abrasive cleaning products, such as scrubbing detergent, polisher, sand-cloth, paper tissue, or scrapper.
  - 4.Do not use detergents or soap that contain acid or that are indissoluble.
  - 5. Take the aerator off and clean it when necessary.



<sup>\*\*</sup>This installation instruction is only for your reference, the final right to explain & to revise it belongs to us.