

Fontana Automatic Hands Free Faucet D517 Chrome Finish (also available in ORB or Gold Finish)



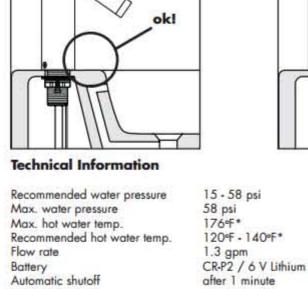

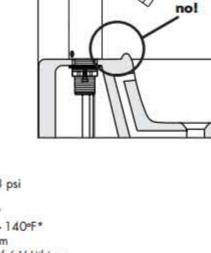

tive objects.

Installation notes under the warranty.

Flush the hot and cold supplies thoroughly before installing the faucet. Damage to the faucet caused by debris is not covered The hot and cold supplies should be of equal pressure. The faucet should not be used with a con-

tinuous flow water heater.

- Do not install the faucet on a sink with a raised edge. · Strong light sources should not shine directly on the sensor window of the faucet.
- . The faucet should only be used with the battery pack or power pack supplied by Hansgrohe. Do not attempt to use any
- other battery pack or power pack. The 110 V version of the faucet requires a 110 V electrical outlet installed by a licensed electrician. All applicable local

codes must be followed.

adjustment - the sensor automatically adjusts itself to local conditions (lavatory, brightness, etc.)

The faucet incorporates automatic range

- Do not bend or twist the supply hose!
- the faucet is in reduced range mode, the LED in the sensor window will flash while the faucet is not in use. Drops of water or condensation on the sensor window may cause the faucet to run. If the LED in the sensor window flashes while the faucet is in use, the battery is low, but the faucet may still be used. If the LED

The distance between the switch on/off

point to the faucet is approx. 6 1/4" - 8"

under normal conditions. The detection

area may be less for dark, non-reflective objects, or greater for bright, highly reflec-

If the sink is very small or highly

reflective, follow the range reduc-

tion instructions on page 13. When

If the power to the outlet or to the building fails, the 110 V version of the faucet will not run. · The spray pattern will be unattractive immediately after installation or service, due

stays on, the faucet will not run, and the

battery must be changed.

- to air in the faucet. After the faucet is used 10 - 15 times, the spray pattern will clear.

Connect the 3/8" adapters to the stops (4). Connect the hoses to the adapters (5).

Position the faucet on the sink or countertop (1).


Install and tighten the mounting nut (2). Tighten the

Installation

tensioning screws (3).


Tighten the hoses with two wrenches, as shown, to

prevent the hoses from twisting.

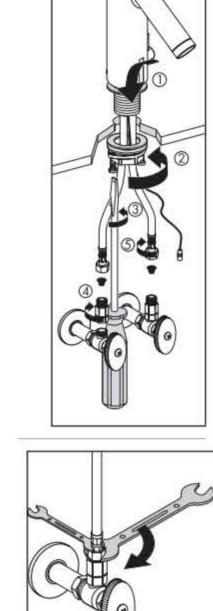



3

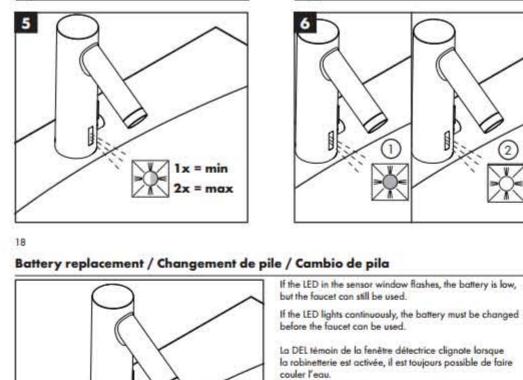

20 - 40 seconds

La DEL témoin de la fenêtre détectrice est allumée en continu, il n'est plus possible de faire couler l'eau, la pile doit


El diodo piloto en la ventana del sensor tendrá luz intermitente al accionar la grifería. Sigue siendo posible la toma

El diodo piloto en la ventana del sensor tendrá luz permanente, no es posible la toma de agua, es necesario cambiar

> Lithium CR-P2/6V

être remplacée.

2

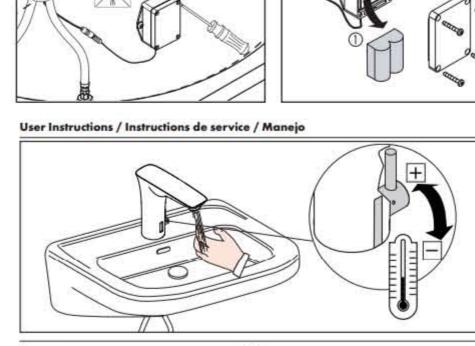

The faucet turns on automatically when the hand

The faucet will run for up to 10 seconds, as long as the hand remains within sensor range.

comes within sensor range.

The faucet turns off automatically when the hand is

removed from sensor range.

max 10 sec.

This General diagram and installation instructions are not intended for any specific model, but is presented as a general guideline for Installations!

