

Installation Instructions



Models: WGA-523A5L
Technical Parameter: AC 120V 60HZ

CARRO
SMART PARTS | LIGHTING

CEILING FAN INSTALLATION GUIDE

Please read and follow the instructions carefully before using this product.
The product image shown here is indicative only.
Actual product you receive may differ.



1

Read and Follow These Safety Precautions

1. Turn off electricity at main switch before wiring or servicing fan in order to avoid possible electrical shock.
2. All wiring must be in accordance with the National Electric Code (ANSI/NFPA70:1999) and local electrical codes. Electrical installation should be performed by a qualified licensed electrician.
3. After making the wire connections, the wires should be spread apart with the grounded conductor and the equipment-grounding conductor on the one side of the outlet box and the ungrounded conductor on the other side of the outlet box.
4. The splices after being made should be turned upward and pushed carefully up into the outlet box.
5. Conductor of a fan identified as grounded conductor to be connected to grounded conductor of power supply; conductor of a fan identified as ungrounded conductor to be connected to an ungrounded conductor of power supply; conductor of fan identified for equipment grounding to be connected to an equipment-grounding conductor.
6. Fan should not be mounted in an area where it might get wet.
7. To reduce the risk of fire, electric shock or personal injury, mount to outlet box marked "Acceptable for Fan Support" and use mounting screws provided with the outlet box. The outlet box and its support must be able to support the moving weight of the fan (at least 35lbs).
8. For safety and best operating results, we recommend that you have a qualified electrician assemble and install your fan.
9. WARNING: To reduce the risk of fire or electric shock, do not use this fan with any solid state speed control device.
10. To reduce the risk of personal injury, do not bend the blade brackets when installing the brackets, balancing the blades or cleaning the fan. Do not insert foreign objects in between rotating fan blades.
11. Check downrod length to ensure blades are at least 7 feet (2.1m) above the floor.

Troubleshooting Steps

Problem A: Fan Will not Start

1. Check fuse or circuit breaker and replace it if necessary.
2. Turn off electrical power and check all wire connectors.
3. See operation instructions.

Problem B: Fan is Excessively Noisy

1. Check if all screws in fan assembly are tight and properly seated.
2. Check and make sure mounting bracket is installed properly.
3. Check and make sure light kit and glass are installed properly and tight.

Problem C: Fan Wobbles


1. Check and make sure all blades are screwed firmly into blade holders.
2. Check and make sure all blade holders are screwed firmly into motor.
3. Check the weight of blades. All our blades are weighed on electronic scales. The weight is marked on the reverse side of the fan blade near the motor end. All of the blades should be the same weight to prevent fan from wobbling.
4. Use the enclosed balancing kit if needed.

2


Before Assembly

1. Make sure that the fan voltage (120) is compatible with your own electrical system.
2. Check to make sure that your carton contains all the parts mentioned in the parts list.
NOTE: The box can be used as a work space to prevent any damage on the ornamental surface.
CAUTION: Before installing, choose a location for mounting the fan where the blades have at least 7 feet of clearance from all objects and floor. Mount an outlet box to the ceiling or use an existing box
CAUTION: Do not mount fan to sheetrock or drywall type materials. To ensure proper support, use the two #1 wood screws to secure mounting bracket to joist or beam. If the location you choose does not have a suitable support beam, install a 2"x 4" brace between ceiling joists for a proper support.


| Screw Package | Quantity |
|--------------------------------|----------|
| S1. Blade Screws& Washers | 10 |
| S2. Wire Nuts | 3 |
| S3. Dial mounting Screws | 3 |
| S4. Pull chain and fobs | 2 |
| S5. #8Screws & Lock Washers | 2 |
| S6. Wood Screws & Flat Washers | 2 |
| S7. Balance Piece & Tape | 3 |
| S8. Balance Clip | 1 |
| S9. Instruction Sheet | 1 |

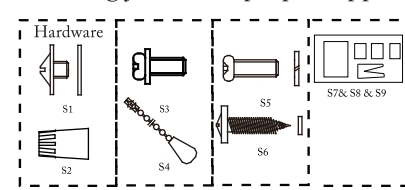

Tools you Need

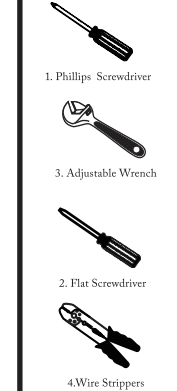

What You Have

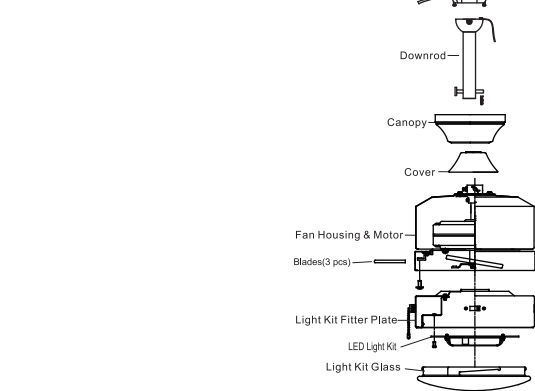


3

Turn off circuit breakers and wall switch to the fan supply line leads.




Preparation
&
Caution

Important: When using an existing outlet box, be sure the box is securely attached to the building structure and can support the full weight of the fan. Failure to do so can result in serious injury or death.

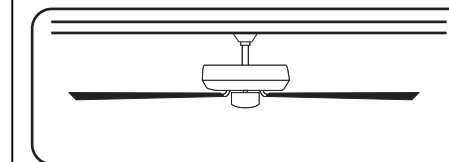


a.) Downrod Mount
(Flat Ceiling)

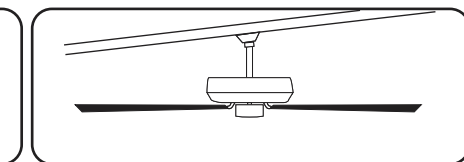

b.) Angle Mount
(Vaulted Ceiling)


IMPORTANT: If using the angle mount method, check to make sure the ceiling angle is not steeper than 18°. Angles greater than 18° will require a 35° angle adapter.

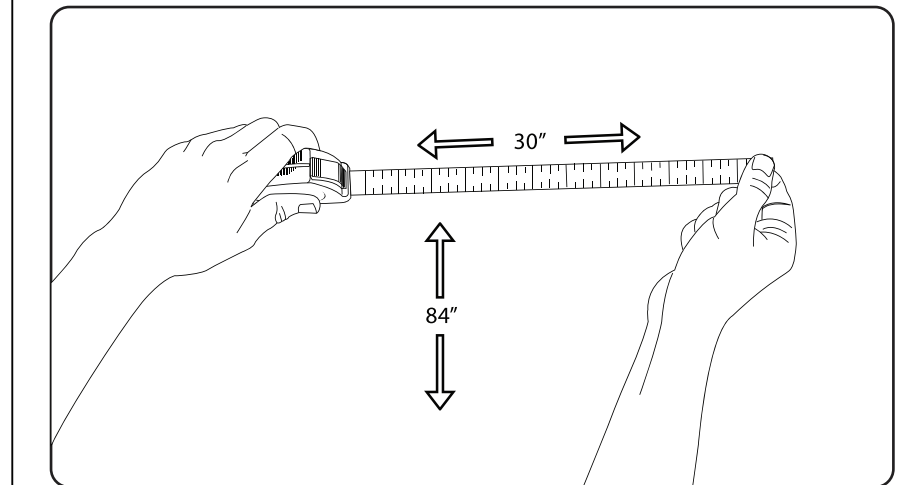

- Check to make sure blades are at least 30" from any obstruction.
- Check downrod length to make sure blades are at least 7.1' above the floor.

4

Installing Mounting Bracket

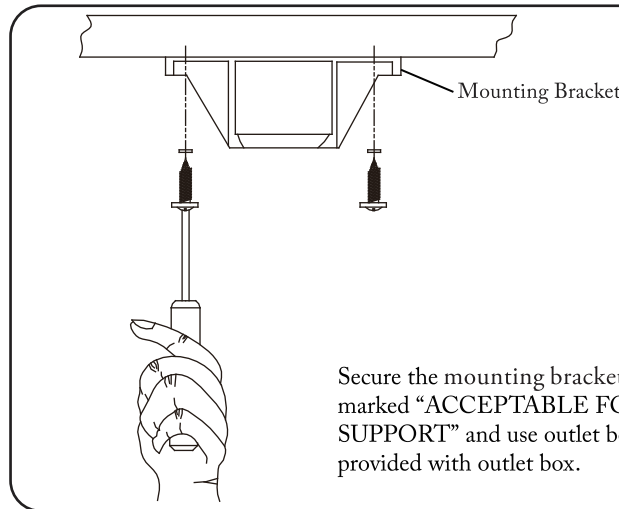

Secure the mounting bracket to outlet box marked "ACCEPTABLE FOR FAN SUPPORT" and use outlet box screws provided with outlet box.


Mounting options

Drop-mount (for flat ceilings)

- . This method is preferred if the ceiling is sloped or vaulted, or if ceiling is extra high, requiring the need of a downrod.


Hugger mount (for lower ceilings)

- . This method is preferred if maximum headroom is required. The ceiling must be completely horizontal and level.

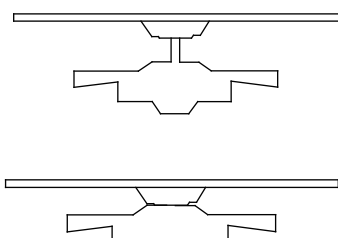


5

Installing Drop-mount

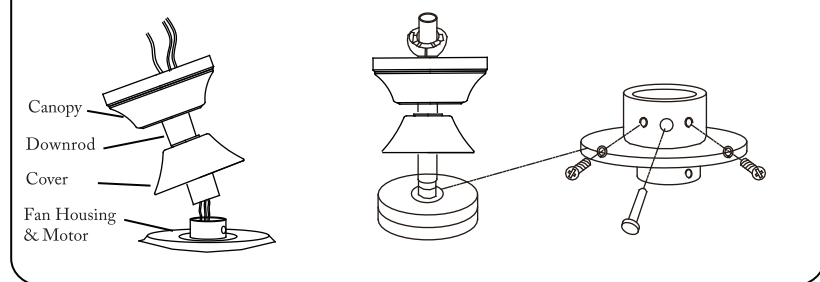

- . Loose the two downrod set screws and remove the clip and connection pin from the downrod coupling. Insert the downrod through canopy and cover, pull lead wires through downrod.
- . Insert downrod into downrod coupling. Make sure to align holes in downrod with the holes in the coupling. Insert the clip into the connection pin until it snaps into place. Tighten the screws in the downrod coupling.

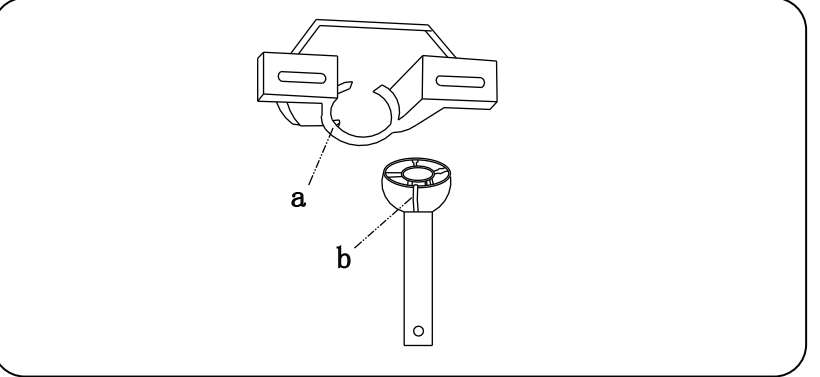

- . Carefully lift the fan assembly onto the mounting bracket.
- . Rotate the fan until the notch(b) on the Nylon Ball fits against the ridge(a) on the mounting bracket.
- . With the mounting bracket holding the fan assembly, follow wiring instructions.
- . WARNING: Failure to hold the fan assembly may result in serious injury or death.







6



WARNING: Failure to holding the fan assembly may result in serious injury or death.

Installing Hugger mount

- . If using hugger mount installation, remove rubber washer from bottom of the canopy.

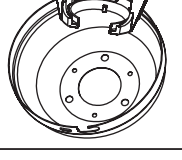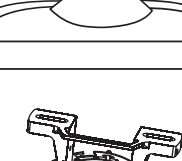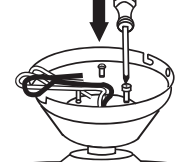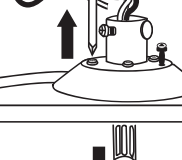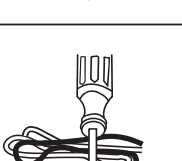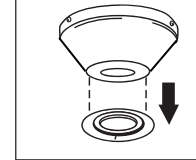

Note: Flange cover is not used with this type of installation.

- . If necessary, remove every other screw and lock washer from top of motor housing. (These screws may already be in a hardware pack.)


- . Pull wires through the canopy hole and attach canopy to motor housing using the 3 screws and 3 lock washers provided.

- . Temporarily hang fan onto the tab on the mounting bracket until wiring is complete. Use one of the non-slotted holes in the canopy.


9

Gently push up on glass shade and turn to the RIGHT (clockwise) until it slides completely into place.

NOTE: Pull down VERY GENTLY on glass shade to make sure it's properly fitted.

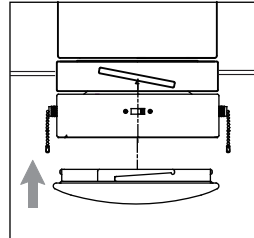

Assemble decorative fob chains from hardware bag to fan and light kit pull chains. Insert end chain into chain coupling. Check that chains are held by lightly pulling both chains in coupling.

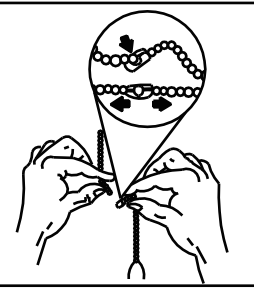

Operation

Turn fan on/off & select fan speed Restore power to ceiling fan and test for proper operation.

The fan pull chain controls the fan speed settings:

1. Turn on the fan at high speed;
 2. Turn on the fan at medium speed;
 3. Turn on the fan at low speed;
 4. Turn off the fan.
- The light pull chain controls the light:
1. Turn on the light;
 2. Turn off the light.

Forward and reverse direction function

This ceiling fan is equipped with a Reverse Switch for downward or upward air-flow.


10

NOTE: Do not use the Reverse Switch when the fan blades are in motion.


Forward and reverse direction function

Forward air-flow.

NOTE: Do not change the direction of rotation while the fan blades are in motion. To change direction, turn off the fan and wait for the blades to stop rotating before setting the switch to the desired rotation direction, either forward or reverse.

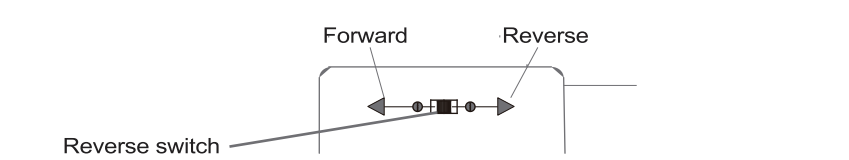

IMPORTANT: Reverse switch must be set either completely left or completely right for fan to function. If the reverse switch is set in the middle position, fan will not operate.

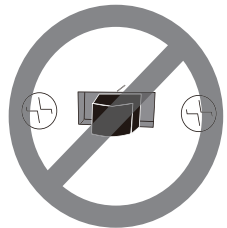


11

NOTE: Do not use the Reverse Switch when the fan blades are in motion.

Forward function

. On this setting, the fan will turn counterclockwise to create a cooling effect. Use this function during warmer weather to circulate the hot air away from your living space.

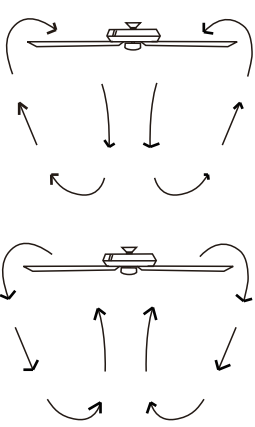

Reverse function

. On this setting, the fan will turn clockwise. Use this function during cooler weather to re-circulate warm air.

Maintenance

- Because of the fan's constant spinning movement, some connections may become loose. Check the support connections, brackets and blade attachments twice a year. Make sure they are secure.
- There is no need to oil your fan. The motor has permanently-lubricated bearings

Care and Cleaning

- Dust your fan periodically with a soft, dry cloth. Do not use harsh cleaners or materials as they may damage the unit.
- To prevent bending the blades during cleaning, support the blades so that no pressure is applied to them.

Caution!

Do not allow water to come in contact with fan blades or the ceiling fan. Doing so will create fire and/or shock hazards, damaging property.

12

FCC/IC Information

This device complies with part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

(1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation. Modifications not expressly approved by Carro USA Inc. could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CARRO USA INC.
1037 W. 9th Street, Unit 101, Upland, CA 91786
Tel: (888) 253-2374
www.carrohome.com | cs@carrohome.com

