




GAS RANGE

COS-GRC305KTD

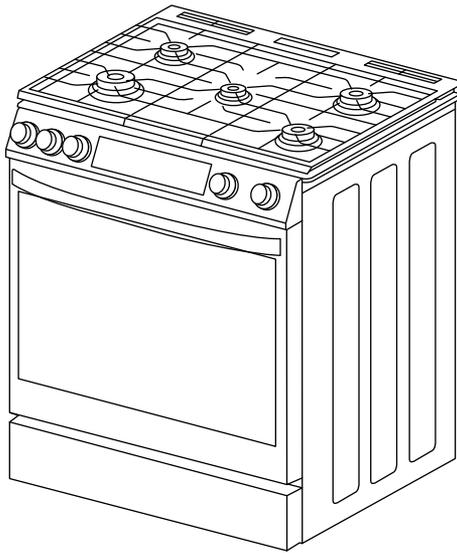

30" SLIDE-IN RANGE

INSTALLATION INSTRUCTIONS

IMPORTANT: READ AND SAVE THESE INSTRUCTIONS.
FOR RESIDENTIAL USE ONLY.

INSTALLER: PLEASE LEAVE THESE INSTRUCTIONS WITH THIS UNIT FOR
THE OWNER.

OWNER: PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE
REFERENCE.

THANK YOU FOR YOUR PURCHASE

Thank you for your purchase. We know that you have many brands and products to choose from and we are honored to know that you have decided to take one of our products into your home and hope that you enjoy it.

COSMO Appliances are designed according to the strictest safety and performance standard for the North American market. We follow the most advanced manufacturing philosophy. Each appliance leaves the factory after thorough quality inspection and testing. Our distributors and our service partners are ready to answer any questions you may have regarding how to install, use and care for your products. We hope that this manual will help you learn to use the product in the safest and most effective manner.

Before using this product, please read through this manual carefully. Keep this user manual in a safe place for future reference. Please ensure that other persons using this product are familiar with these instructions as well.

If you have any questions or concerns, please contact the dealer from whom you purchased the product, or contact our Customer Support at:

1-888-784-3108

Reach us online at:

www.cosmoappliances.com

TABLE OF CONTENTS

RANGE SAFETY	4
Anti-tip Device	6
INSTALLATION REQUIREMENTS	7
Tools and Parts	7
Location Requirements	9
Product Specifications	10
Product Dimensions	11
Clearances.....	12
Venting Requirements.....	14
Electrical Requirements.....	15
Gas Supply Requirements	17
INSTALLATION INSTRUCTIONS	21
Remove Old Appliance	21
Unpack Range	22
Install Anti-tip Device	23
Install Rear Trim.....	25
Gas Connection	26
Complete Installation.....	30
Electrical Supply Connection.....	30
Placement and Leveling Range	31
Verify Anti-tip Bracket Engagement.....	33
Removing/Assembling Oven Door.....	35
Removing/Assembling Drawer	37
Assembling the Surface Burners and Grates	38
Checking Operation of the Surface Burners	39
Adjust Flame Height	41
Checking Operation of the Oven	43
GAS CONVERSION	45
HIGH ALTITUDE CONVERSION	53

RANGE SAFETY

READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "WARNING" or "CAUTION." These words mean:



You can be killed or seriously injured if you don't follow instructions.



A potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

In the State of Massachusetts, the following installation instructions apply:

- Installations and repairs must be performed by a qualified or licensed contractor, plumber, or gasfitter qualified or licensed by the State of Massachusetts.
- If using a ball valve, it shall be a T-handle type.
- A flexible gas connector, when used, must not exceed 3 feet (91.5 cm).

California Proposition 65 Warning



Cancer and Reproductive Harm - www.P65Warnings.ca.gov.

WARNING



FIRE AND EXPLOSION HAZARD

If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- **WHAT TO DO IF YOU SMELL GAS**
 - Do not try to light any appliance.
 - Do not touch any electrical switch.
 - Do not use any phone in your building.
 - Clear the room, building, or area of all occupants.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.

WARNING

Never Operate the Top Surface Cooking Section of this Appliance Unattended.

- Failure to follow this warning statement could result in fire, explosion, or burn hazard that could cause property damage, personal injury, or death.
- If a fire should occur, keep away from the appliance and immediately call your fire department.


DO NOT ATTEMPT TO EXTINGUISH AN OIL/GREASE FIRE WITH WATER.

WARNING



TIP OVER HAZARD

- A child or adult can tip the range and be killed.
- Install anti-tip bracket to floor or wall per installation instructions.
- Slide range back so rear range foot is engaged in the slot of the anti-tip bracket.
- Re-engage the anti-tip bracket if range is moved.
- Do not operate the range without anti-tip bracket installed and engaged.
- Failure to follow these instructions can result in death or serious burns to children and adults.

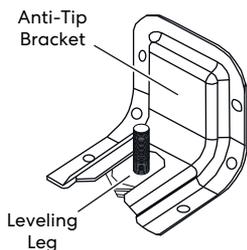

Making sure the anti-tip bracket is installed:

- Slide range forward.
- Look for the anti-tip bracket securely attached to floor and wall.
- Slide range back so rear range foot is under anti-tip bracket.

WARNING: Gas leaks cannot always be detected by smell.

Gas suppliers recommend that you use a gas detector approved by UL or CSA. For more information, contact your gas supplier.

WARNING: Do not install a ventilation system that blows air downward toward this cooking appliance. This type of ventilation system may cause ignition and combustion problems with this cooking appliance resulting in personal injury or unintended operation.

WARNING: This appliance is intended for normal residential use. It is not approved for commercial use, outdoor installation, or any other application not specifically allowed by this manual.

INSTALLATION REQUIREMENTS

TOOLS AND PARTS

Gather the required tools and parts before starting installation. Read and follow the instructions provided with any tools listed here.


Tools Needed

- Tape measure
- Flat-blade screwdriver
- Phillips screwdriver
- Level
- Drill
- Adjustable wrench or pliers
- Pipe wrench
- 1/8" (3.2 mm) drill bit (for wood floors)
- Masonry drill bit (for concrete/ceramic floors only)
- Marker or pencil
- Pipe-joint compound resistant to Propane gas
- Noncorrosive leak-detection solution

For Propane/Natural Gas Conversions

- Combination wrench
- Nut drive
- Masking tape


Parts Needed

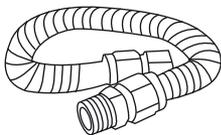


New flexible gas supply line
(3/4" or 1/2" NPT x 1/2" ID)



 New Flare Union Adapter
(3/4" or 1/2" NPT x 1/2" ID)




New Flare Union Adapter
(1/2" NPT x 1/2" ID)

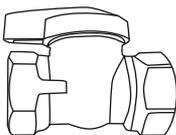


Gas line shut-off valve


Parts Supplied

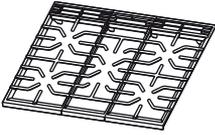

Surface burner grates (3)

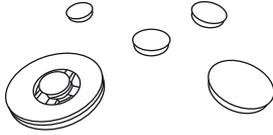


Surface burners and caps (5)

 

Oven racks (2)



 Anti-tip bracket with screws



Gas pressure regulator
(die cast)



Rear trim with screws

Optional Parts

To purchase these or any other accessories or replacement parts, please visit www.cosmoappliances.com or reference the contact information at the end of this manual.

- LP conversion kits




Scan to find
available LP Kits

LOCATION REQUIREMENTS

IMPORTANT: Observe all governing codes and ordinances. Do not obstruct flow of combustion and ventilation air.

- It is the installer's responsibility to comply with installation clearances specified on the model/serial/rating plate. The model/serial/rating plate is located inside the storage drawer on either the left or right side panel.

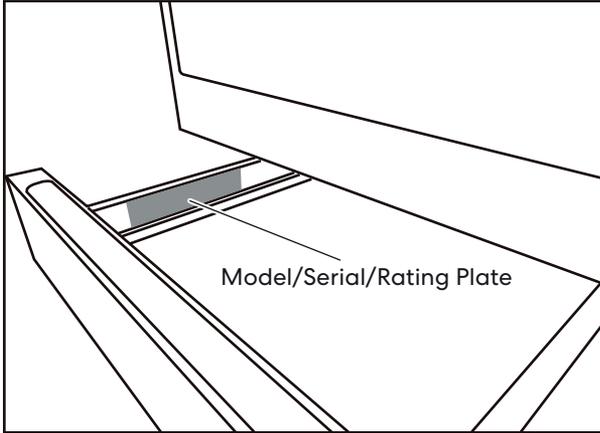

- The range should be located for convenient use in the kitchen.
- Recessed installations must provide complete enclosure of the sides and rear of the range.
- Do not install a ventilation system that blows air downward toward the range.
- Do not locate the range where it may be subject to strong drafts.
- All openings in the wall or floor where range is to be installed must be sealed.
- Do not seal the range to the side cabinets.
- Cabinet opening dimensions that are shown must be used.
- The anti-tip bracket must be installed.
- Grounded electrical supply is required. See "Electrical Requirements" section.
- Proper gas supply connection must be available. See "Gas Supply Requirements" section.
- Contact a qualified floor covering installer to check that the floor covering can withstand at least 167°F (75°C).
- Use an insulated pad or 1/4" (0.64 cm) plywood under range if installing range over carpeting.

IMPORTANT: To avoid damage to your cabinets, check with your builder or cabinet supplier to make sure that the materials used will not discolor, delaminate, or sustain other damage. This range has been designed in accordance with the requirements of UL and CSA International and complies with the maximum allowable wood cabinet temperatures of 194°F (90°C).

Mobile Home - Additional Installation Requirements

- The installation of this range must conform to the Manufactured Home Construction and Safety Standard, Title 24 CFR, Part 3280 (formerly the Federal Standard for Mobile Home Construction and Safety, Title 24, HUD Part 280). When such standard is not applicable, use the Standard for Manufactured Home Installations, ANSI A225.1/NFPA 501A or with local codes.

In Canada, the installation of this range must conform with the current standards CAN/CSA-A240-latest edition, or with local codes.

Mobile Home Installations Require:

- When this range is installed in a mobile home, it must be secured to the floor during transit. Any method of securing the range is adequate as long as it conforms to the standards listed above.
- Four-wire power supply cord or cable must be used in a mobile home installation. The appliance wiring will need to be revised. See "Electrical Connection" section.


PRODUCT SPECIFICATIONS

Model	COS-GRC305KTD
Description	30" Gas Range
Oven Capacity	6.1 cu. ft.
Electrical Requirements	120V, 60Hz
Power Ratings	Refer to Rating Plate
Exterior Dimensions (WxDxH)	31 1/6" x 28 7/8" x 38 1/6" (78.9 x 73.3 x 96.6 cm)
Height to Cooking Surface	36 3/4" (93.3 cm)
Net Weight	243 lb (110 kg)

PRODUCT DIMENSIONS

Your model may appear different from the model depicted. Dimensions given are maximum dimensions across all models.


COS-GRC305KTD

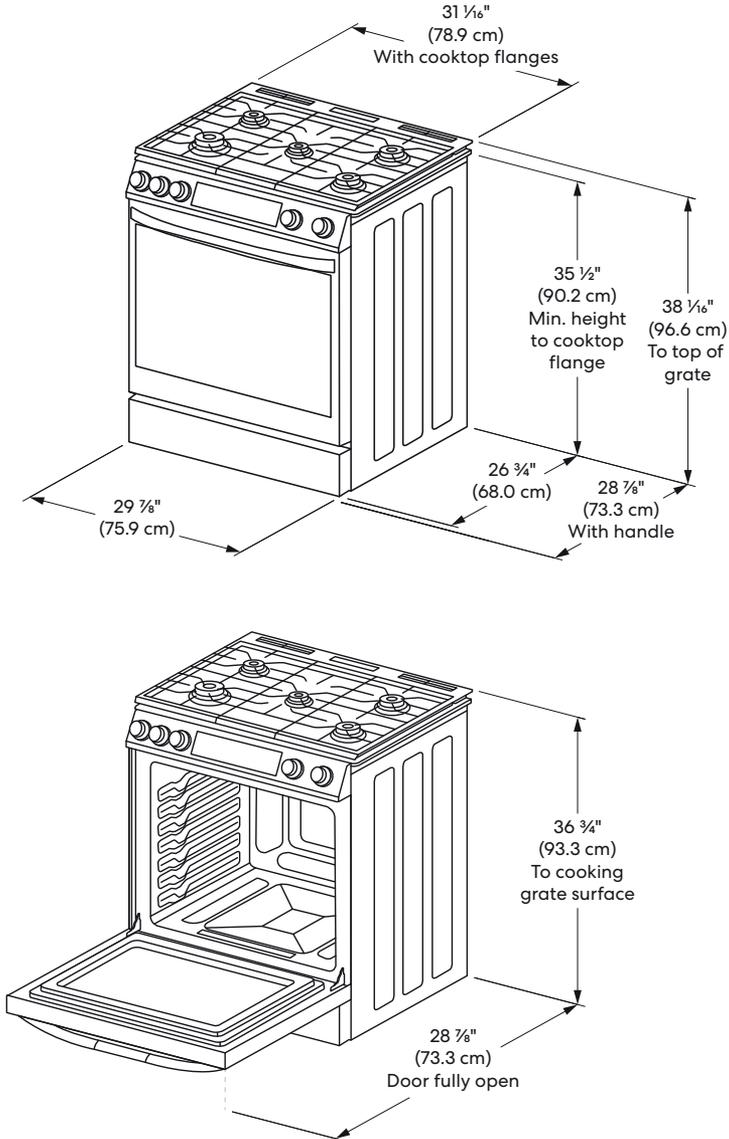

CLEARANCES

IMPORTANT: Some cabinet and building materials are not designed to withstand the heat produced by the oven for baking and self-cleaning. Check with your builder or cabinet supplier to make sure that the materials used will not discolor, delaminate or sustain other damage.

GIVEN DIMENSIONS ARE MINIMUM CLEARANCES.

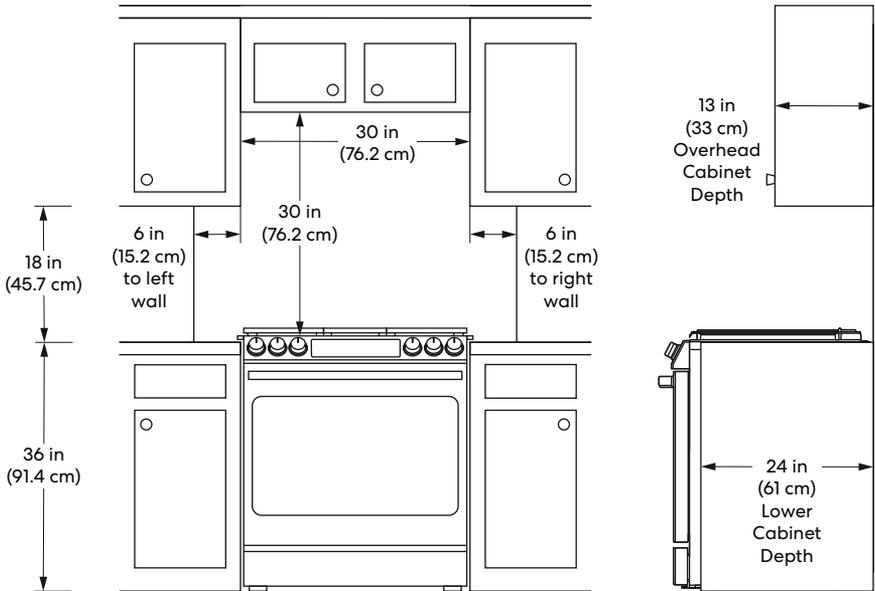


NOTE:

- 30" (76.2 cm) minimum clearance between cooking surface and bottom of the overhead cabinet.
- 18" (45.7 cm) minimum clearance from upper cabinet to countertop on either side of unit.
- Island Installations: Maintain 6" (15.2 cm) minimum clearance from cutout to back and side edges of countertop.


Power Supply Location

IMPORTANT: An electrical outlet in the floor, may be either recessed or surface mounted, but an electrical outlet in the wall must be recessed to make the connection.

SLIDE-IN

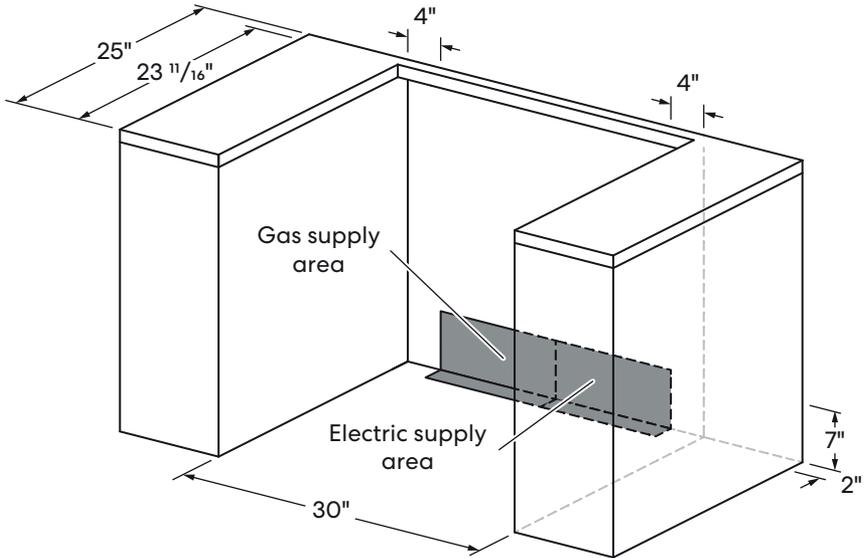

FREESTANDING

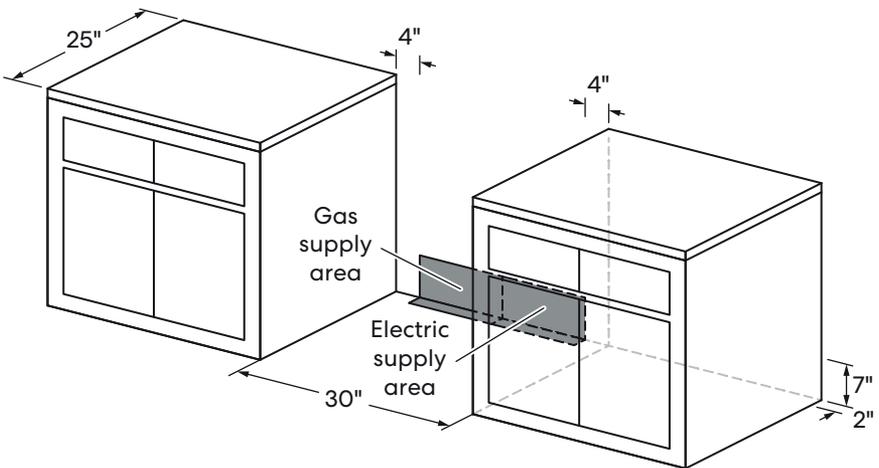

VENTING REQUIREMENTS

IMPORTANT: This range must be exhausted outdoors unless you are using ductless venting. Observe all governing codes and ordinances. Do not obstruct flow of combustion and ventilation air.

- Do not terminate the vent system in an attic or other enclosed area.
- Use an approved vent cap for proper performance. If an alternate wall or roof cap is used, be certain the cap size is not reduced and that it has a backdraft damper.
- Vent system must terminate to the outside unless you are using a ductless vent kit.
- Rigid metal vent is recommended. For best performance, do not use plastic or metal foil vent.
- If a joist or stud must be cut, then a supporting frame must be constructed.
- The size of the vent should be uniform.
- The vent system must have a damper.
- Seal all joints in the vent system.
- Use caulking to seal exterior wall or roof opening around the cap.
- Determine which venting method is best for your application.

Makeup Air

Local building codes may require the use of makeup air systems when using ventilation systems greater than specified CFM of air movement. The specified CFM varies from locale to locale. Consult your HVAC professional for specific requirements in your area.

ELECTRICAL REQUIREMENTS

WARNING



ELECTRICAL SHOCK HAZARD

- Electrically ground range.
- Failure to do so can result in death, fire or electrical shock.

ELECTRICAL GROUNDING INSTRUCTIONS

- The power cord of this appliance is equipped with a three-prong (grounding) plug which plugs into a standard three-prong grounding wall receptacle to minimize the possibility of electric shock hazard from this appliance.
- **DO NOT, UNDER ANY CIRCUMSTANCES, CUT OR REMOVE THE (THIRD) GROUNDING PRONG FROM THE PLUG.**

U.S.A. ONLY

Be sure that the electrical connection and wire size are adequate and in conformance with the National Electrical Code, ANSI/NFPA No. 70 - latest edition and all local codes and ordinances.

A copy of the above code standards can be obtained from:

National Fire Protection Association
1 Batterymarch Park
Quincy, MA 02169

CANADA ONLY

Be sure that the electrical connection and wire size are adequate and in conformance with the CSA Standard C22.1, Canadian Electrical Code, Part 1 - latest edition and all local codes and ordinances.

A copy of the above code standards can be obtained from:

Canadian Standards Association
178 Rexdale Blvd.
Toronto, ON M9W 1R3 CANADA

WARNING: Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service technician if you are in doubt as to whether the appliance is properly grounded. Do not modify the power supply cord plug. If it will not fit the outlet, have a proper outlet installed by a qualified electrician.

ELECTRICAL CONNECTION

- The receptacle of this range is to be connected to a properly grounded dedicated circuit providing 120 VAC/60 Hz power and protected by a 15- or 20-Amp circuit breaker or slow blow fuse.
- Where a standard two-prong wall receptacle is encountered, contact a qualified electrician to have it replaced with a properly grounded three-prong wall receptacle.
- This range is equipped with an electronic ignition system that will not operate if plugged into an outlet that is not properly polarized.
- Do not use an extension cord or an adapter plug.
- Check local codes and consult gas supplier. Check existing electrical supply and gas supply. It is recommended that all electrical connections be made by a licensed, qualified electrical installer.
- Range must be connected to the proper electrical voltage and frequency as specified on the model/serial/rating plate. The plate is located inside the storage drawer on either the left or right side panel. Refer to the illustrations in the "Location Requirements" section.
- A 120 volt, 60 Hz, AC only, 15-amp fused, electrical circuit is required. A time-delay fuse or circuit breaker is also recommended. It is recommended that a separate circuit serving only this range be provided.
- Electronic ignition systems operate within wide voltage limits, but proper grounding and polarity are necessary. Check that the outlet provides 120-volt power and is correctly grounded.
- It is the personal responsibility of the range owner to provide the correct electrical service for this range.
- This gas range is not required or recommended to be plugged into a GFCI (Ground-Fault Circuit Interrupter) outlet. It is recommended that you not plug an electric spark ignition gas range or any other major appliance into a GFCI wall outlet as it may cause the GFCI to trip during normal cycling.
- Performance of this range will not be affected if operated on a GFCI-protected circuit. However, occasional nuisance tripping of the GFCI breaker is possible due to the normal operating nature of electronic gas ranges.
- The wiring diagram is located on the back of the range.

GAS SUPPLY REQUIREMENTS

WARNING



FIRE AND EXPLOSION HAZARD

- Use a new CSA International approved gas supply line.
- Install a shut-off valve.
- Securely tighten all gas connections.
- If connected to LP, have a qualified person make sure gas pressure does not exceed the maximum pressure listed in this section.
- Examples of a qualified person include:
 - licensed heating personnel
 - authorized gas company personnel
 - authorized service personnel
- Failure to do so can result in death, explosion or fire.

IMPORTANT:

- Observe all governing codes and ordinances.
- This installation must conform with all local codes and ordinances. In the absence of local codes, installation must conform with American National Standard, National Fuel Gas Code ANSI Z223.1/NFPA 54 - latest edition or CAN/CGA B149 - latest edition, or in Canada, the Natural Gas and Propane Installation Code, CSA B149.1 - latest edition.
- Leak testing of the range must be conducted according to the manufacturer's instructions. Do not use a flame to check for leaks.

TYPE OF GAS

This range is design-certified by CSA International for use with natural gas or, after proper conversion, for use with Liquid Propane (LP) gas.

Natural Gas

This range is factory-set for use with Natural gas. The model/serial/rating plate located inside the storage drawer on either the left or right side panel has information on the types of gas that can be used. If the types of gas listed do not include the type of gas available, check with the local gas supplier.

LP Gas Conversion

The LP conversion kit is sold separately. Conversion must be performed by a qualified service technician. The qualified agency performing this work assumes the gas conversion responsibility. No attempt shall be made to convert the appliance from the gas specified on the model/serial/rating plate for use with a different gas without consulting the serving gas supplier.

GAS SUPPLY LINE

Provide a gas supply line of 3/4" (1.9 cm) rigid pipe to the range location. A smaller size pipe on longer runs may result in insufficient gas supply. Pipe-joint compounds that resist the action of LP gas must be used. With LP gas, piping or tubing size can be 1/2" (1.3 cm) minimum. Usually, LP gas suppliers determine the size and materials used in the system.

Flexible Metal Appliance Connector

- If local codes permit, a new CSA design-certified, 4 - 5 ft (122 - 152.4 cm) long, 1/2" (1.3 cm) or 3/4" (1.9 cm) I.D., flexible metal appliance connector may be used for connecting range to the gas supply line. In Canada, flexible connectors must be single wall metal connectors less than 6 feet (182.9 cm) in length.



- A 1/2" (1.3 cm) male pipe thread is needed for connection to the female pipe threads of the inlet to the appliance pressure regulator.
- Do not kink or damage the flexible metal tubing when moving the range.


Rigid Pipe Connection

Since the range must be pulled away from the installation space to provide access to the gas regulator connections, and because hard piping restricts movement of the range, the range can only be installed using a CSA International-certified flexible metal appliance connector.

If local codes require a hard-piped connection, a combination of pipe fittings must be used to connect the range to the existing gas line and maintain an accessible working space behind the range. Consult with a qualified local technician for an optimal connection suitable for your installation.

Gas Shut-off Valve

A manual gas line shut-off valve must be installed in an easily accessible location. Do not block access to shut-off valve. The valve is for turning on or shutting off gas to the range.

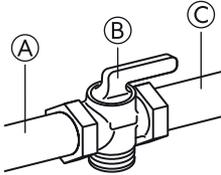

- (A) Gas Supply Line
- (B) Shut-off Valve "Open" Position
- (C) To Range

GAS PRESSURE REGULATOR

The gas pressure regulator supplied with this range must be used. The inlet pressure to the regulator should be as follows for proper operation:

	Natural gas	LP gas
Minimum pressure	5" WC	10" WC
Maximum pressure	13" WC	13" WC

Contact local gas supplier if you are not sure about the inlet pressure.

Burner Input Requirements

Input ratings shown on the model/serial/rating plate are for elevations up to 2,000 ft (609.6 m).

For elevations above 2,000 ft (609.6 m), ratings are reduced at a rate of 4% for each 1,000 ft (304.8 m) above sea level (not applicable for Canada).

HIGH ALTITUDE INSTALLATION

WARNING

CARBON MONOXIDE HAZARD

- Reduced air pressure and oxygen availability at high altitudes may affect proper burner combustion.
- Failure to properly convert the range for high altitude installations can result in increased risk carbon monoxide.
- The conversion must be performed by a qualified service technician in accordance with the manufacturer's instructions and all local codes and requirements. The agency performing this work assumes responsibility for the conversion.

Units must be converted for proper operation at elevations in excess of 6,000 ft (1,829 m).

The high altitude conversion kit is sold separately. High altitude conversion requires some or all cooktop and oven burner orifices to be changed. The regulator must be set according to the fuel type in use at the installation site. (See "Gas Conversion" section for information on fuel type settings.)

GAS SUPPLY PRESSURE TESTING

Gas supply pressure for testing regulator must be at least 1" (2.5 cm) water column pressure above the manifold pressure shown on the model/serial/rating plate.

Line pressure testing above 0.5 psi gauge (14" WCP)

The range and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 0.5 psi (3.5 kPa).

Line pressure testing at 0.5 psi gauge (14" WCP) or lower

The range must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psi (3.5 kPa).

INSTALLATION INSTRUCTIONS

IMPORTANT: This appliance shall be installed only by authorized persons and in accordance with the manufacturer's installation instructions, local gas fitting regulations, municipal building codes, electrical wiring regulations, local water supply regulations.

REMOVE OLD APPLIANCE

WARNING



FIRE AND EXPLOSION HAZARD

- If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.
- **WHAT TO DO IF YOU SMELL GAS**
 - Do not try to light any appliance.
 - Do not touch any electrical switch.
 - Do not use any phone in your building.
 - Clear the room, building, or area of all occupants.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.

WARNING

EXCESSIVE WEIGHT HAZARD

- Use two or more people to move and install range. Failure to do so can result in back or other injury.

CAUTION

LACERATION, FOREIGN OBJECT, CRUSH HAZARD

- When installing, moving, or servicing any appliance, wear proper protective equipment, including cut resistant gloves, steel-toed shoes, and safety glasses.
- Shut off the main gas supply valve to the residence before disconnecting the old range and leave it off until the new hookup has been completed.
- Move appliance to access the gas and electrical connections.
- Disconnect gas and electrical connections and move appliance out of and away from installation space.

UNPACK RANGE

WARNING

EXCESSIVE WEIGHT HAZARD

- Use two or more people to move and install range. Failure to do so can result in back or other injury.

1. Remove all tape and packaging materials. Check for film on stainless steel parts, padding/spacers on and around door and face of oven, cardboard and plastic on and around racks, inside storage drawer, etc. Do not dispose of anything until the installation is complete.

NOTE:

- Do not use sharp instruments, rubbing alcohol, flammable fluids, or abrasive cleaners to remove tape or glue. These products can damage the surface of your range.
- To reduce the weight of the range while being moved, adjusted, and installed, leave the cooktop grates, cooktop burners, oven racks, and any other accessories to the side until they are ready to be installed later in these instructions.

NOTE:

- To further reduce the weight of the range while being moved, adjusted, and installed, detach the oven door and remove the bottom drawer from the range. See "Removing/Assembling Oven Door" and "Removing/Assembling Drawer" sections.

INSTALL ANTI-TIP DEVICE

WARNING




TIP OVER HAZARD

- A child or adult can tip the range and be killed.
- Install anti-tip bracket to floor or wall per installation instructions.
- Slide range back so rear range foot is engaged in the slot of the anti-tip bracket.
- Re-engage the anti-tip bracket if range is moved.
- Do not operate the range without anti-tip bracket installed and engaged.
- Failure to follow these instructions can result in death or serious burns to children and adults.

IMPORTANT:

- An anti-tip bracket is provided with the range. The anti-tip bracket uses a rear range foot to secure the range to the floor or wall.
- Attach the anti-tip bracket to the floor or wall so that the rear range foot will be centered within the bracket when the range is pushed into its final position.

1. Using the template provided with anti-tip kit, locate the preferred location for installation of the anti-tip bracket and mark the location of the screw holes. Bracket may be installed at either the back-left or back-right corner of the installation space.

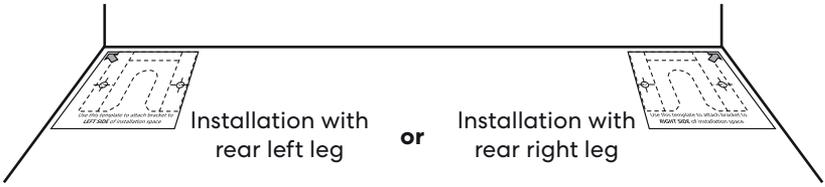

NOTE:

- Only one anti-tip bracket needs installed.

2. Follow the instructions specific to your construction.


Wood Construction

- Drill a 1/8" pilot hole where screws are to be located. If bracket is to be mounted to the wall, drill pilot hole at an approximate 20° downward angle. Screw must enter wood.

Masonry Construction


- Due to the variety of masonry materials that may be present at installation site, hardware is not provided for attaching the anti-tip bracket to masonry. If bracket is to be mounted to masonry or ceramic floors, attach anti-tip bracket using two 5/16" OD sleeve anchors (with 1/4" bolt - either hex bolt head or hex nut head) rated for minimum 300lb tension for the masonry material present at installation site. Screw must enter masonry.

3. Secure anti-tip bracket to floor or wall with the screws provided.

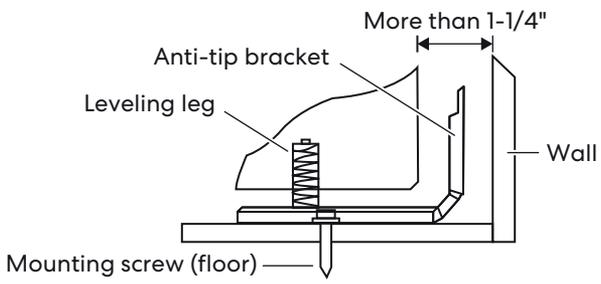


INSTALL REAR TRIM (OPTIONAL)

If there is no counter surface around the back edge of the installation space, or if the countertop cutout is greater than 25" deep, this may prevent the range from being installed flush to the back wall. A rear trim can be installed to cover a gap up to 1 inch in width.

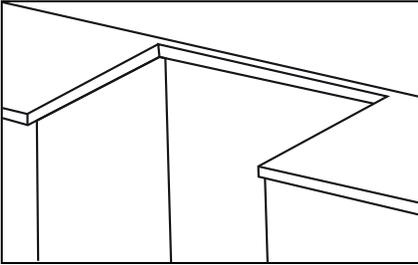


Counter continues around behind installation space - no rear trim required.

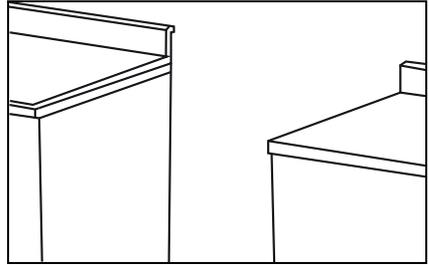

No countertop behind at back of installation space - rear trim recommended.

1. Align rear trim mounting holes.
2. Secure rear trim with the screws provided.

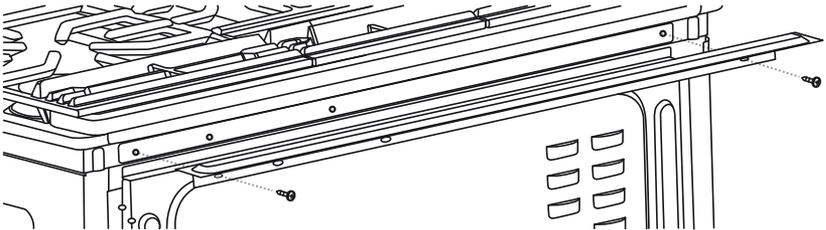

GAS CONNECTION

WARNING




FIRE AND EXPLOSION HAZARD

- Use a new CSA International approved gas supply line.
- Install a shut-off valve.
- Securely tighten all gas connections.
- If connected to LP, have a qualified person make sure gas pressure does not exceed the maximum pressure listed in the "Gas Supply Requirement" section.
- Examples of a qualified person include:
 - licensed heating personnel
 - authorized gas company personnel
 - authorized service personnel
- Failure to do so can result in death, explosion or fire.

This appliance shall be installed only by authorized persons and in accordance with the manufacturer's installation instructions, local gas fitting regulations, municipal building codes, electrical wiring regulations, local water supply regulations. The agency performing this work assumes responsibility for the quality of work performed, including checking for leaks and ensuring installation meets code requirements.


This range is factory-set for use with Natural gas. To use this range with Propane gas, see the "Gas Conversion" section before connecting this range to the gas supply. Gas conversions from Natural gas to Propane gas or from Propane gas to Natural gas must be done by a qualified installer.

TYPICAL FLEXIBLE CONNECTION

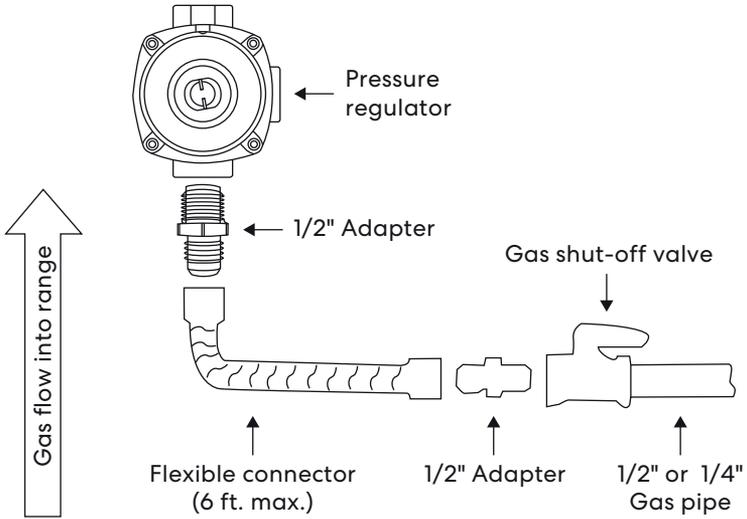

1. Turn manual shut-off valve to the closed position.
2. Unplug range or disconnect power.
3. Locate and remove the regulator access cover on the back of the range.

IMPORTANT: Do not remove the gas pressure regulator.

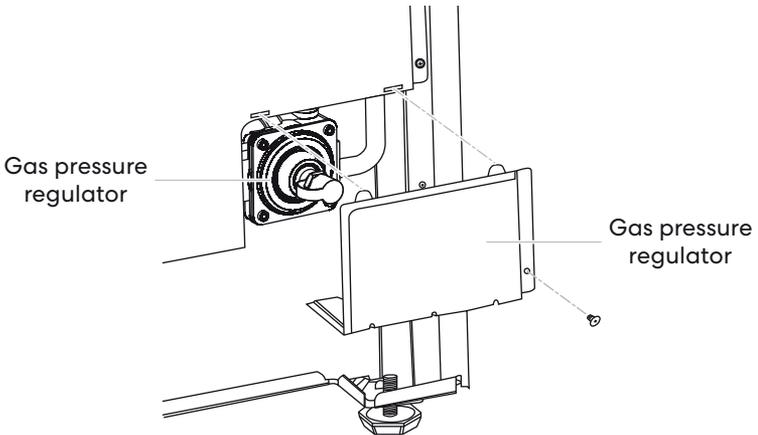

4. Apply pipe-joint compound made for use with LP gas to the smaller thread ends of the flexible connector adapters.
5. Attach male 1/2" flare union adapter to the 1/2" NPT internal thread at the regulator inlet with a wrench using no more than 15 ft-lbs of torque. Use a backup wrench on the regulator fitting to avoid damage.

NOTE:

- Do not make connections to the gas regulator too tight. The regulator is die cast. Overtightening may crack the regulator resulting in a gas leak and possible fire or explosion.

6. Attach male 1/2" or 3/4" flare union adapter to the NPT internal thread of the manual shut-off valve with a wrench using no more than 15 ft-lbs of torque, being certain not to move or turn the shut-off valve.
7. Connect one end of flexible gas supply line connector to the flare union adapter on the range.
8. Position range near the installation space to permit flexible gas supply line connection at the shut-off valve, and connect other end of flexible gas supply line connector to the flare union adapter at the shut-off valve. Check that flexible gas supply line is not kinked.
9. Use wrenches to tighten flexible gas supply line connections, and replace the regulator access cover.

TYPICAL RIGID PIPE CONNECTION

Since the range must be pulled away from the installation space to provide access to the gas regulator connections, and because hard piping restricts movement of the range, the range can only be installed using a CSA International-certified flexible metal appliance connector.

If local codes require a hard-piped connection, a combination of pipe fittings must be used to connect the range to the existing gas line and maintain an accessible working space behind the range. Hard-piped connections vary according to the supply line type, size and location. Consult with a qualified local technician for an optimal connection suitable for your installation.

CONVERT TO LP GAS (OPTIONAL)

This range is shipped from the factory set up to use natural gas. It can be converted to operate on LP/propane gas by a qualified service technician.

The LP conversion kit is sold separately. The conversion to LP requires all surface and oven burner gas orifices to be changed. In addition, the gas pressure regulator must also be adjusted for LP.

See "Gas Conversion" section for detailed instructions.

To order LP conversion kit, see "Optional Parts" in the "Tools and Parts" section.

NOTE:

- All replaced orifices must be left with the consumer, including the instructions and retrofit sizes and orifice indication.

CONVERT FOR HIGH ALTITUDE (OPTIONAL)

The conversion must be performed by a qualified service technician in accordance with the manufacturer's instructions and all local codes and requirements. The agency performing this work assumes responsibility for the conversion.

The high altitude conversion kit is sold separately. The high altitude conversion requires some or all cooktop and oven burner orifices to be changed. The regulator must be set according to the fuel type in use at the installation site. (See "Gas Conversion" section for information on fuel type settings.)

See "High Altitude Conversion" section for detailed instructions.

To order high altitude conversion kit, see "Optional Parts" in the "Tools and Parts" section.

NOTE:

- All replaced orifices must be left with the consumer, including the instructions and retrofit sizes and orifice indication.

COMPLETE GAS CONNECTION

1. Check that all range controls are in the OFF position.

2. Open the manual shut-off valve in the gas supply line. The valve is open when the handle is parallel to the gas pipe.
3. Test all connections by brushing on an approved noncorrosive leak-detection solution. If bubbles appear, a leak is indicated. Correct any leak found.

COMPLETE INSTALLATION

ELECTRICAL SUPPLY CONNECTION

WARNING



ELECTRICAL SHOCK HAZARD

- Disconnect power before servicing.
- Plug into a grounded 3-prong outlet.
- Do not use an adapter or an extension cord.
- Failure to do so can result in death, fire, or electrical shock.

IMPORTANT:

- Where a standard two-prong wall receptacle is encountered, contact a qualified electrician to have it replaced with a properly grounded three-prong wall receptacle.
 - Do not use an extension cord or an adapter plug.
 - **DO NOT, UNDER ANY CIRCUMSTANCES, CUT OR REMOVE THE (THIRD) GROUNDING PRONG FROM THE PLUG.**
1. Check that all range controls are in the OFF position.
 2. Plug in range to a grounded 3-prong wall receptacle.

PLACEMENT AND LEVELING RANGE

WARNING

EXCESSIVE WEIGHT HAZARD

- Use two or more people to move and install range. Failure to do so can result in back or other injury.

CAUTION

LACERATION, FOREIGN OBJECT, CRUSH HAZARD

- When installing, moving, or servicing any appliance, wear proper protective equipment, including cut resistant gloves, steel-toed shoes, and safety glasses.


IMPORTANT:

- The metal flange under each side of the cooktop **MUST** be placed over the cabinet countertop for proper unit support. The cooktop should **NOT** rest directly on the countertop or else it could cause damage to the cooktop voiding the warranty.
- Dampening the countertop where the cooktop overhangs with soapy water may allow the range to slide into position more smoothly.
- Do not lift by the cooktop edges. Push, pull, or lift only on the body or structural areas, such as oven, oven face, or back corners of range.
- Do not move unit by pushing or pulling on the door or control panel. Grasp the left/right door area to push the unit.
- Move range by lifting, not sliding, to prevent damage to floors.
- Use a belt when moving the range to prevent damaging the floor, or use cardboard, plywood, or stiff plastic to protect floors if sliding is necessary.
- Be careful not to pinch or kink the gas or electrical connections. If unit does not move in smoothly, check for obstructions. Do not attempt to force the unit into position.

Getting the unit properly placed in the installation space and level may require multiple attempts. It is recommended to measure and adjust leveling legs carefully before placing into the installation space, as the leveling legs may be difficult to adjust once the range is in its final position.

1. Use tape measure to measure from the floor to the top of the countertop at all four corners of the installation space.
2. While range is still positioned outside the installation space, use a plier or wrench to adjust the leveling leg at each corner so that the distance from the floor to the underside of the cooktop edge matches the dimensions measured in the installation space.

IMPORTANT: The metal flange under each side of the cooktop **MUST** be placed over the cabinet countertop for proper unit support. The cooktop should **NOT** rest directly on the countertop or else it could cause damage to the cooktop voiding the warranty.

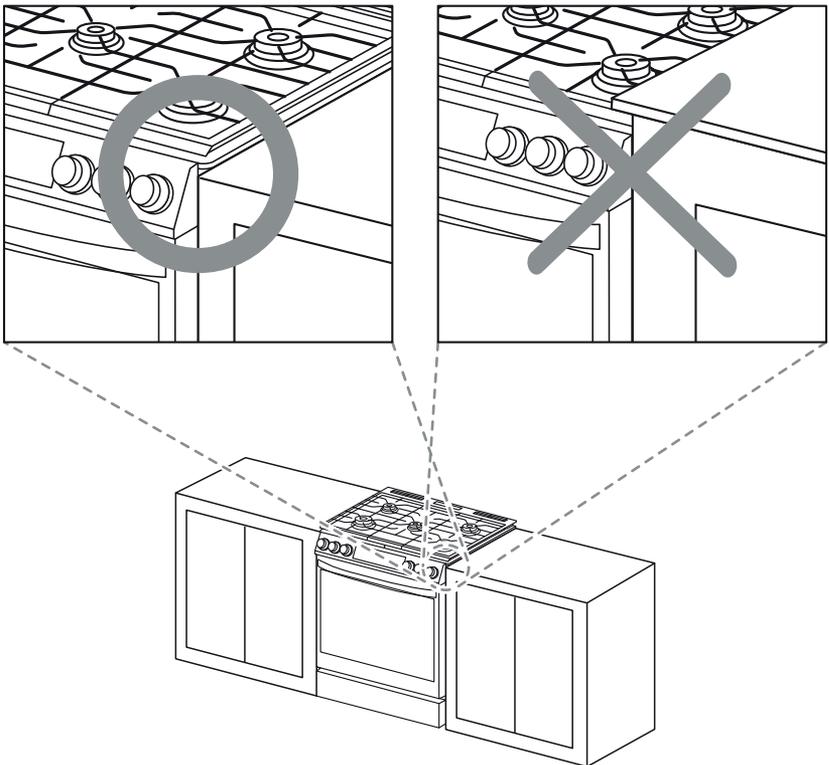

3. Using 2 or more people, gently move range into its final installation location and insert the rear range foot into the slot of the anti-tip bracket, being careful not to damage countertops, floor, or appliance.

4. Check to ensure the flexible metal gas connector and electrical cord are not kinked.
5. Place the level diagonally on the oven bottom or oven rack, and check each diagonal direction for level. Adjust the leveling legs with a plier or wrench as necessary.

NOTE:

- The range must be level for optimum cooking and baking performance.
- The weight of the range is to be supported by the leveling legs only. Do not over-adjust the leveling legs and cause the side overhangs of the cooktop to rest directly on the countertop.
- If countertops are not level, leveling the range may cause one or more corners of the cooktop to not contact the countertop surface. If this happens, range can remain unlevelled to allow cooktop to contact countertop around entire perimeter. Just be advised that this may affect performance for some baked goods. Although not generally recommended, in these cases foam tape rated for 194°F (90°C) minimum can be placed around countertop edge to fill the gap caused by leveling.
- Do not use caulking or other adhesives that would bind the cooktop to the counter.

6. Reassemble oven door, drawer, and insert oven racks if they were previously removed. See "Removing/Assembling Oven Door" and "Removing/Assembling Drawer" sections.


VERIFY ANTI-TIP BRACKET ENGAGEMENT

Do not operate the range if its rear foot is not completely engaged in the anti-tip bracket.

IMPORTANT:

- If the range is pulled away from the wall for any reason, always verify anti-tip bracket engagement again.
- Never completely remove the leveling legs or the range will not be secured to the anti-tip device properly.

1. Place the outside of your foot against the bottom of the front panel to keep the range from moving, and then grasp the back of the range, as shown.

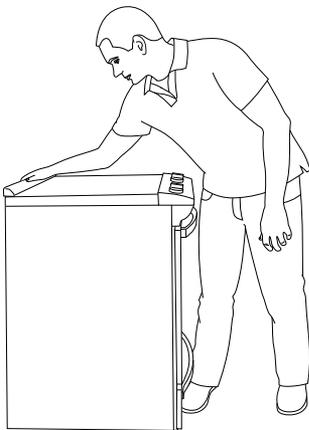

2. Carefully and slowly attempt to tilt the range forward.
 - If you encounter immediate resistance, the range foot is engaged in the anti-tip bracket. Go to Step 5.
 - If the rear of the range lifts more than 1/2" (1.3 cm) off the floor without resistance, stop tilting the range and lower it gently back to the floor. The range foot is not engaged in the anti-tip bracket. Proceed to Steps 3 and 4.

IMPORTANT: If there is a snapping or popping sound when tilting the range, the range may not be fully engaged in the bracket. Check to see if there are obstructions keeping the range from sliding to the wall or keeping the range foot from sliding into the bracket. Verify that the bracket is held securely in place by the mounting screws.

3. Slide the range forward, and verify that the anti-tip bracket is securely attached to the floor or wall.
4. Slide range back so the rear range foot is inserted into the slot of the anti-tip bracket.

REMOVING/ASSEMBLING OVEN DOOR

For normal range use, it is not suggested to remove the oven door. However, if removal is necessary, make sure the oven is off and cool.




NOTE:

- The oven door is heavy.
- If door is removed, confirm that door operates correctly and seals properly when reinstalled. If door gasket does not seal completely, heat escaping from around doors could ignite cabinetry.

Removing Door

1. Fully open the oven door.
2. Unlock the hinge locks on both sides, rotating them as far toward the open door frame as they will go.
3. Firmly grasp both sides of the door.
4. Close the door to the removal position, which is approximately five degrees or 2-3 inches from being fully closed. If the position is correct, the hinge arms will move freely.
5. Lift door up and out until the hinge arms are clear of the slots.

IMPORTANT: Do not lift door by door handle.

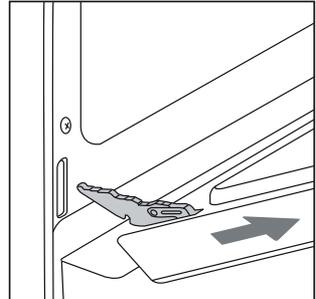
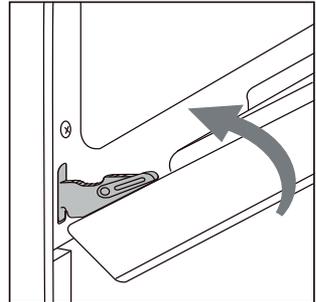
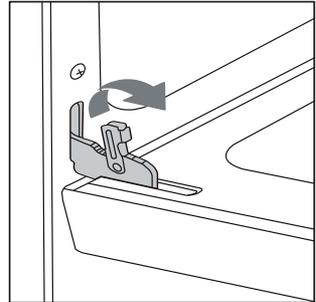


Assembling Door

1. Firmly grasp both sides of the door.
2. With the door at the same angle as the removal position, which is approximately five degrees or 2-3 inches from being fully closed, seat the indentation of the hinge arms into the bottom edge of the hinge slots. The notch in the hinge arms must be fully seated into the bottom edge of the slots.

IMPORTANT: Do not lift door by door handle.


3. Open the door fully. If the door will not open fully, the indentation is not seated correctly in the bottom edge of the slots.
4. Lock the hinge locks, rotating them back toward the slots in the oven frame until they lock.
5. Close the oven door. Check that the door is free to open and close and is level while closed.

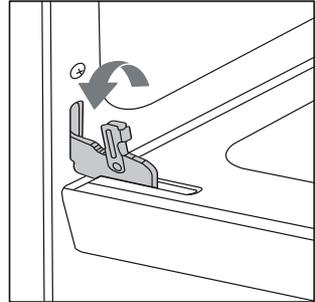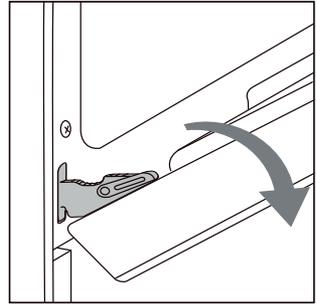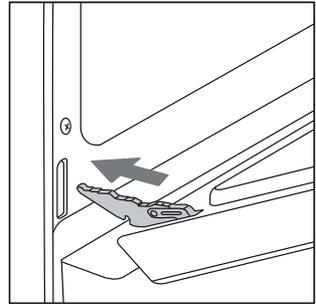

REMOVING/ASSEMBLING DRAWER

Removing Drawer

1. Fully open the drawer.
2. Locate the glide lever on each side of the drawer. Operate the release levers and pull the drawer away from the range.

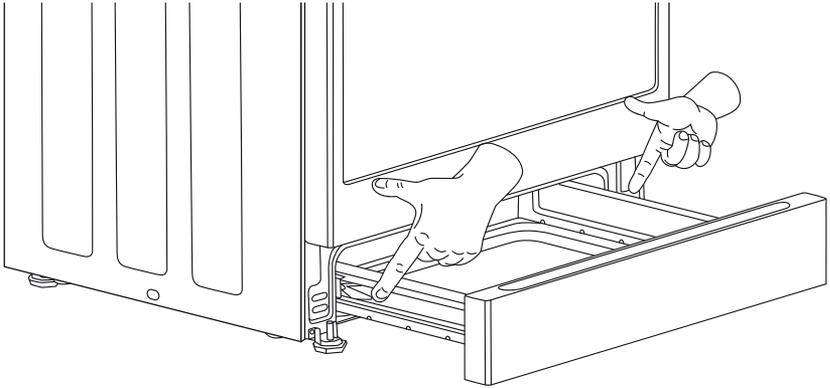


Assembling Drawer

1. Align the glide on each side of the drawer with the glide slots on the range.
2. Push the drawer into the range until levers click (approximately 2 inches).
3. Open and close drawer to ensure it is properly installed.

ASSEMBLING THE SURFACE BURNERS AND GRATES

IMPORTANT: Do not operate the burners without all parts in place.

1. Check that all range controls are in the OFF position.
2. Remove surface burner bases and caps from package containing parts. Align and place the burner bases and caps in the correct locations.

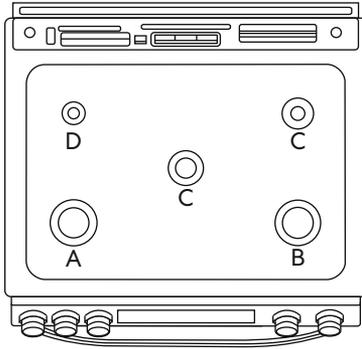

- A. Double Ring (X-Large)
- B. Rapid (Large)
- C. Semi Rapid (Medium)
- D. Auxiliary (Small)

NOTE:

- Align notches in burner caps with pins in burner base.
- Make sure the hole in the burner base is positioned over the igniter.
- Burner caps should be level when properly positioned. If burner caps are not properly positioned, surface burners will not light.
- The burner cap should not rock or wobble when properly aligned.



Standard
burners

Double-ring
burner




Correctly positioned



Incorrectly positioned

3. Place burner grates over burners bases and caps. Grates are not interchangeable, they must be placed correctly as illustrated below. The edges of the grates should match up with the edges of the cooktop.

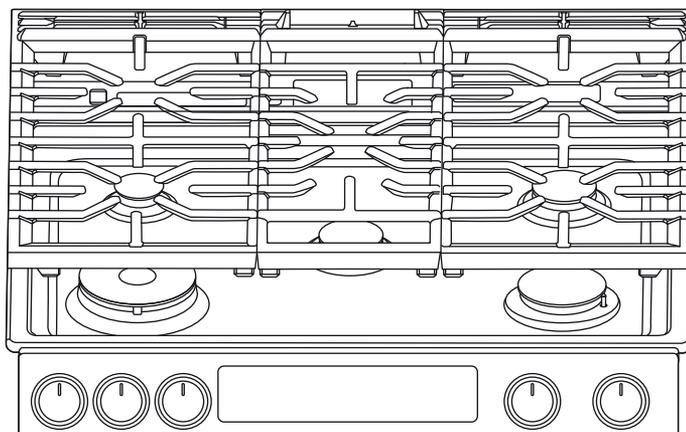

CHECKING OPERATION OF THE SURFACE BURNERS

Cooktop burners use electronic igniters. When the cooktop control knob is turned to the ignite position, the system creates a spark to light the burner. All cooktop burners will spark, but only the burner with the control knob turned to the ignite position will produce a flame. This sparking continues as long as the control knob is turned to the ignite position.


STANDARD SURFACE BURNERS

1. For each burner, one at a time, push in and turn control knob to the ignite position, and turn control knob to the highest setting after the burner is lit.
2. The flame should light within 4 seconds. The first time a burner is lit, it may take longer than 4 seconds to light because of air in the gas line.
3. For each burner, one at a time, rotate the knob quickly to the lowest setting - confirm that the flame is not extinguished.
4. With one burner still at the lowest setting (and all others at highest setting), quickly open and close the oven door - confirm that the flame is not extinguished.

5. Compare flame height at the highest and lowest setting - confirm flame height is sufficiently reduced when turned to the lowest setting. In other words, confirm that the lowest setting is sufficiently low for the size of the burner being tested.
6. If burner flame is extinguished during any of the above tests, or if the burner flame needs to be adjusted for any of the burners, see the "Adjust Flame Height" section.


QUALITY OF FLAMES

The combustion quality of the burner flames needs to be confirmed visually.

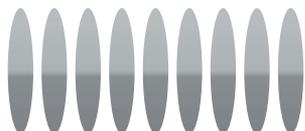


Soft blue flames

This is normal for natural gas.

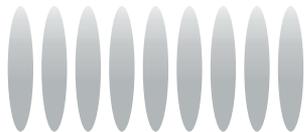

Yellow tips on outer cones

This is normal for LP gas.

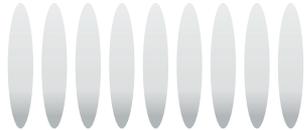

Yellow flames

This is abnormal for any gas operation.
Call for service.

If Burners Do Not Light Properly:

1. Turn cooktop control knob to the OFF position.
2. Check that the range is plugged into a grounded 3 prong outlet. Check that the circuit breaker has not tripped or the fuse has not blown.
3. Check that the gas shut-off valves are set to the open position.
4. Check that burner caps are properly positioned on burner bases.

 
Repeat start-up. If a burner does not light at this point, turn the control knobs to the OFF position and contact your dealer or authorized service company for assistance.

ADJUST FLAME HEIGHT

Adjust the height of surface burner flames. The cooktop "low" burner flame should be a steady blue flame approximately 1/4" (6 mm) high. Propane gas flames have a slightly yellow tip.




Low flame



High flame

To Adjust Standard Burner:

The flame can be adjusted using the adjustment screw in the center of the valve stem. The valve stem is located directly underneath the control knob.

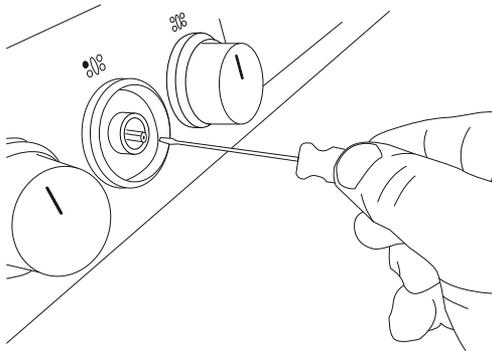

IMPORTANT: Adjustments must be made with all other burners in operation on the highest setting. This prevents the flames from being set too low, resulting in the flame being extinguished when other burners are turned on.

1. Light all burners and turn to the highest setting.
2. Turn the knob on the burner being adjusted to the lowest setting.
3. Pull straight out and remove the control knob.

4. Hold the knob stem with one hand or a pair of pliers to prevent it from turning. Use a small flat-blade screwdriver to turn the screw located in the center of the control knob stem until the flame is the proper size.
 - Turning the screw clockwise will decrease the flame size.
 - Turning the screw counterclockwise will increase the flame size.
5. Replace the control knob.
6. Test and check the flame by turning the control knob from the lowest to the highest settings.

NOTE:

- For burners (on some models) with safety valve, make sure that the regulation obtained is sufficient to maintain heating of the thermocouple. If it is not, increase the minimum flame.

ABNORMAL OPERATION

ANY OF THE FOLLOWING ARE CONSIDERED TO BE ANBORMAL OPERATION AND MAY REQUIRE SERVICING:

- Yellow burner flames.
- Sooting up of cooking utensils.
- Burners not igniting properly.
- Burners failing to remain lit.
- Burners extinguished by oven door.
- Gas valves, which are difficult to turn.

IN CASE THE APPLIANCE FAILS TO OPERATE CORRECTLY, CONTACT THE AUTHORIZED SERVICE PROVIDE IN YOUR AREA.

THE BURNERS REQUIRE NO REGULATION OF THE PRIMARY AIR.

CHECKING OPERATION OF THE OVEN

Oven burners use electronic igniters with flame detection. When the oven control is turned to the desired setting, sparking occurs and ignites the gas. Oven burners do not have adjustable air shutters and do not require any adjustment.

NOTE:

- Ensure door is closed, all packaging is removed, and oven is empty except for oven rack(s).



To Check Bake Burner:

1. Keep the oven door closed. The oven burners will turn off when oven door is open.
2. Press **BAKE** on the oven control - the control will default to 350°F.
3. Adjust bake temperature setting to 170°F. (Press **1**, **7**, and **0**.)
4. Press **START/ENTER**.
5. Listen for "clicking" from spark igniter and "whoosh" of ignition.
 - Spark igniter will only activate for a few seconds. If oven does not ignite immediately, the oven control will turn off the gas flow to the burner, wait 10-15 seconds, and attempt re-ignition. It will make a total of 3 attempts before generating an error. The entire process should take less than 1 minute.
 - It is normal for the oven control to attempt igniting 2 or 3 times immediately after the unit is first installed due to residual air in the gas lines inside the range.

- If the oven ignites, but not on the first attempt, cancel the bake mode and restart, confirming that oven ignites on the first attempt.
 - Once all air has been purged from the gas lines, the oven should ignite immediately on first attempt. If oven continues to require multiple attempts to ignite, contact a qualified service provider for investigation and repairs.
6. Allow Bake mode to continue until oven has preheated to 170°F. Confirm that display shows temperature increasing and that preheat signals when temperature is reached.
 7. Press **CLEAR/OFF** to stop the Bake mode.

To Check Broil Burner:

1. Keep the oven door closed. The oven burners will turn off when oven door is open.
2. Press **BROIL** on the oven control. The default broil setting is High Broil.
3. Press **START/ENTER**.
4. Listen for "clicking" from spark igniter and "whoosh" of ignition.
 - Spark igniter will only activate for a few seconds. If broil burner does not ignite immediately, the oven control will turn off the gas flow to the burner, wait 10-15 seconds, and attempt re-ignition. It will make a total of 3 attempts before generating an error. The entire process should take less than 1 minute.
 - If broil burner flames do not carry around entire burner, this may also be an indication that air is present in the gas lines.
 - Allowing burners to run for 1-2 minutes should purge the lines of any remaining air.
 - Observe broil flame quality through oven door window.
 - If anything does not operate correctly, or if broil flames appear abnormal, have the operation investigated by qualified service provider
5. Press **CLEAR/OFF** to stop the Broil mode.

GAS CONVERSION

WARNING



FIRE AND EXPLOSION HAZARD

- Use a new CSA International approved gas supply line and install a shut-off valve for new installations.
- Securely tighten all gas connections.
- If connected to LP, have a qualified person make sure gas pressure does not exceed the maximum pressure listed in the "Gas Supply Requirement" section.
- Examples of a qualified person include:
 - licensed heating personnel
 - authorized gas company personnel
 - authorized service personnel
- Failure to do so can result in death, explosion or fire.

WARNING



TIP OVER HAZARD

- A child or adult can tip the range and be killed.
- Install anti-tip bracket to floor or wall per installation instructions.
- Slide range back so rear range foot is engaged in the slot of the anti-tip bracket.
- Re-engage the anti-tip bracket if range is moved.
- Do not operate the range without anti-tip bracket installed and engaged.
- Failure to follow these instructions can result in death or serious burns to children and adults.


This range is factory-set for use with Natural gas (NG). The LP conversion kit is sold separately. To order LP conversion kit, see "Optional Parts" in the "Tools and Parts" section.

IMPORTANT: Gas conversions must be done by a qualified service technician in accordance with the manufacturer's instructions and all codes and requirements of the authority having jurisdiction. The qualified agency performing this work assumes the gas conversion responsibility.

CONVERT GAS PRESSURE REGULATOR


1. Turn manual shutoff valve to the closed position.
2. Unplug range or disconnect power.
3. Move the range out from the wall or installation space. Locate and remove the regulator access cover on the back of the range.

IMPORTANT: Do not remove the gas pressure regulator.

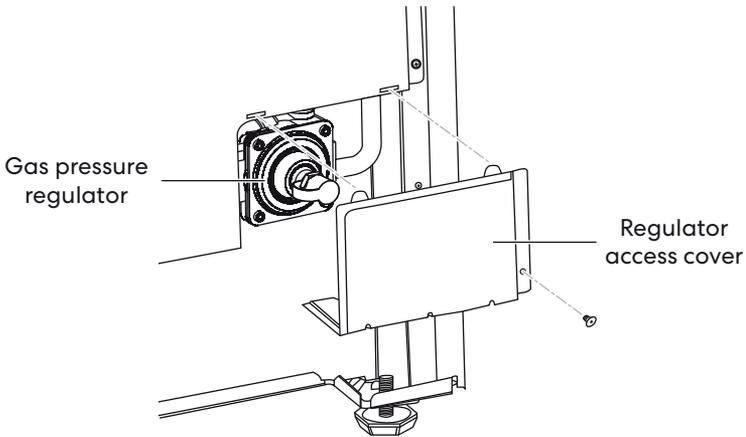


4. If present, remove the plastic dust cover on the regulator plug.
5. Unscrew the regulator plug with an adjustable wrench.

IMPORTANT: Do not remove the spring from the gas pressure regulator.

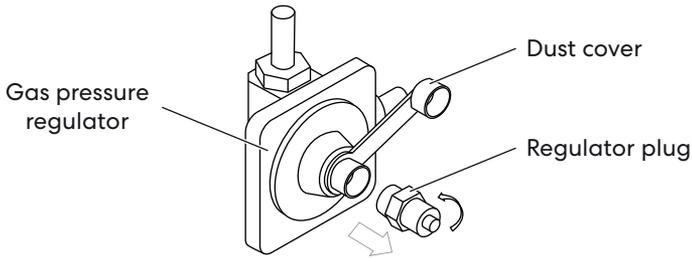


6. Orient the regulator plug for the fuel type being used.

- NG: hollow end of the plug facing towards the regulator and spring.
- LP: hollow end of the plug facing away from the regulator.

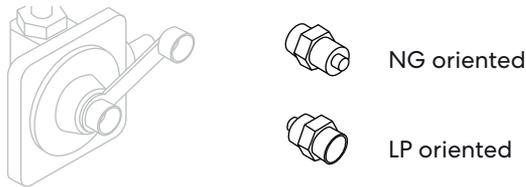

7. Screw and tighten the regulator plug back into the gas pressure regulator with an adjustable wrench, and replace the plastic dust cover if present.

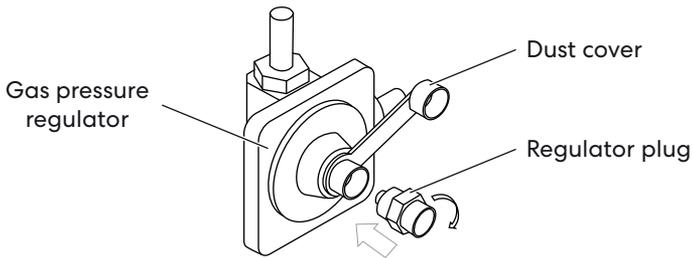

8. Replace the regulator access cover.

NOTE:

- If converting to propane from natural gas, please apply the "LP Conversion Warning Sticker" (provided on some models) on or near the regulator access cover. If converting back to natural gas from propane, please remove the sticker so others know the appliance is set to use natural gas.


CONVERT SURFACE BURNERS

IMPORTANT: Make sure to save the orifices that have just been replaced in the conversion.

NG/LP Orifice Chart for Surface and Oven Burners


COS-GRC305KTD

Burner	Placement	Orifice Type	Orifice Size (mm)	Burner Rating (BTU)
Double Ring	Front Left	LP	1.18	16,000
		NG	1.95	18,000
Rapid	Front Right	LP	1.02	12,000
		NG	1.73	15,000
Semi Rapid	Center	LP	0.86	8,500
		NG	1.36	9,500
Auxiliary	Rear Left	LP	0.67	5,500
		NG	0.99	5,000
Semi Rapid	Rear Right	LP	0.86	8,500
		NG	1.36	9,500
Broil	Oven Top	LP	1.02	12,500
		NG	1.78	16,000
Bake	Oven Bottom	LP	1.12	14,000
		NG	1.90	18,500

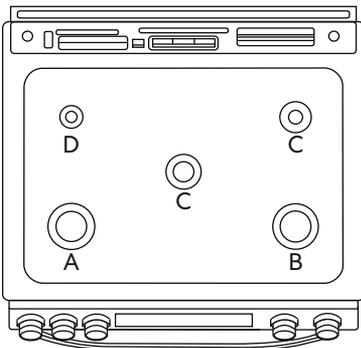


- A.** Double Ring (X-Large)
- B.** Rapid (Large)
- C.** Semi Rapid (Medium)
- D.** Auxiliary (Small)

1. If installed, remove the burner grates, burner caps, and the burner base.

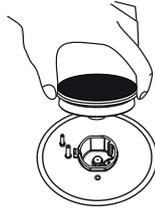


2. Remove the existing gas orifices with a 9/32" (7 mm) nut driver.

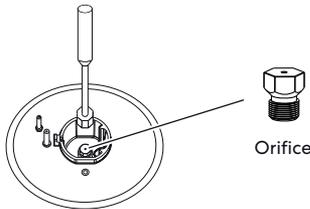


3. Replace the orifices with the correct fuel type orifices. Gas orifices are stamped with a size number. Refer to the orifice chart earlier for correct Natural gas and LP gas orifice sizes and ratings for proper placement.

IMPORTANT: Keep and store the orifices that have just been replaced in case of re-installation with another gas.

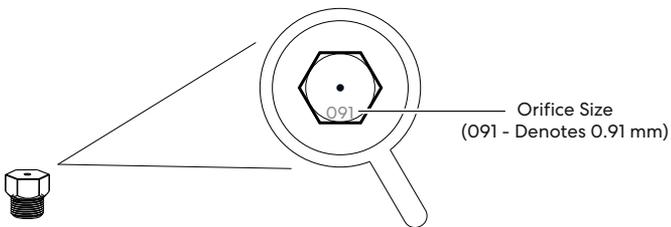

4. Replace the burner base, burner caps, and burner grates.


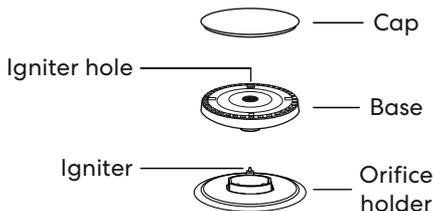


CONVERT OVEN BURNERS

This product cannot be converted to Natural gas or LP gas by adjusting or tightening the oven orifices. The orifices must be replaced.



Converting Broil Burner

1. Remove 1 screw from flame detector wire cover on back of oven cavity.
2. Remove the screws holding the burner assembly (burner baffle and burner) at the top.
3. Carefully pull burner assembly away from the oven top, and tip the assembly downwards to reveal the broil orifice at the back of the oven. Lean the assembly out of the way, being careful not to damage electrode or flame detector wires.
4. Using a 9/32" (7 mm) nut driver, replace the broil orifice with the correct fuel type broil orifice. Refer to the orifice chart earlier.
5. Reinstall the burner assembly and flame detector wire cover.

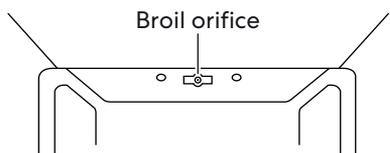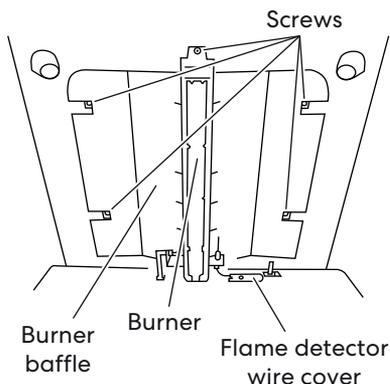

Converting Bake Burner

1. Remove bake burner cover by removing the 2 screws at the front of the cover hidden behind the door gasket.
2. Remove the screws holding the burner assembly (burner baffle and burner) at the bottom.
3. Carefully pull out burner assembly, and tip the assembly upwards to reveal the bake orifice at the back of the oven. Lean the assembly out of the way, being careful not to damage electrode or flame detector wires.
4. Using a 9/32" (7 mm) nut driver, replace the bake orifice with the correct fuel type bake orifice. Refer to the orifice chart earlier.
5. Reinstall the burner assembly and bake burner cover, being careful to not pinch or damage the door gasket.

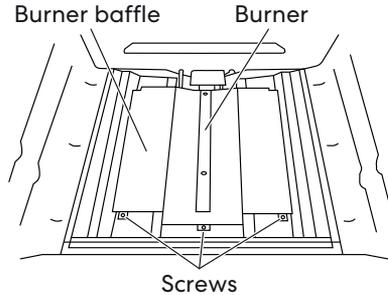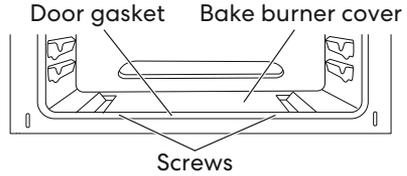

COMPLETE GAS CONVERSION

1. Open shut-off valve in the gas supply line.
 2. Plug in cooktop or reconnect power.
- Refer to "Gas Connection" in the "Installation Instructions" section for proper connection of the range to the gas supply.
 - Refer to the "Complete Installation" section to complete this procedure.
 - Refer to the "Adjust Flame Height" section for burner flame adjustments.

IMPORTANT: You may have to adjust the low setting for each cooktop burner.

NOTE:

- Once the conversion is complete and confirmed, fill out the "LP Conversion Stickers" (provided on some models) and include the service technician's name, organization, and date conversion was made.
- Apply the stickers next to the existing rating plate to alert others in the future that this appliance has been converted to propane. The plate is located inside the storage drawer on either the left or right side panel. Refer to the illustrations in the "Location Requirements" section.
- If converting back to natural gas from propane, please update or remove the stickers so others know the appliance is set to use natural gas.

HIGH ALTITUDE CONVERSION

WARNING



FIRE AND EXPLOSION HAZARD

- Use a new CSA International approved gas supply line and install a shut-off valve for new installations.
- Securely tighten all gas connections.
- If connected to LP, have a qualified person make sure gas pressure does not exceed the maximum pressure listed in the "Gas Supply Requirement" section.
- Examples of a qualified person include:
 - licensed heating personnel
 - authorized gas company personnel
 - authorized service personnel
- Failure to do so can result in death, explosion or fire.

WARNING



TIP OVER HAZARD

- A child or adult can tip the range and be killed.
- Install anti-tip bracket to floor or wall per installation instructions.
- Slide range back so rear range foot is engaged in the slot of the anti-tip bracket.
- Re-engage the anti-tip bracket if range is moved.
- Do not operate the range without anti-tip bracket installed and engaged.
- Failure to follow these instructions can result in death or serious burns to children and adults.

WARNING

CARBON MONOXIDE HAZARD

- Reduced air pressure and oxygen availability at high altitudes may affect proper burner combustion.
- Failure to properly convert the range for high altitude installations can result in increased risk carbon monoxide.
- The conversion must be performed by a qualified service technician in accordance with the manufacturer's instructions and all local codes and requirements. The agency performing this work assumes responsibility for the conversion.

Units must be converted for proper operation at elevations in excess of 6,000 ft (1,829 m). The regulator must be set according to the fuel type in use at the installation site. (See "Gas Conversion" section for information on fuel type settings.)

The high altitude conversion kit is sold separately. To order high altitude conversion kit, see "Optional Parts" in the "Tools and Parts" section.

High Altitude Orifice Chart

COS-GRC305KTD

Altitude	Burner	Placement	Orifice Type	Orifice Size (mm)	Burner Rating (BTU)
0 - 6,000 ft (0 - 1,800 m)	Broil	Oven Top	NG	1.78 (default)	16,000
6,000 - 8,000 ft (1,828 - 2,438 m)	Broil	Oven Top	NG	1.70	12,187 @7,800 ft
Over 8,000ft (Over 2,438 m)	Broil	Oven Top	NG	1.40	8,089 @10,100 ft

High altitude conversion requires the burner orifice(s) in "High Altitude Orifice Chart" to be changed according to the fuel type and installation altitude.

See "Gas Conversion" section for detailed instructions on changing orifice for different burners.

IMPORTANT

Do Not Return This Product To The Store

If you have a problem with this product, please contact COSMO Customer Support at

+1 (888) 784-3108

DATED PROOF OF PURCHASE, MODEL #, AND SERIAL # REQUIRED FOR WARRANTY SERVICE.

IMPORTANT

Ne pas Réexpédier ce Produit au Magasin

Pour tout problème concernant ce produit, veuillez contacter le service des consommateurs Cosmo Customer Support au

+1 (888) 784-3108

UNE PREUVE D'ACHAT DATEE EST REQUISE POUR BENEFICIER DE LA GARANTIE.

IMPORTANTE

No regrese este producto a la tienda

Si tiene algún problema con este producto, por favor contacte el ayuda al cliente COSMO al

+1 (888) 784-3108

(Válido solo en E.U.A.)

NECESITA UNA PRUEBA DE DE COMPRA FECHADA, NÚMERO DE MODELO Y DE SERIE PARA EL SERVICIO DE LA GARANTÍA.



Correct disposal of this product:

This marking indicates that this appliance should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

MEMO

A series of horizontal dashed lines for writing.



APPLIANCES

Cosmo is constantly making efforts to improve the quality and performance of our products, so we may make changes to our appliances without updating this manual.

Electronic version of this manual is available at:
www.cosmoappliances.com