

Robin Ann Meyer

Lampshade 12" and 16" styles

Shade —


Finial —

Assembly & Installation Instructions

1. Unscrew the finial and remove your old lamp shade from the harp.
2. Place your new shade on the harp, and secure with the finial
4. Plug the cord in, turn the switch on and ENJOY!

Care Instructions

Dust with a clean dry cloth
Avoid harsh chemicals if cleaning to protect the finish

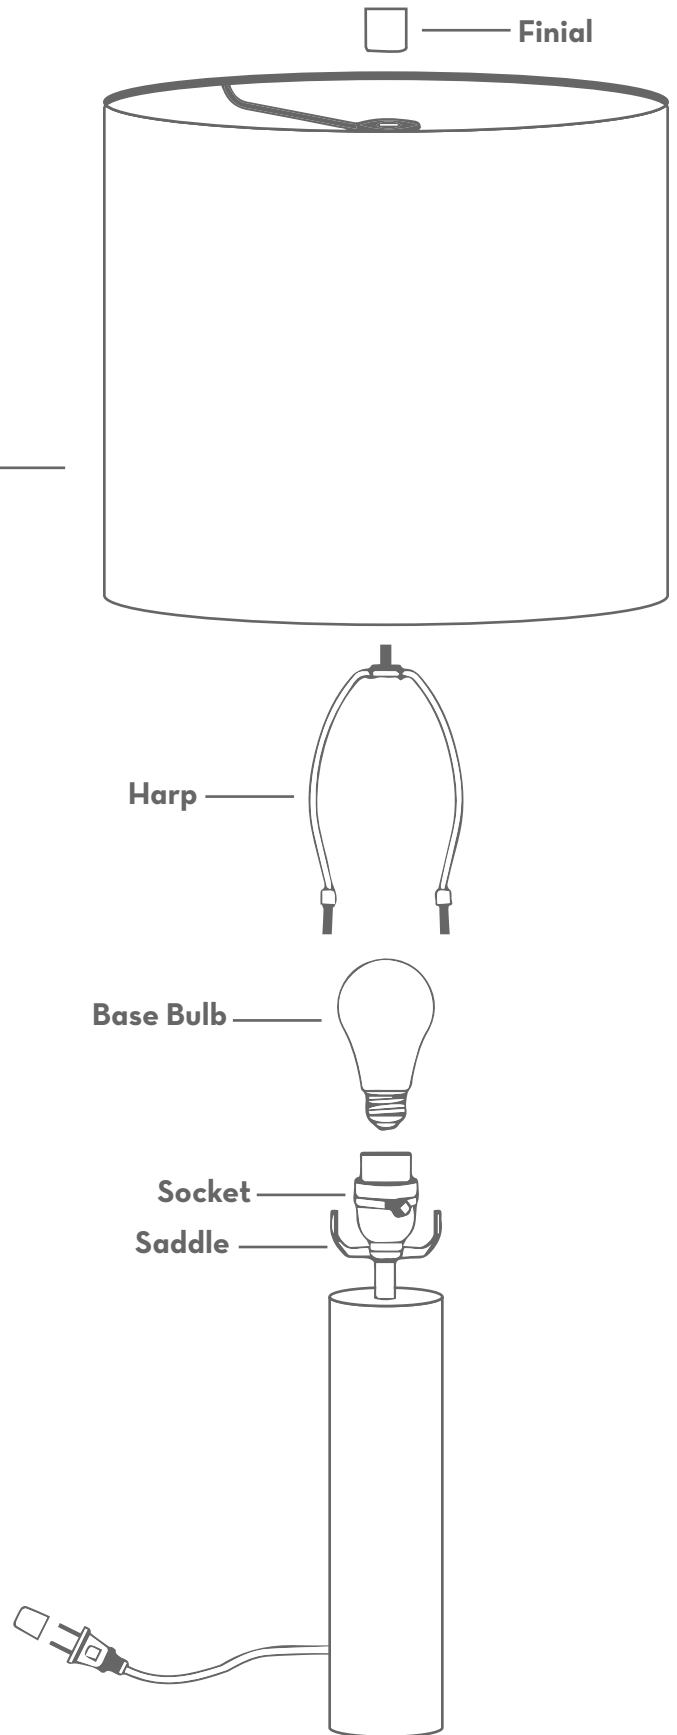

IMPORTANT: Always disconnect the power before installing or replacing bulb and before cleaning or other maintenance