



58" Dancing Mrs. Claus with Apron



Who's helping Santa and dancing along the way? Mrs. Claus, that's who! Our dancing Mrs. Claus from Fraser Hill Farm will dance right into your heart as she helps you greet your family, guests or customers. Standing 58 inches tall and holding a small sack filled with goodies, she will be a delightful addition to your holiday decor in any home, office or store.

When motion is detected, she will move her arms and sway her body to the music. Dressed in a festive white apron over a red velvet dress with a coordinating mob-cap, her friendly face and warm smile will fill you and yours with holiday cheer!

- 58" motion activated Mrs. Claus
- Dances when motion is detected
- Warm smile with silky straight hair and spectacles
- Festively dressed in a white apron
- "Ding Dong Merrily on High" plays while she moves
- 6-ft. power cord uses standard 115V electrical outlet

Model Number	UPC	Dimensions	Description
FAMC058D-27RED	192487081082	21.3" x 15" x 58"	Dancing Mrs. Claus with Apron