

# Chair Assembly Instructions

Your chair comes packaged in one box.

**DO NOT** use any sharp objects to open plastic wrapped components as damage to product or components may result.

Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching the finish.



## Parts List

**A** 1 x Seat



**B** 1 x Back



**C** 4 x Legs



## Hardware List

**D** 4 x Bolts



M8 x 70mm

**E** 4 x Washers



M8 x 22 x 1.5mm

**F** 4 x Lock Washers



M8 x 12 x 2mm

**G** 1 x Hex Key



M5x 77x 27mm

**H** 4 x Large Washers




φ10x φ50 x 1.5mm




Hardware bag can be found under the seat.

## Assembly


### Step 1

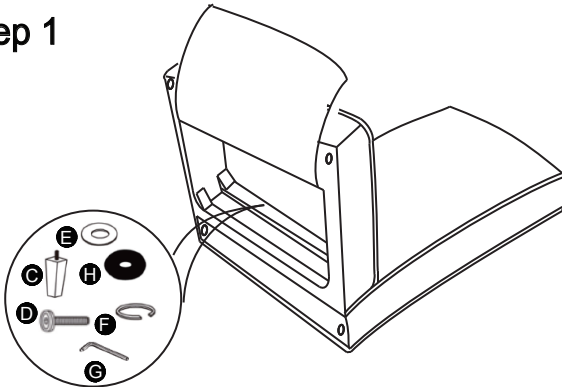

### Step 2

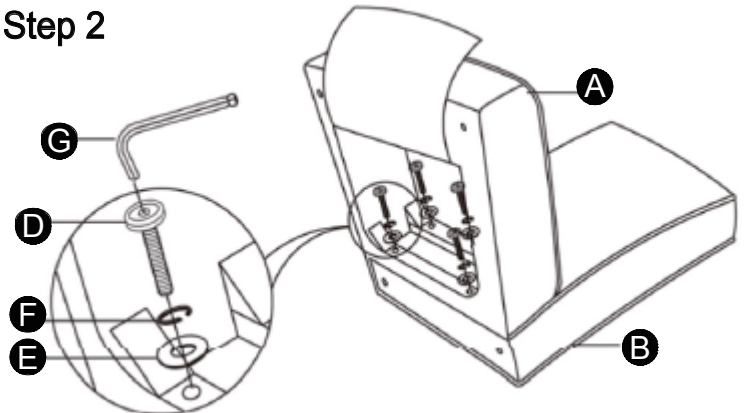

### Step 3

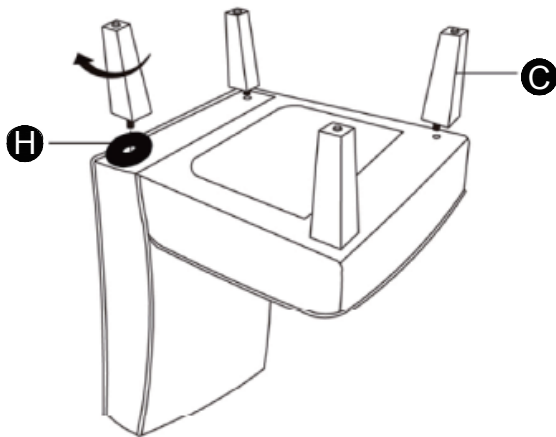

### Step 4



Your chair style may differ from images. Care for your furniture by periodically tightening all bolts using the included hex key. Fabric will fade or discolor in direct sunlight. Minimize exposure to direct sunlight to extend the life of your furniture.

**One Year Warranty:** The furniture is warranted against defects in workmanship and materials. Items covered would be seam slippage, frame structural integrity, fit and finish of parts. Items not covered would be product abused by the user, normal wear and tear, stains or discoloration due to use, damage in any transportation. Softening of foam is considered normal wear and tear and is not covered by warranty. Warranty is for PARTS ONLY and does not include transportation and labor costs associated with any warranty claim.

**CAUTION:** Tighten all components securely before use. Failure to do so may result in personal injury.

Customer Support: 866-238-0531  
Mon-Fri 8:00am - 4:30pm CST  
customerservice@furniturequestions.com