


ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0328

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.

Hardware Package (included):

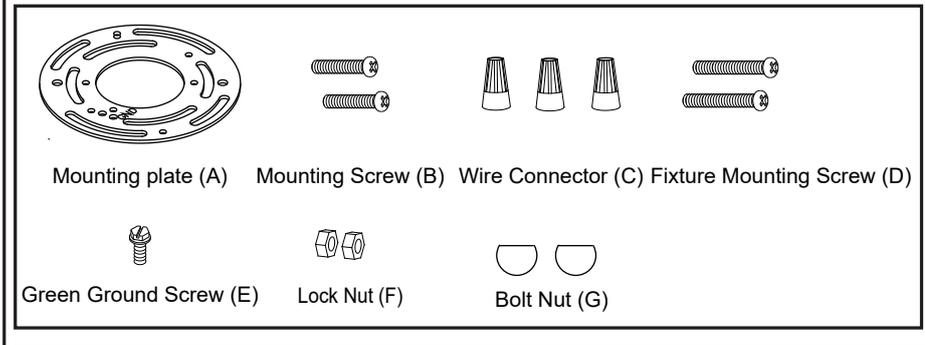

Installation Steps

Turn off the power at fuse or circuit box

1. Thread two fixture mounting screws (D) through the mounting plate (A), then secure them with two lock nuts (F) (two on each side of the mounting plate (A).) Adjust the length of the fixture mounting screws (D) if necessary.
Note: Make sure the fixture mounting screw are lined up horizontally to make the fixture level.

2. Attach the mounting plate (A) to the outlet box by using two mounting screws (B).


3. Rod connections:
 - a. Thread the fixture wire from the fixture through the lower rod, then secure the lower rod onto the fixture using the threaded pipe.
 - b. Thread the fixture wire through the middle rod, then secure the middle rod onto the lower rod using the threaded pipe.
 - c. Thread the fixture wire through the upper rod, then secure the upper rod onto the middle rod using the threaded pipe.

The height can be adjustable to 28-1/2" ~ 85-1/2", by using the rods.

4. Thread the fixture wire through the canopy, then secure the rod assembly to the set threaded pipe of the canopy.

5. Pull out the source wires from the outlet box. Make wire connections using wire connectors (C) as follows:
 - Connect the hot wire (black insulation) from the fixture to the black wire from the power source.
 - Connect the neutral wire (white insulation) from the fixture to the white wire from the power source.
 - Attach the fixture ground wire (bare wire) to the mounting plate (A) with the green ground screw (E), then connect it to the house ground wire with the wire connector (C).

Carefully put the wires back into the outlet box.

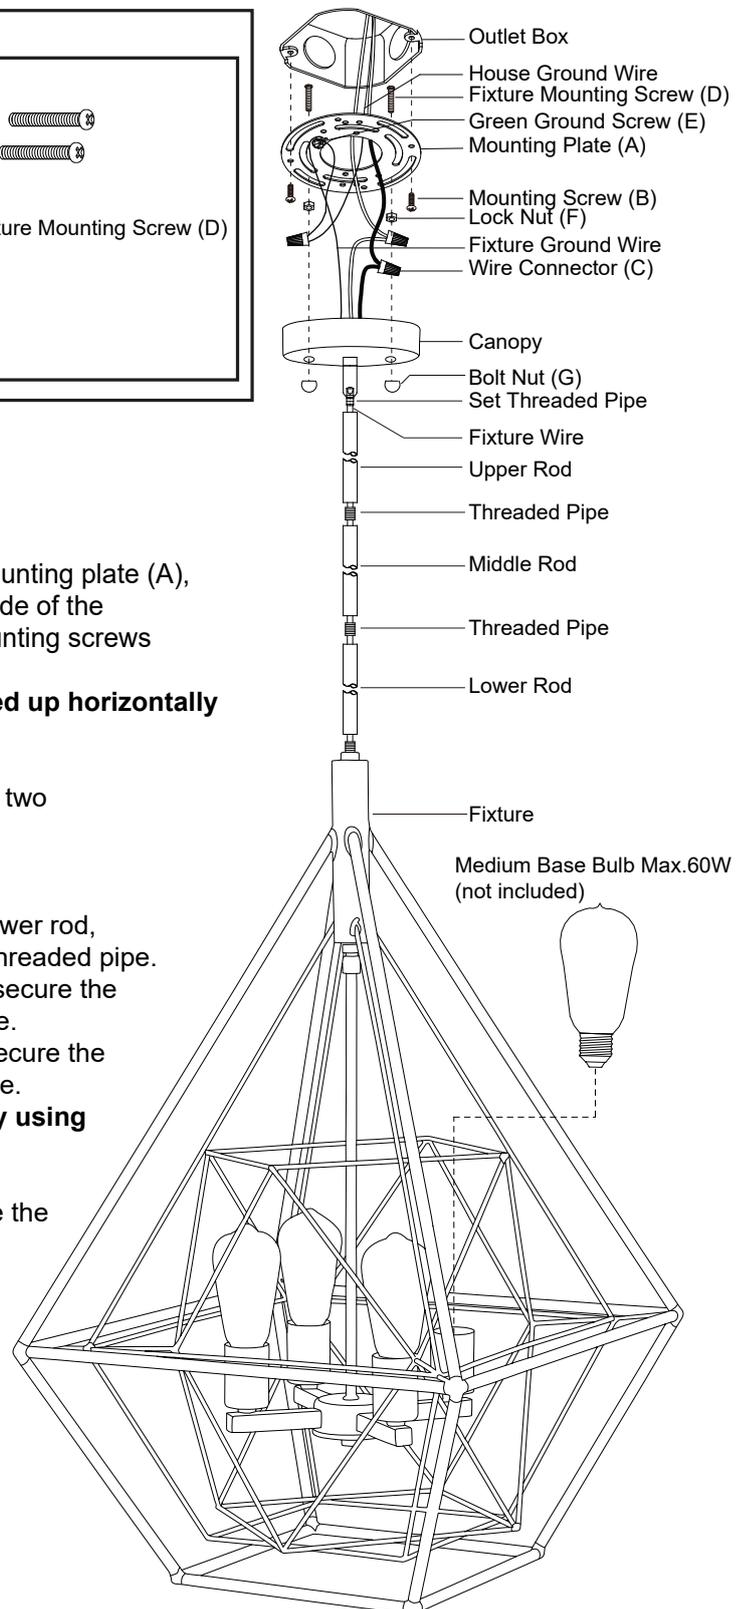


 VAXCEL

191106



6. Attach the canopy to the mounting plate (A) by inserting the fixture mounting screws (D), secure it with two bolt nuts (G).
7. Install bulbs (not included).
See relamping label at socket area or packaging for maximum wattage allowed.
8. Angled mounting recommended for a vaulted or angled ceiling. (See Fig. 1)

Turn on the power at fuse or circuit box

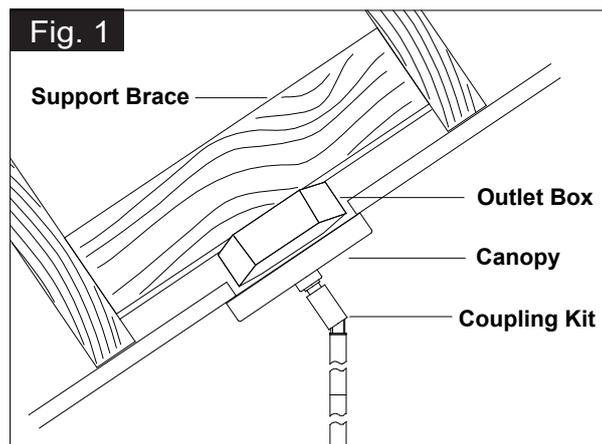

The following parts are available for re-order if damaged or missing.

Spare Parts List:

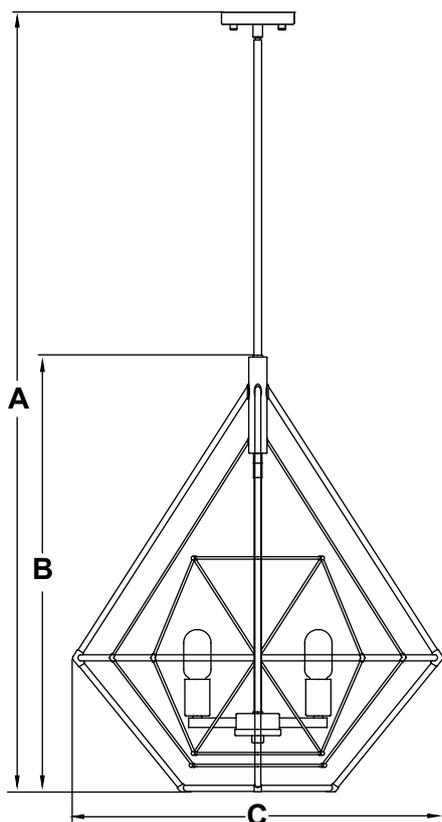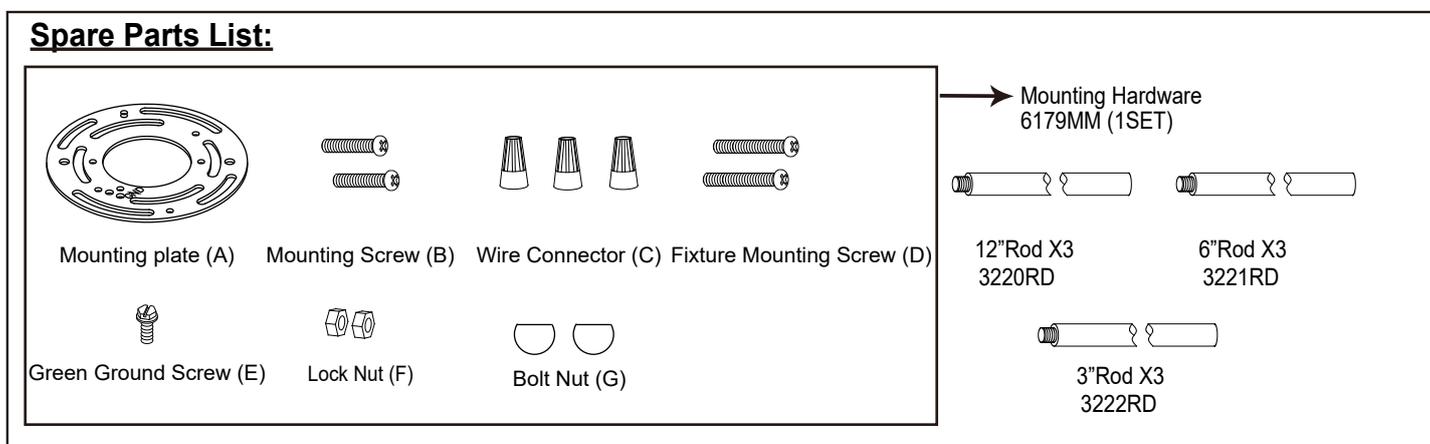

A: 85-1/2"
B: 28-1/2"
C: 24