

 

 
 
 
ASSEMBLY INSTRUCTIONS

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all part is complete, before you assemble. Place all wooden furniture part on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.


CAUTIONS :

1. Do not FULLY-TIGHTEN the nut or nut bolt until all nut or bolt is ready assembled.
2. Do not OVER-TIGHTEN the nut or nut bolt to avoid causing damages to the thread.
3. Keep all hardware part out of reach of children.


PART LIST		
ITEM	DESCRIPTION	QTY
A	CUSHION	1 PC
B	LEGS (R & L)	2 PCS
C	BACK REST	1 PC
D	APRON FRONT (SHORT)	1 PC
E	APRON FRONT (LONG)	1 PC
F	APRON BACK (SHORT)	1 PC
G	APRON BACK (LONG)	1 PC

HARDWARE LIST		
ITEM	DESCRIPTION	QTY
1	JCBC SCREW M6 x 25MM 	4 PCS
2	SPRING WASHER 1/4" 	4 PCS
3	PAN HEAD WOOD SCREW M5 X 32MM 	12 PCS
4	WOOD BUTTON (DIA:14.5) 	4 PCS
5	ALLEN KEY M4 (BALL SHAPE) 	1 PC


STEP 1 :

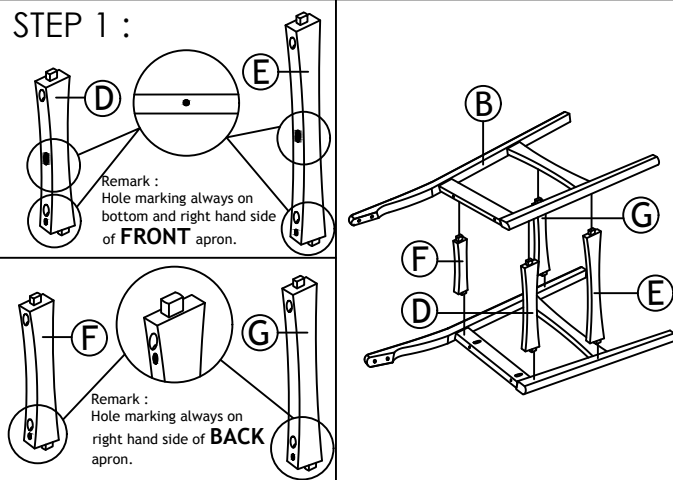

STEP 2 :

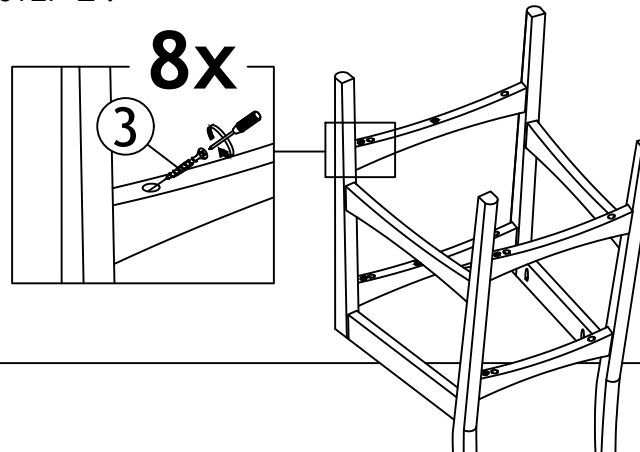


STEP 5 :

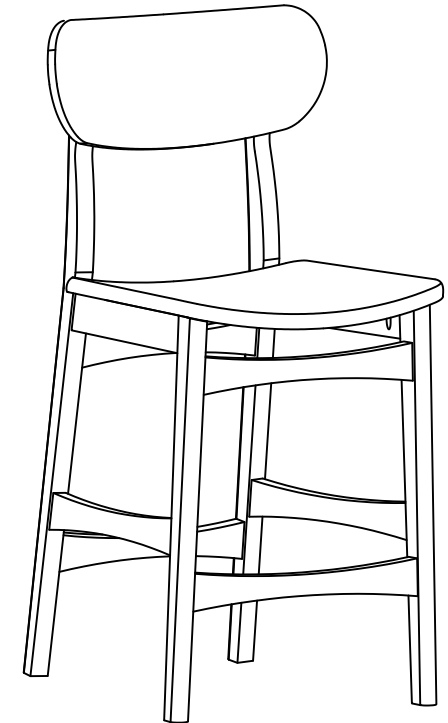

COMPLETED CHAIR ASSEMBLY

STEP 3:

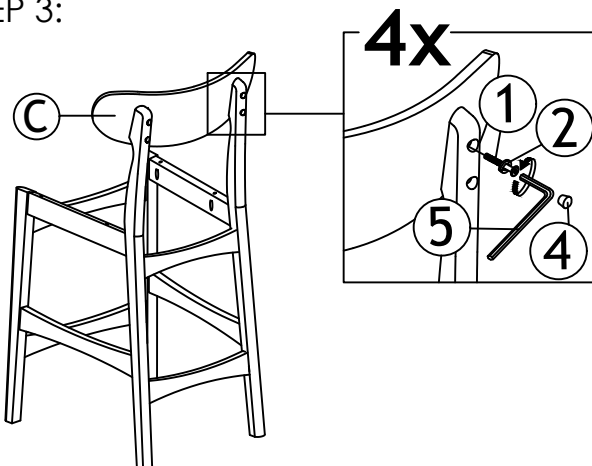

STEP 4 :

