 








Assembly Instruction--Accent Chair

PARTS #	PARTS NAME	DRAWING	QTY
P1	FRONT LEGS		2
P2	BACK LEGS		2
P3	PLASTIC WASHER		4
P4	BACK CUSHION		1
P5	CHAIR		1


1. Open the cushion and take out the legs under the seat.

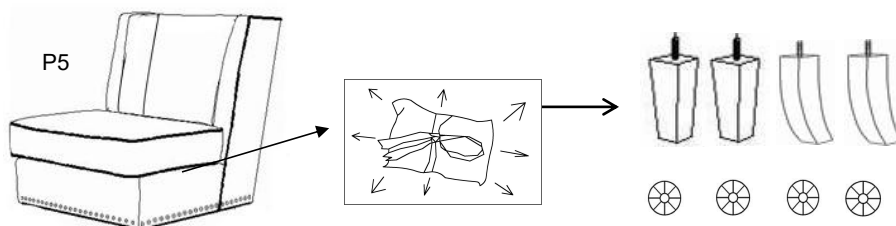

2. Place chair (P5) onto a protective cloth. Place washers (P3) on legs (P1, P2) and attach to Chair (P5) bottom side by screwing clockwise into corresponding holes.

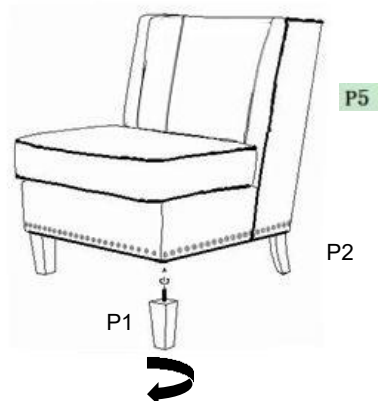

3. Place chair upright on a level surface. Put the back cushion (P4) on it. Assembly is complete.

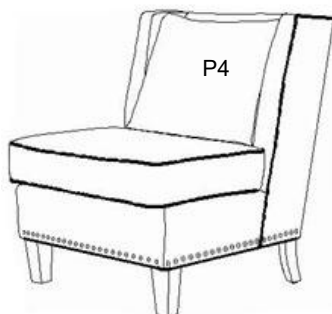

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.