



ITEM# RV-WB6963


IMPORTANT SAFETY INSTRUCTIONS

- To avoid injury or damage, mount only on a surface that is sturdy.
- To avoid electric shock, make sure electricity is turned off at the main circuit breaker panel. If you are replacing an existing fixture, turn off the following in order: fixture, wall switch, and main fuse or breaker box. Note: Some types of fuses must be unscrewed to shut the power off.

! For any replacement parts or installation issues, please email service@revel-home.com

*** Connect the ground wire (bare copper or green) from your fixture to the ground wire (copper or green) or ground screw in the electrical outlet box.**



Unpack the Fixture: Check the contents of the box. Box should contain all items below.

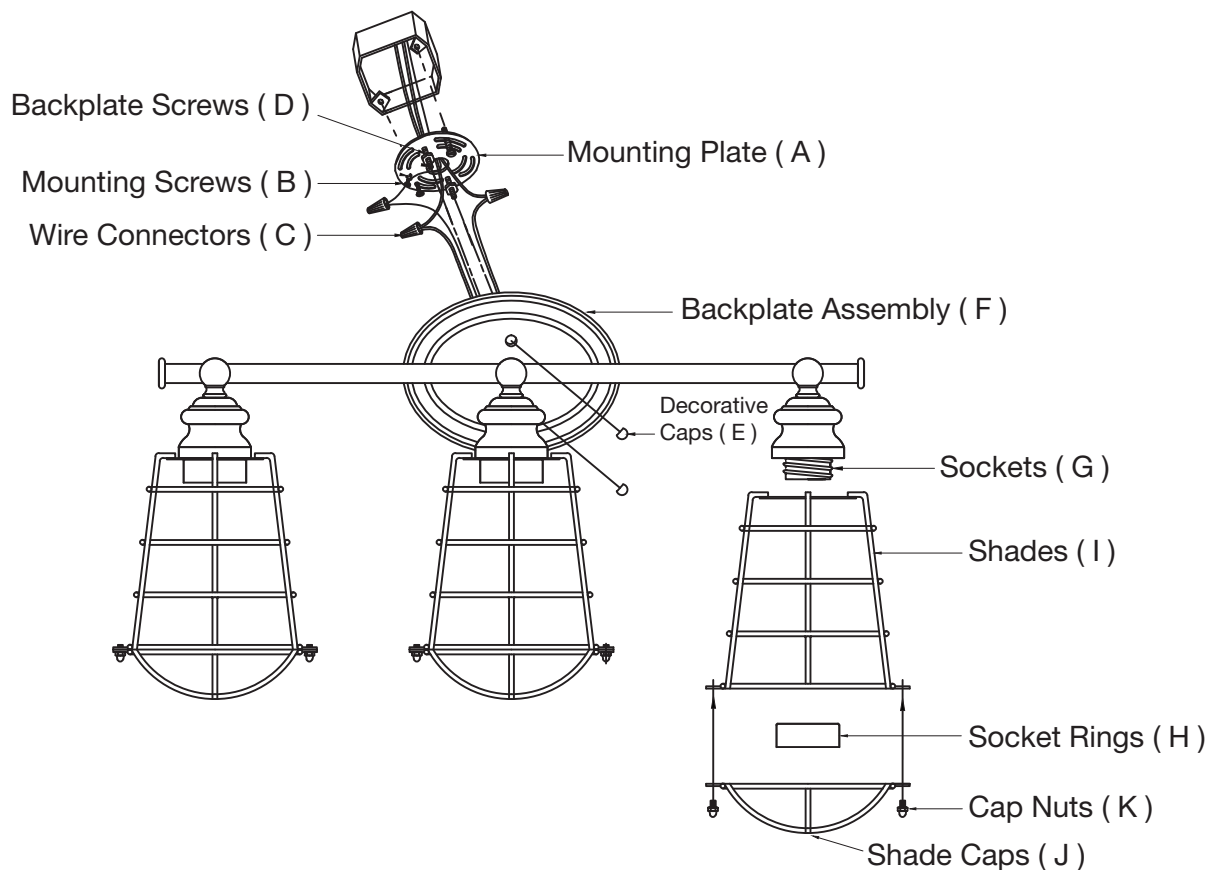

ASSEMBLY:

- 1 Secure Mounting Plate (A) to junction box using Mounting Screws (B) provided. Mounting Plate (A) should be positioned with Backplate Screws (D) pointing away from junction box.
- 2 Place Backplate Assembly (F) against the wall by inserting Backplate Screws (D) through the appropriate holes located on Backplate Assembly (F). Adjust Backplate Screws (D) and hex nuts until 1/4" of the threaded portion is visible. Remove Backplate Assembly (F) once Backplate Screws (D) have been adjusted.

- 3 Using the wire diagrams below, connect the appropriate wires with Wire Connectors (C) to the corresponding wires in the junction box.

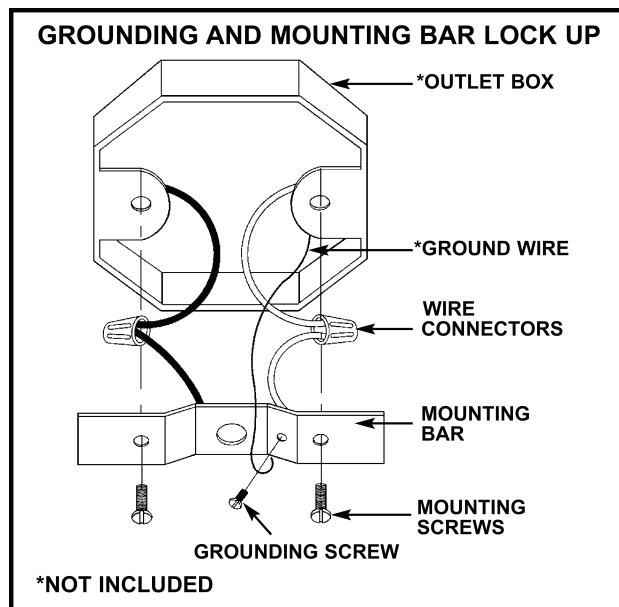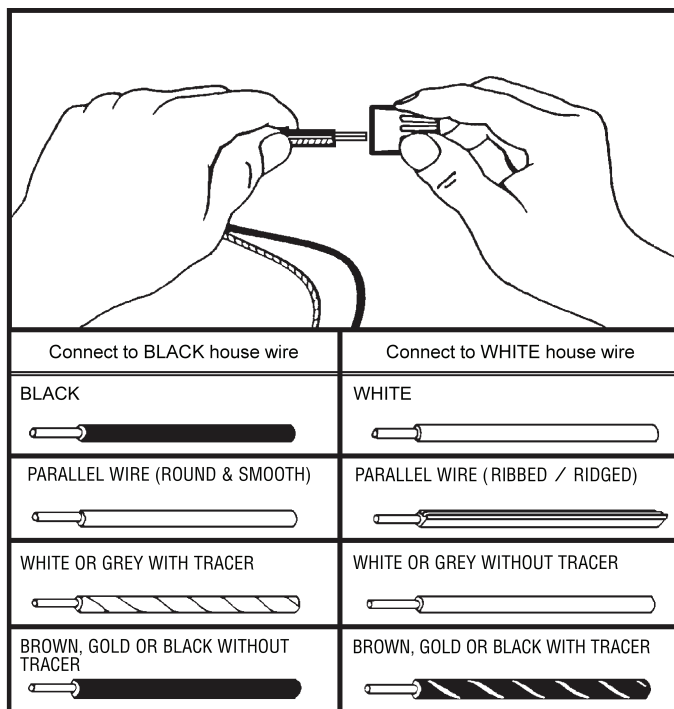

- 4 Secure Backplate Assembly (F) to Mounting Plate (A) using Decorative Caps (E).
- 5 Attach Shades (I) to Sockets (G) using Socket Rings (H).
Note: Socket rings should be on the sockets. Remove socket rings prior to shade installation.
- 6 Install light bulbs (Not Included).
- 7 Attach Shade Caps (J) to Shades (I) using Cap Nuts (K).

Enjoy your new fixture!