
CONVENIENCE CONCEPTS LARGE TV/MONITOR RISER 121043LO 121043CH 121043 121043W

ASSEMBLY INSTRUCTIONS

We have designed our furniture with you, the customer in mind. Our clear, easy to follow, step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.

STOP

Please do not return to the store Broken or missing parts? Need help with assembly? If you have any questions just call 1-800-468-6447 or email us at parts@convenience-concepts.com

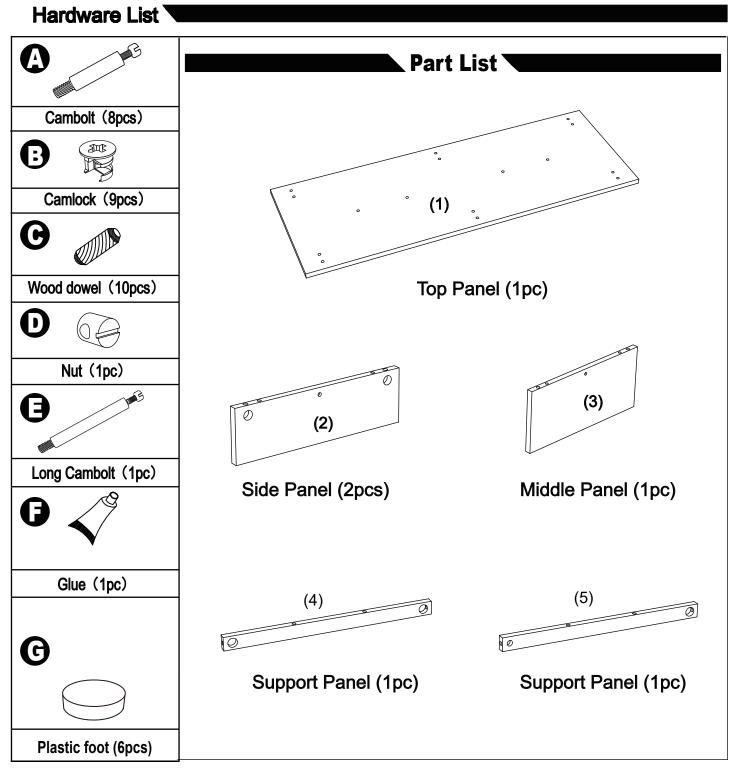

Assembling the unit with camlocks and wood dowels.

| Insert camlock, camlock must face bolt hole | Gently screw cam dowel into the threaded anchor | Lightly glue one end of wood dowel and tap into hole. | Lightly glue dowel and connect to second panel by inserting dowels into holes | Gently screw the cam clockwise into locked position. Do not overtighten. |
|---|---|---|--|---|

