 


INSTRUCTIONS FOR MODELS

BIDET REMOTE

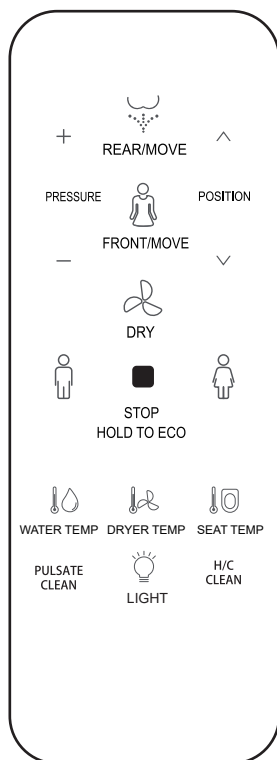

NEED HELP?

For additional assistance or service please contact:

SPEAKMAN®

 
800-537-2107

customerservice@speakman.com

www.speakman.com

92-BIDET-REMOTE-01

TOOLS AND SUPPLIES

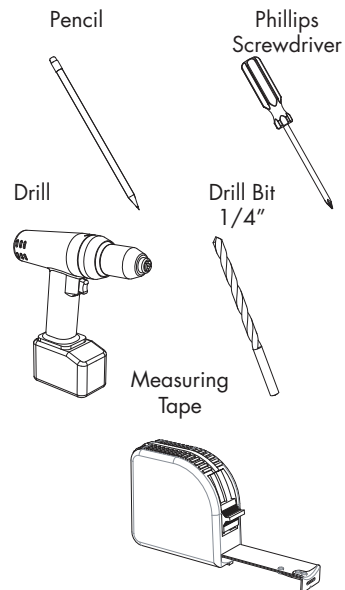

IMPORTANT



SAFETY TIPS

Cover your drain to prevent loss of parts. Be sure to wear eye protection while cutting pipe.

MAINTENANCE

Your new Speakman Product is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. The use of harsh chemicals and abrasives on any of the Speakman custom finish products may damage the finish and void the product warranty. Please be sure to only use approved cleaners. Please contact Speakman for any clarification of acceptable cleaners.

WARRANTY

1 Year Limited Warranty

Warranty information can be found at:
www.speakman.com

 
INSTALLING THE WALL BRACKET WITH SCREWS

IMPORTANT! Do NOT install unit where it may come in direct contact with water.

1. Place the Remote Control Hanger upright on the Per-determined area of the wall and mark the location of the two mounting holes on the wall with a pencil.


• Drill a hole in the marked position on the wall with a 1/4" Drill Bit, with a depth of 1-3/8".

NOTE: Location of Wall Mount Bracket should be accessible while seated on the Bidet.

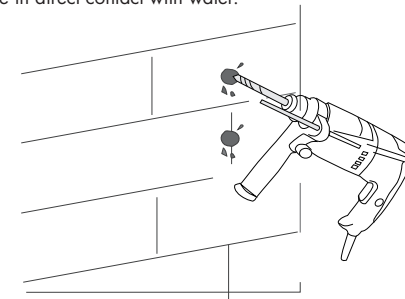


2. Push the Anchors into the drilled holes and ensure they are fully inserted and flush to the wall surface.


• Position the Wall Bracket over the Anchors and secure into position with the included Screws. Cover the screw heads with the included Caps.

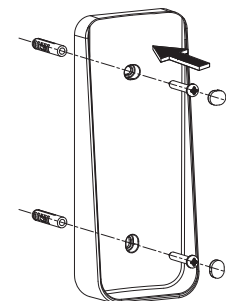

3. Install 3 AAA batteries into the Remote Control and replace cover.

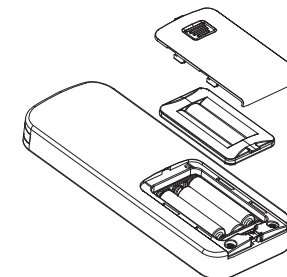

4. Place the Remote Control into the Wall Bracket.

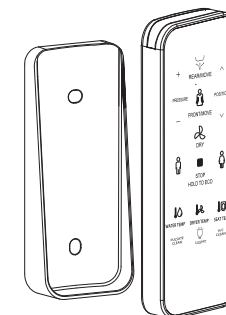


INSTALLING THE WALL BRACKET WITH ADHESIVE


IMPORTANT! Ensure mounting location is smooth and capable of accepting adhesive mounting. Do NOT install unit where it may come in direct contact with water.

1. Properly clean the determined mounting area.


NOTE: Location of wall mount bracket should be accessible while seated on the Bidet.

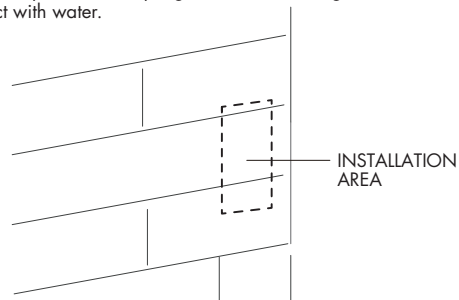


2. Remove the paper backing from the Adhesive Tape. Align Wall Bracket to the desired mounting position, and firmly press into position. Cover the Mounting Holes with the included Caps.

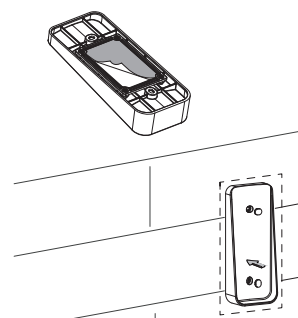


3. Install 3 AAA batteries into the Remote Control and replace cover.

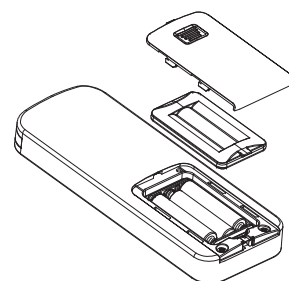

4. Place the Remote Control into the Wall Bracket.

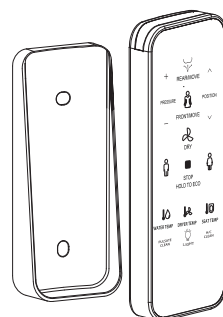

REMOTE CONTROL ICON FUNCTIONS

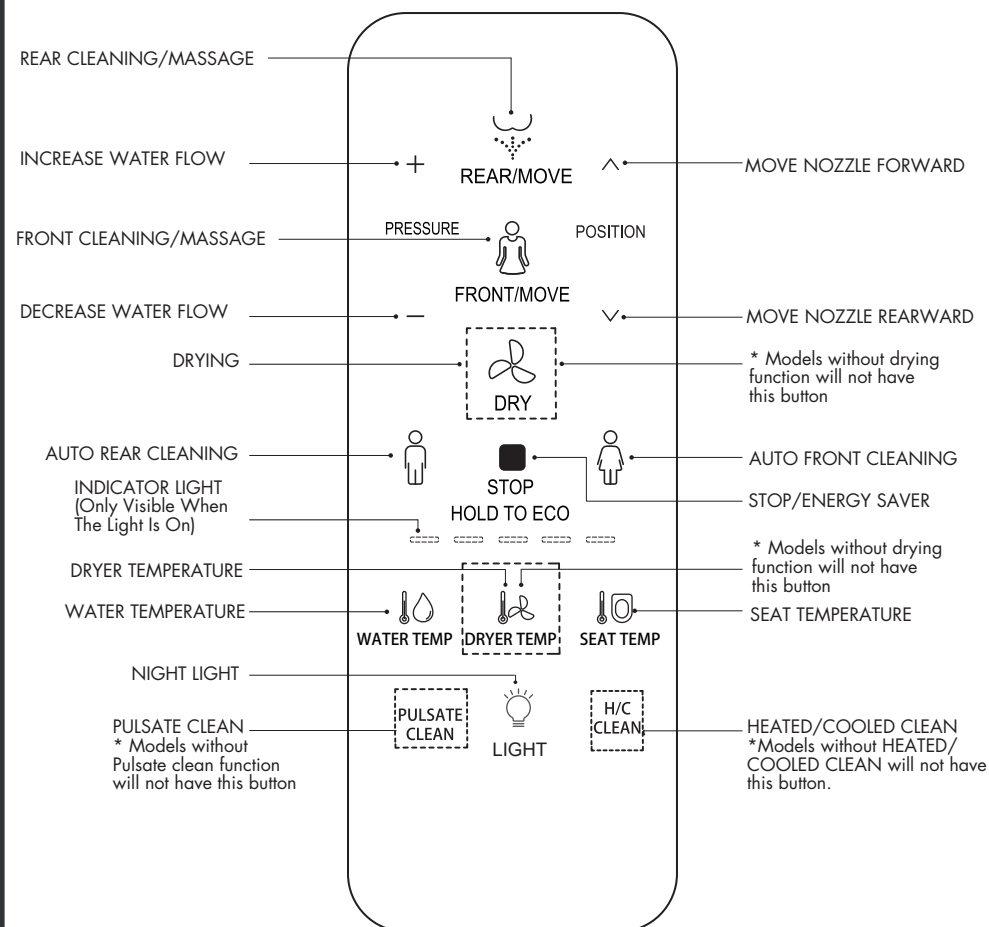

USAGE INSTRUCTIONS

REAR CLEANING

- Press "REAR/MOVE" button. Remote will illuminate to show you the water temperature and start the rear cleaning process.
- Pressing the "REAR/MOVE" button a second time will engage the MASSAGE feature. This will move the cleaning nozzle forwards and backwards while cleaning.
- The cleaning cycle will stop automatically when complete, or can be stopped at any time by pressing the "STOP" button.


FRONT CLEANING

- Press "FRONT/MOVE" button. Remote will illuminate to show you the water temperature and start the front cleaning process.
- Pressing the "FRONT/MOVE" button a second time will engage the MASSAGE feature. This will move the cleaning nozzle forwards and backwards while cleaning.
- The cleaning cycle will stop automatically when complete, or can be stopped at any time by pressing the "STOP" button.

NOTE: During front/rear cleaning, long press "Rear cleaning/massage" or "Front cleaning/massage" button to turn ON/OFF pulse cleaning mode. (This function only applies to product with pulse cleaning mode.)

DRYING OPERATION (Only for toilets with drying function.)

- Press "Dry" button. The Remote will illuminate to show the drying air temperature and start the drying process.
- The drying cycle will stop automatically when complete, or can be stopped at any time by leaving the seated position.

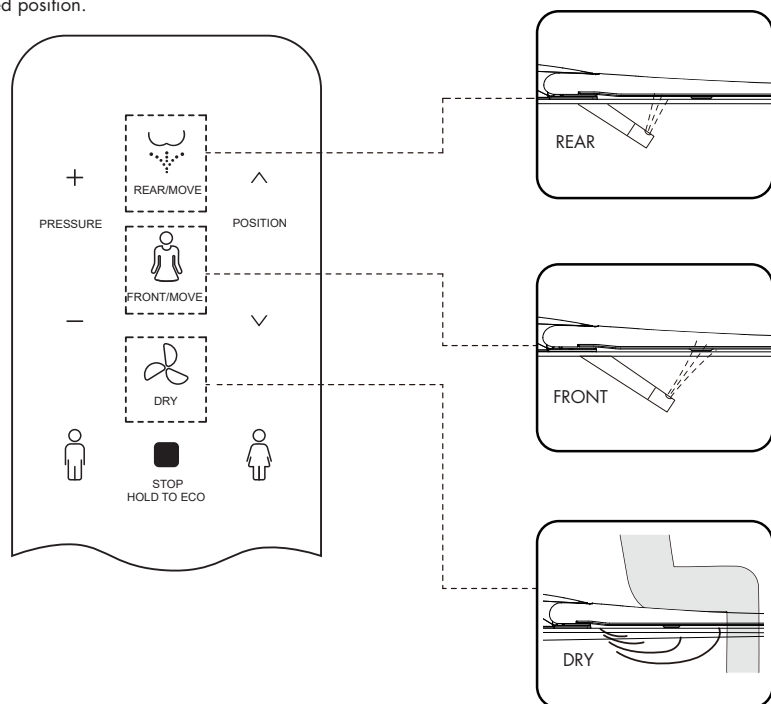


USAGE INSTRUCTIONS

WATER FLOW ADJUSTMENT

- During the Rear or Front Cleaning process, pressing the "+" or "-" buttons will increase or decrease the water flow and the remote will illuminate to show you the current setting.

SPRAY NOZZLE POSITION ADJUSTMENT

- During the Rear or Front Cleaning process, pressing the "^" or "v" buttons will adjust the spray nozzle forward/backwards and the remote will illuminate to show you the current position. There are 5 levels of position adjustment.

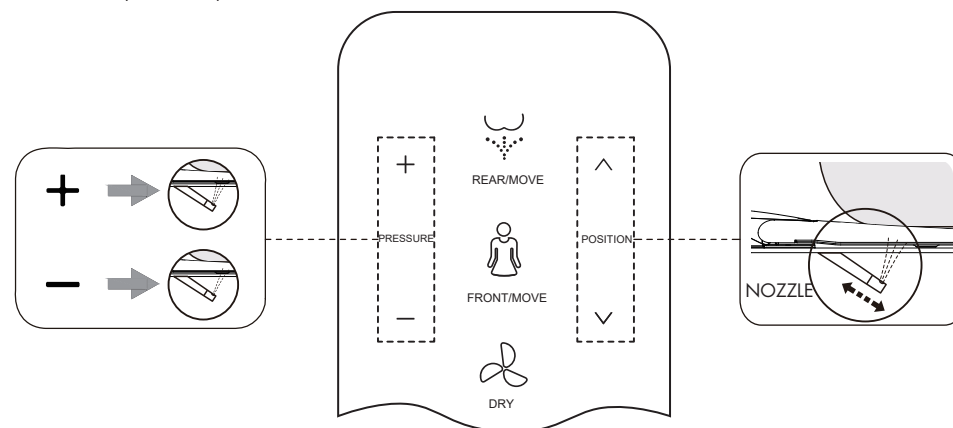

PULSATE CLEAN (This function only applies to products with the Pulsate clean function.)

- During the Rear or Front Cleaning process, pressing the "PULSATE CLEAN" button will alternate the water pressure between strong/weak. This will continue until the end of the cleaning process, or can be stopped by pressing the "PULSATE CLEAN" button a second time.

HEAT & COLD CLEAN (This function only applies to product with Heat & Cold clean function.)

- During the Rear or Front Cleaning process, pressing the "H/C CLEAN" button will alternate the water temperature between hot/cold. This will continue until the end of the cleaning process, or can be stopped by pressing the "H/C CLEAN" button a second time.

USAGE INSTRUCTIONS

ENERGY SAVER


- Holding the "STOP" button for more than 3 seconds will place the unit into Energy Saving Mode. The standard indicator light will turn off and the Energy Saving Mode indicator light will illuminate. Holding the "STOP" button again for more than 3 seconds will exit Energy Saving Mode.
- Under energy saving mode, seat temperature is automatically adjusted to a low level to achieve energy saving. **(NOTE:** If the seat temperature before energy saving is neutral, keep the neutral after energy saving)

IMPORTANT! Energy saving mode will be suspended and switch to standard mode if someone uses the seat in the middle of energy saving. The seat will begin to heat immediately and the Energy Saving Mode will automatically be engaged when the user leaves the seated position.

AUTO FUNCTION (Only for the units with the Auto Wash Function.)

- If your model includes the Auto Cleaning Function, a quick press of the "♂" or "♀" button will begin the fully automatic cleaning process.
- The default settings for the Auto Cleaning Function place the water flow, spray nozzle position, water temperature, drying air temperature, and seat temperature in the middle setting for each.
- You have the ability to customize and save your own Auto settings. Make your adjustments to the water flow, nozzle position, water temperature, and air temperature settings. Holding the "♂" or "♀" button for 3 seconds will save your customized settings. During the next use, pressing the "♂" or "♀" will engage your custom settings automatically.

NOTE: Certain models don't have drying function.

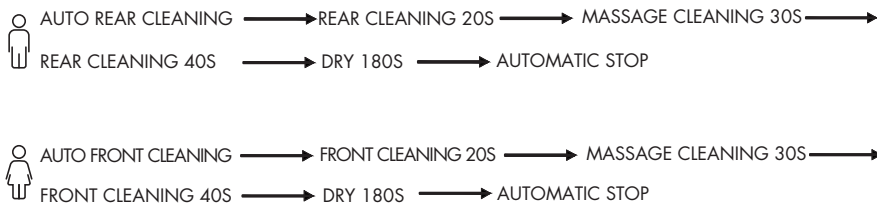

NOTE: The timing shown is the **Maximum Cycle Time** before the unit will switch to the next function or turn OFF if it is on the last function in that process. User can press the **Stop Button** or **Press the Knob** to stop the cleaning function early.

TEMPERATURE ADJUSTMENT

WATER TEMPERATURE ADJUSTMENT

- Short press the "WATER TEMP" button to adjust the water temperature. The indicator will show the water temperature level if it's on. When the indicator is off, the water heating setting is 0. Short press this button to adjust water temperature level from 0 to 5.


Note: The water temperature is approximately 50° Fahrenheit at setting "0". If the water temperature falls below 50° Fahrenheit the heater will engage to bring the temperature back in range.

DRYER TEMPERATURE ADJUSTMENT (Only for toilets with drying function.)

- Short press the "DRYER TEMP" button to adjust the dryer temperature. The indicator will show the dryer temperature level if it's on. When the indicator is off, the level is 0. Short press this button to adjust dryer temperature level from 0 to 5.


SEAT TEMPERATURE ADJUSTMENT

- Short press the "SEAT TEMP" button to adjust the seat temperature. The indicator will show the seat temperature level if it's on. When the indicator is off, the seat level is 0. Short press this button to adjust seat temperature level from 0 to 5.

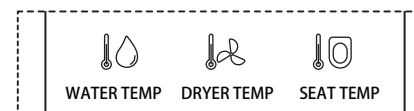

NIGHT LIGHT (Only for toilets with night light function.)

- Short press "Night light" button to turn on/turn off night light, long press "Night light" button to enter into intelligent mode (Night light will be on or off by detecting the lightness of surroundings). If the product is on intelligent mode, short press "Night light" button to exit intelligent mode.

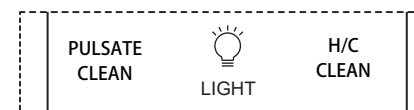

OTHER OPERATIONS

USER CODE

- The User Code needs to be set to avoid disturbance from remote controls when more than one smart toilets are used in the house. Turn on the toilet for setting while turning off others. Press User Code combination buttons (Press "STOP" button first and then press "REAR" button) to enter User Code Setting Mode, the indicator lights will be on and keep flashing.
 - (RF remote control) The Remote control will generate matching User Code automatically. Press User Code combination buttons again to exit setting mode and setting is completed. The system will retain the User Code even if there is loss of power to the unit or the remote control.
 - (IR remote control) Press water volume "+" "-" buttons to select User Code. The indicator shows the corresponding User Code. Press the User Code combination buttons again to save settings and exit. The buzzer beeps and it's set successfully. If there is a loss of power to either the unit or the remote control, the User Code will be cleared and will need to be reset. After entering setting mode, if there's no operation for 10s, the remote control will exit setting mode automatically and return to its previous state.
-

QUIET MODE

- "Quiet Mode" disables the audible "beep" when pressing activation buttons.
 - Long press "SEAT TEMP" button to turn on/off quiet mode.
-

AUTO DEODORIZATION

- While holding down the "STOP" button, depress the "FRONT/MOVE" button to start or exit the Auto Deodorizing function. When the Auto Deodorizing function is active, it will start deodorizing automatically when it detects a user is seated for greater than 3 seconds. The Auto Deodorizing will turn off automatically during the drying cycle. The Auto Deodorizing function is set to "ON" by default when the unit is equipped.
-

APP CODE MATCHING

- Press and hold "STOP" button and then press "✓" button to start APP code matching. (This button combination only applies to product with APP.)
-

IMPORTANT SOUNDS

- The unit will audibly "BEEP" when the user presses one button which means the main unit receives the signal and conduct the operation accordingly. If the system doesn't make a "BEEP", it means the main unit did not receive the signal. Please adjust the Remote Control direction and retry the button selection.
- If there is a loss of power during the spray operation, the wand will not retract into its default position. If possible, wait until power is restored, and allow the unit to reset to its default position. Do not manually press in the Spray Wand as you may cause damage.
- When a user is in the seated position on the Bidet, you will hear an audible "click". This means that the functions of Front Cleaning, Rear Cleaning, and Drying are in operation. By default, the Spray Wand will continue to spray for 1-2 seconds if a user stands during the cleaning process. Please press the "STOP" button if you need to stand during the cleaning process.