


## INSTALLATION INSTRUCTIONS

### SB-2542 Pull Down Kitchen Faucet

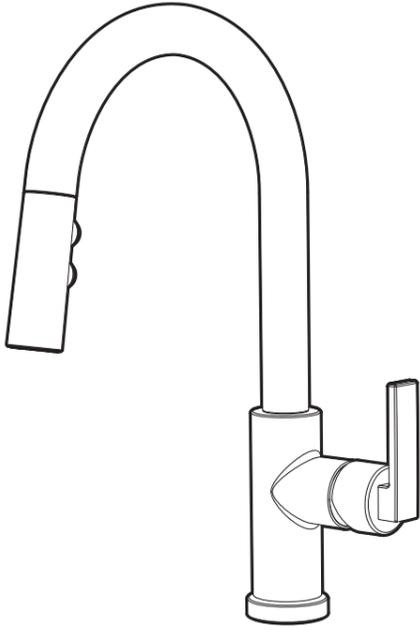

## TOOLS & SUPPLIES NEEDED



## IMPORTANT

### SAFETY TIPS:


- Be sure to read and understand all instructions before beginning installation.
- Inspect all connections after installation.
- Cover the drain to avoid loss of parts.
- Be sure to wear proper eye protection.
- Do NOT over tighten any connections or damage may occur.
- Shut OFF water supplies before beginning installation.
- Observe all local plumbing and building codes.
- This Faucet has an operating range of 20-80 psi.

### FINISH MAINTENANCE:

- Keep the surface finish looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool, and harsh chemicals as these will dull the finish and void your warranty.


## CHECK FOR BASE GASKET

- 1 Verify that the Rubber Washer is properly seated into the base of the Faucet.

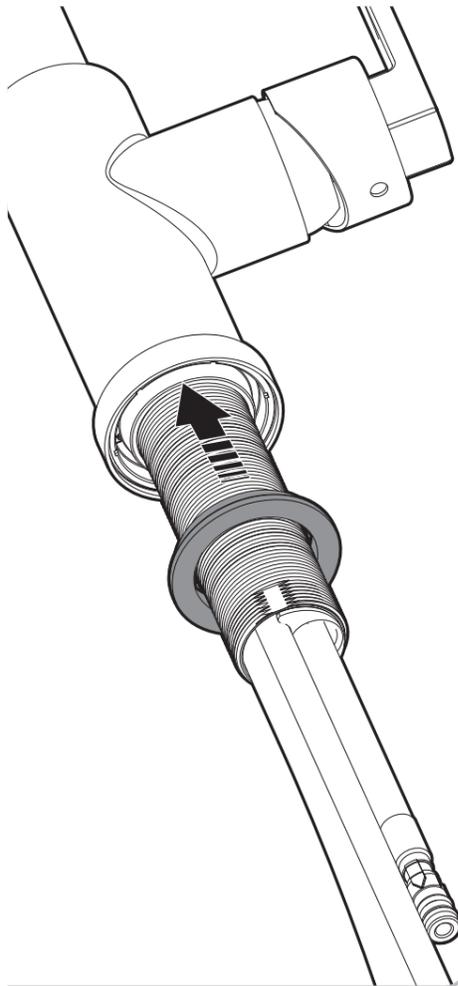

## PLACE INTO POSITION

- 2 Place Hoses (one at a time) through the hole in the mounting surface. Lower Faucet into position. If installing optional Deck Plate, place Hoses through the Deck Plate first.

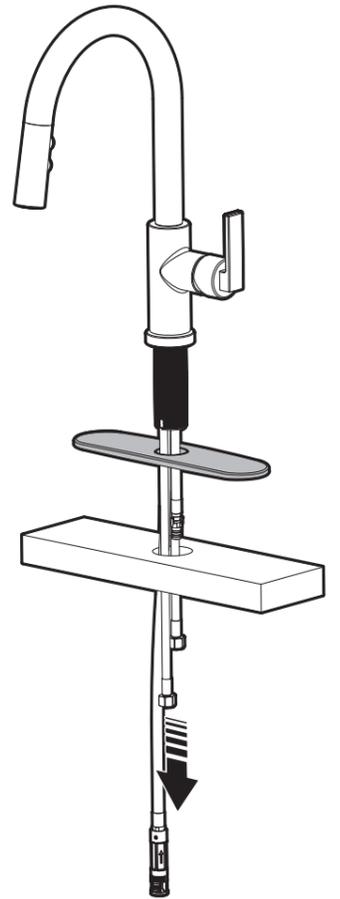

**NEED HELP?**  
For additional assistance or service please contact:



800-537-2107




www.speakman.com

92-SB-2542-01


## INSTALL EASY MOUNT NUT

- 3 Slide Easy Mount Nut over the Hoses and upwards over the Threaded Shank until it makes contact with the mounting surface (A). Press upward firmly on the Easy Mount Nut, then rotate by hand to final tighten into position (B).

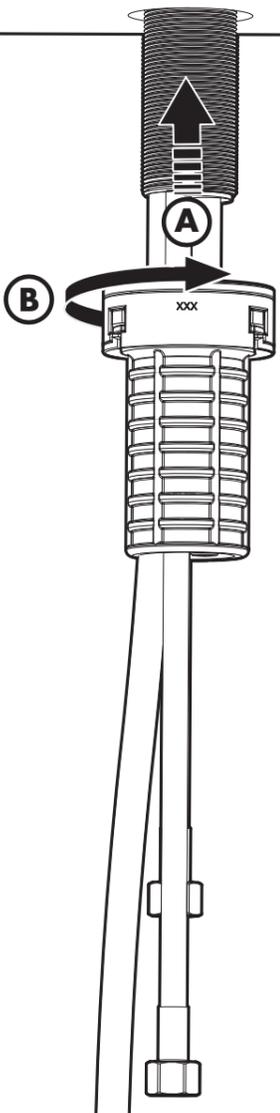

## MAKE CONNECTIONS TO WATER SUPPLIES


- 4 Make connections to water supplies. The inlet threads of the Faucet Hoses are 9/16"-24 UNF and will accept 3/8" Compression connections.

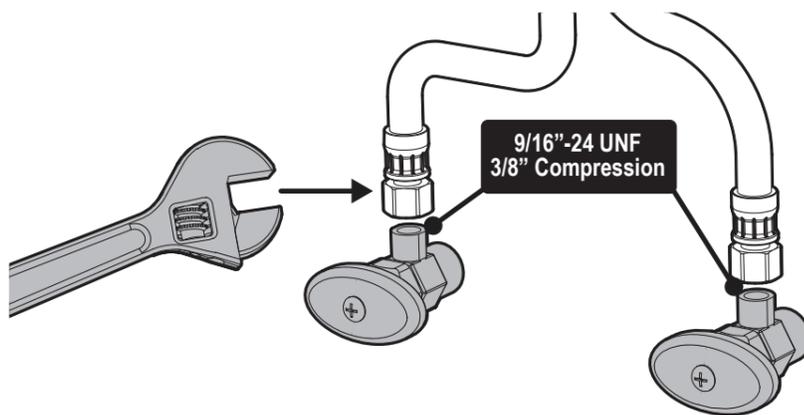

NOTE: SUPPLY STOPS NOT INCLUDED


## FLUSH SYSTEM

- 5 Place Spray Hose (exiting from base of faucet) into a bucket. Turn ON water supplies. Flush both HOT and COLD water for 1 minute into the bucket.

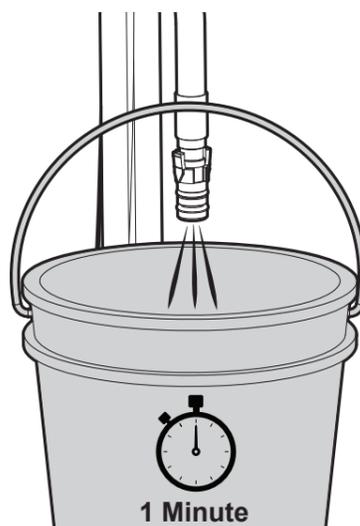


## CONNECT HOSES

- 6 Turn OFF water supplies. Connect the Spray Hose to the Outlet Hose. Align the tabs as shown below. This is a "push to connect" connection. Make sure to push the connection together tightly and verify proper connection.

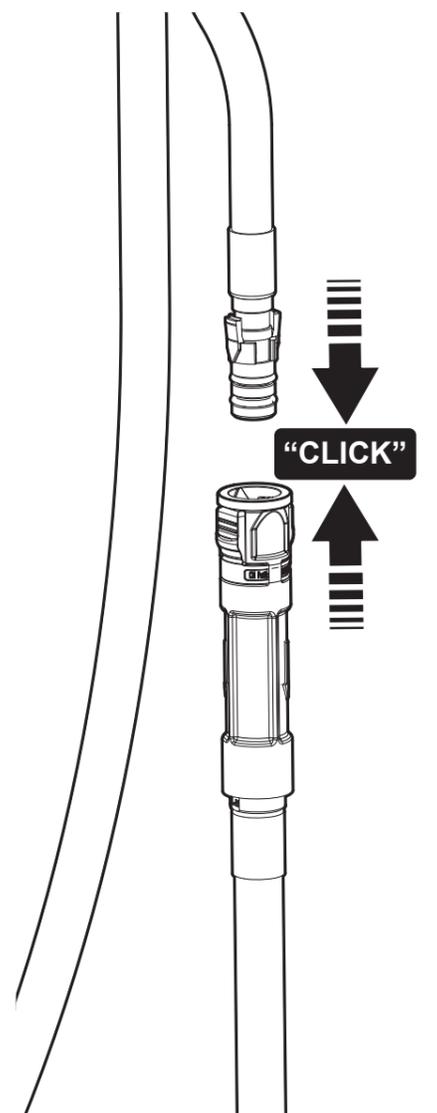


## INSTALL WEIGHT TO HOSE

- 7** Install the Weight Clip onto the Hose at the indicated area (A). Slide the Weight onto the Weight Clip (B).

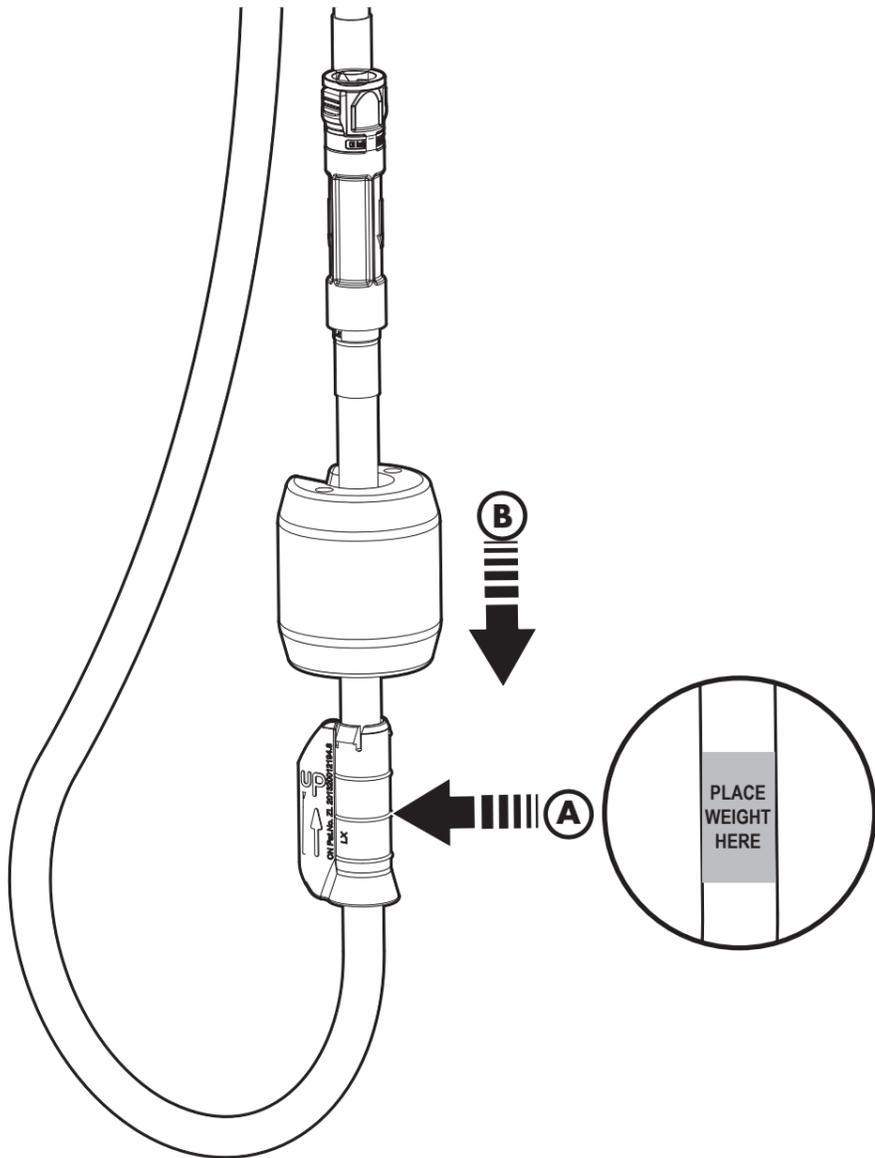


## TEST FOR PROPER OPERATION


- 8** Turn ON water supplies and test for proper operation. Inspect for leaks.

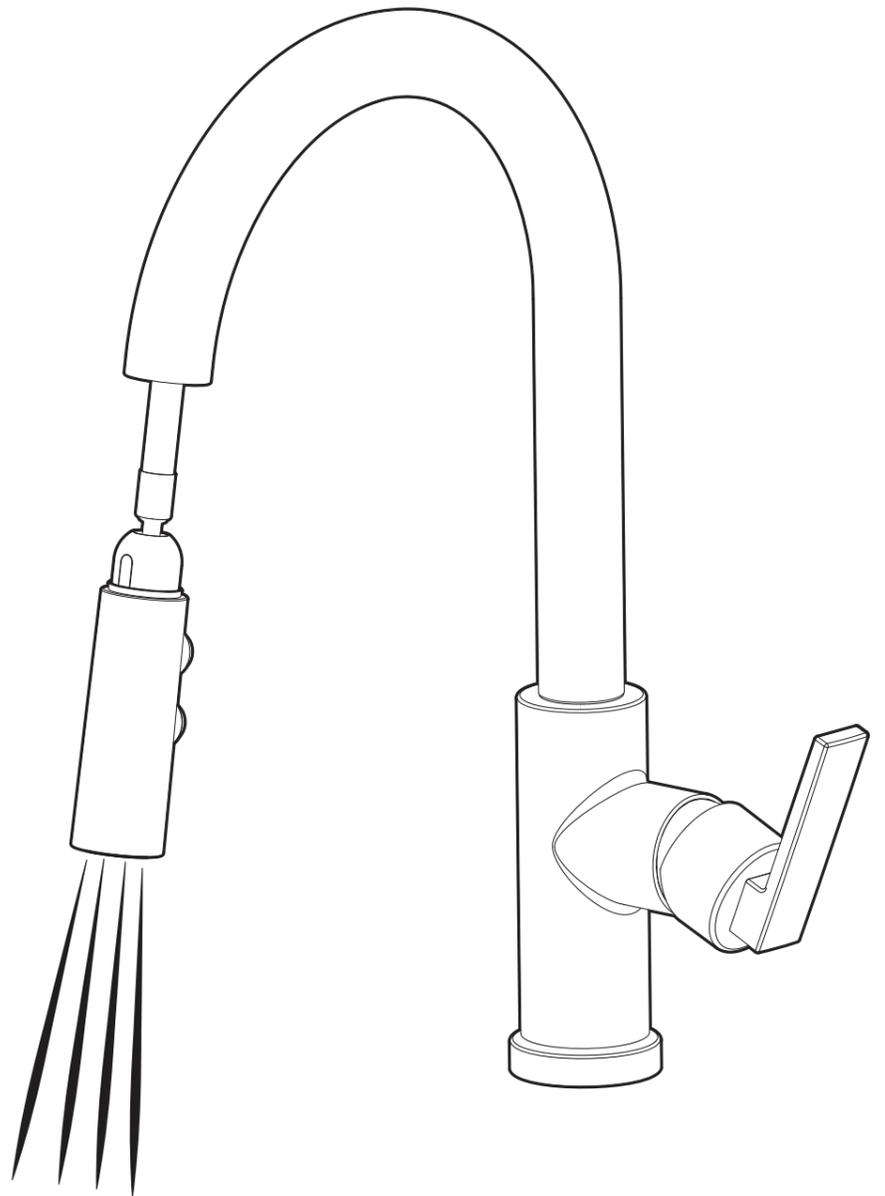

## REPAIR PARTS

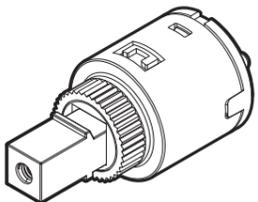

**RPG05-108762**  
REPLACEMENT CARTRIDGE

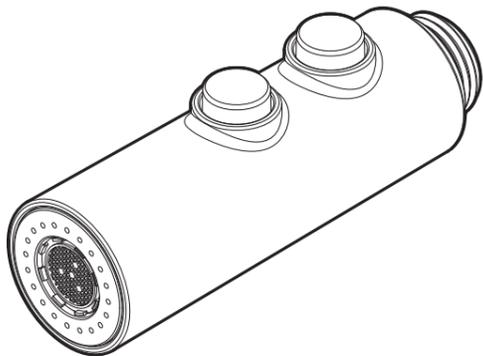

**RPG05-112989-XX**  
REPLACEMENT SPRAY HEAD

## PRODUCT WARRANTY

This product is warranted to be free of defects in material and workmanship for the period listed below from the date of installation.

**Consumer/Residential: Limited Lifetime Warranty**  
**Commercial Use: 5 Year Limited Warranty**

Speakman warrants to its purchasers only ("Buyer") that goods are sold free from defects in materials and workmanship and conform to Speakman's specifications at the time of manufacturing, provided the goods are properly installed and maintained. Buyer's sole and exclusive remedy for any goods that may prove to have had a non-conformance within the Warranty Period shall be, at Speakman's sole option, the repair or replacement of the non-conforming goods. For additional information please go to [www.speakman.com](http://www.speakman.com).

## CALIFORNIA PROPOSITION 65



### CALIFORNIA PROPOSITION 65:

**WARNING:** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

Wash hands after installation, repair, or removal of this product.

## ROUGH IN DIAGRAM

### COMPLIANCE

ASME A112.18.1 / CSA B125.1  
NSF / ANSI 61  
NSF / ANSI 372  
CEC (California Energy Commission)



### CONNECTIONS

HOT / COLD Inlets: 9/16"-24 UNF  
(3/8" Compression)

### FLOW RATE

1.8 gpm (6.8 L/min)

### KITCHEN ROUGH-IN

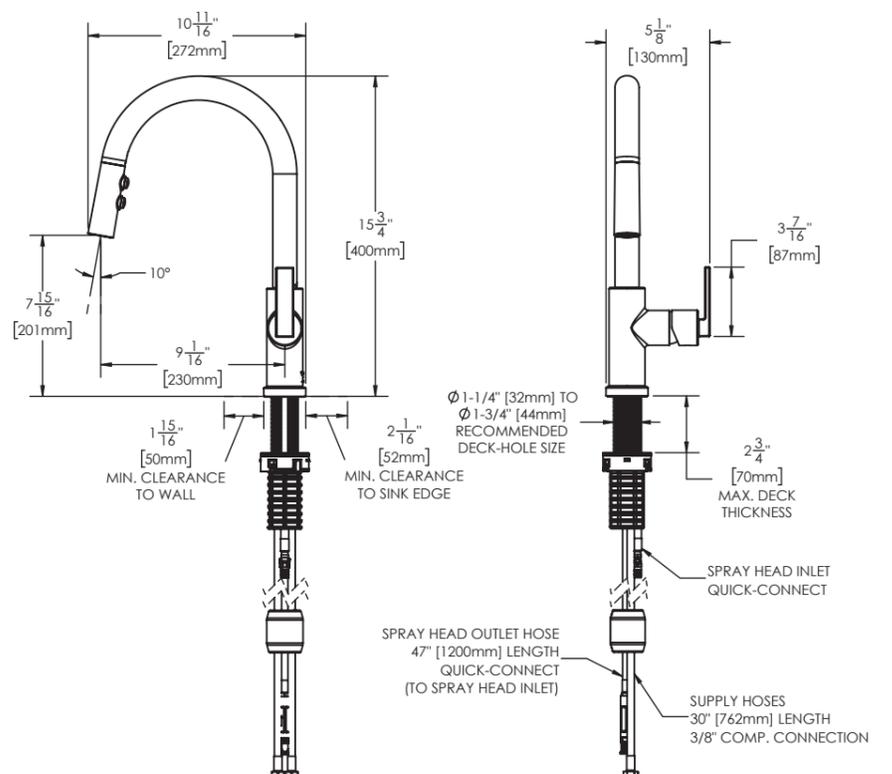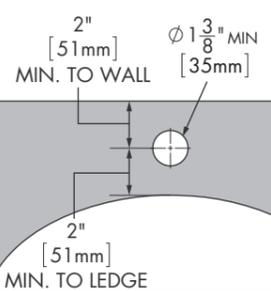

DIMENSIONS SUBJECT TO CHANGE WITHOUT NOTICE. FOR ADA MOUNTING LOCATIONS, CONSULT ADAAG, ANSI A117.1, AND LOCAL/STATE REGULATIONS.