

# CONVENIENCE CONCEPTS


## BIG SUR HIGH BOY TV STAND

Item No. 8066070

8066070CH

42" Maximum Flat Panel Television

100 lb. Maximum Capacity

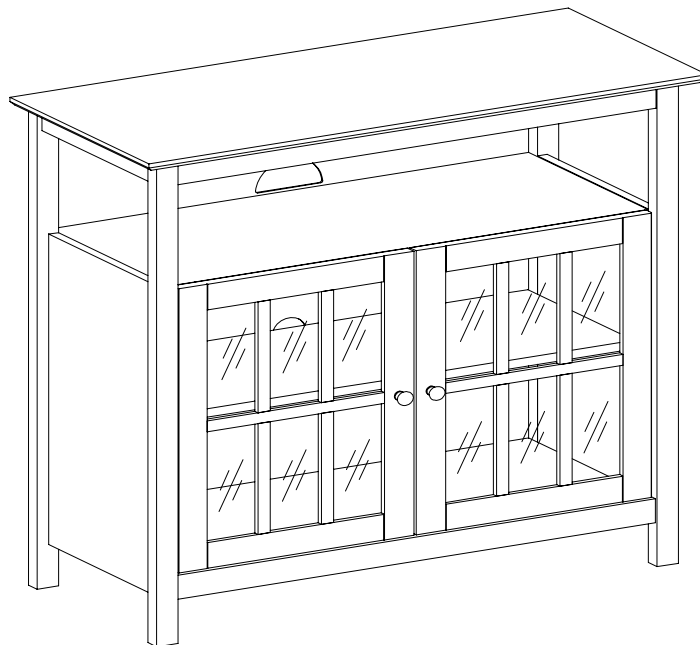

Please do not return to the store









 




. Broken or Missing Parts?

. Need help with Assembly?

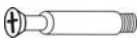

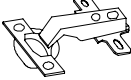





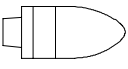
If you have any questions just call 1-800-468-6447 or email us at

[parts@convenience-concepts.com](mailto:parts@convenience-concepts.com)

# HARDWARE LIST

CODE	NAME	FIGURE	Q'TY
A	WOOD DOWEL (Φ8X30mmL)		14PCS
B	CAM LOCK (Φ15*9mmL)		14PCS
C	CAM BOLT (Φ6.5*35mmL)		14PCS
D	SMALL SCREW (Φ7*14mmL)		24PCS
E	MEDIUM SCREW (Φ7*16mmL)		16PCS
F	DOOR HINGE		4PCS
G	KNOB		2PCS
H	KNOB SCREW (Φ4*20mmL)		2PCS
I	SHELF SUPPORT		4PCS
J	WIRE CAP		1PC
K	COLOR STICK		1PC
L	WOOD GLUE		1PC
M	ALEN WRENCH		1PC
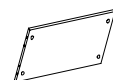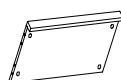
# PARTS LIST

 CODE	NAME	FIGURE	Q'TY
①	TOP PANEL		1PC
②	LEFT SIDE PANEL		1PC
③	RIGHT SIDE PANEL		1PC
④	FRONT CROSSBAR		1PC
⑤	MIDDLE PANEL		1PC
⑥	BOTTOM PANEL		1PC
⑦	DOOR		2PCS
⑧	ADJUSTABLE SHELF		1PC
⑨	BACK PANEL		1PC

## STEP 1

HARDWARE  
NEEDED


A x 5
B x 5
C x 5

1.) Assemble unit laying on its side, on a soft surface.

2.) Attach Bottom Panel ( 6 ) and Middle Panel ( 5 ) to Right Side Panel ( 3 ) using Wood Dowels ( A ), Cam Bolts ( C ), and Cam Locks ( B ) as shown.

\*\* Refer to Camlock Assembly Below\*\*

3.) Attach Front Cross Bar ( 4 ) to Right Side Panel ( 3 ) using care not to bend.

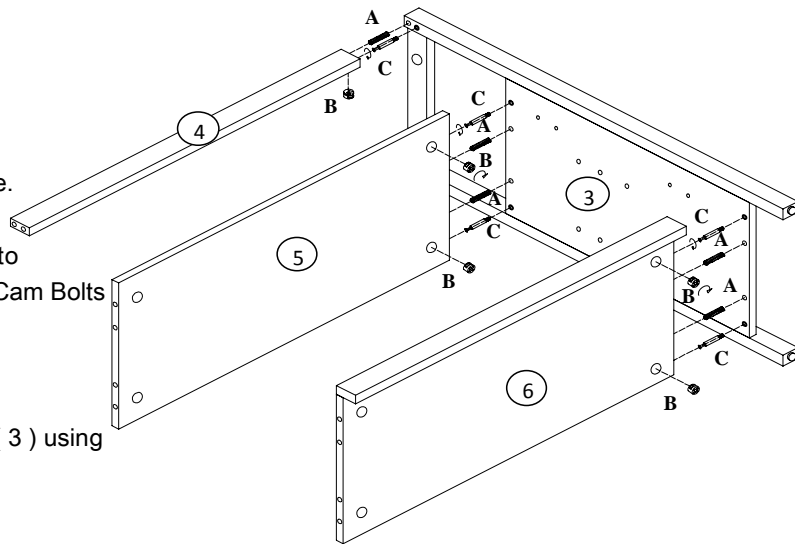


## STEP 2

HARDWARE  
NEEDED





A x 5
B x 5
C x 5


1.) Attach Left Side Panel ( 2 ) to Assembly using Wood Dowels ( A ), Cam Bolts ( C ), and Cam Locks ( B ) as shown.

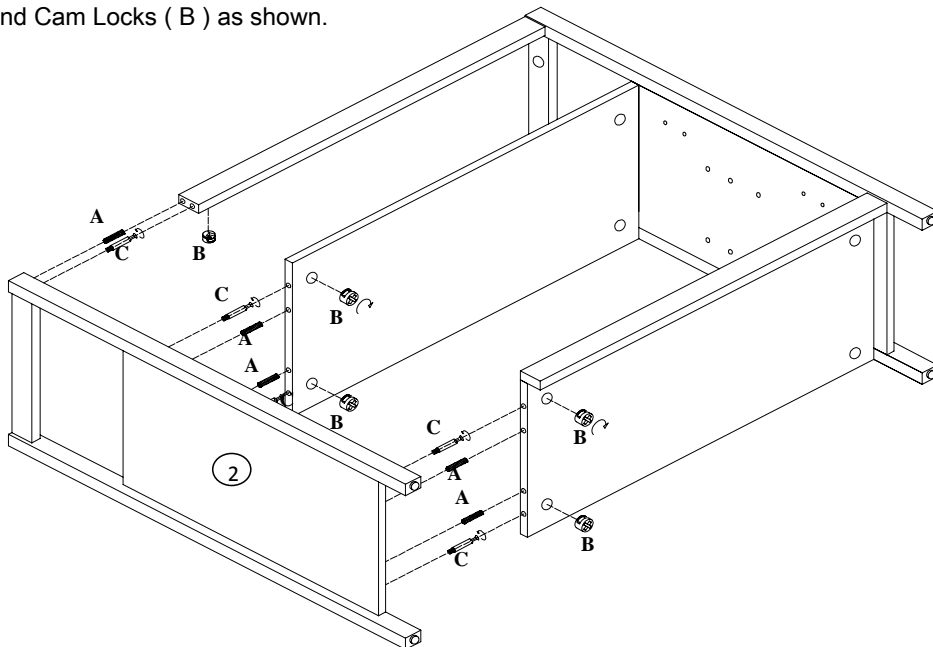

\*\*\*\*

Assembling the unit with cam and wood dowels.

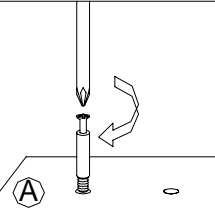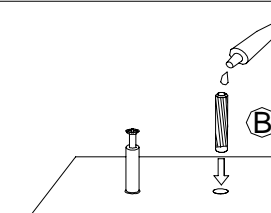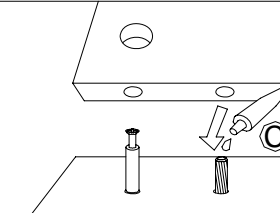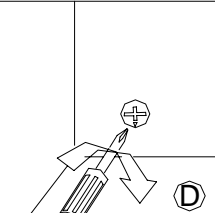	 <p>Gently screw cam dowel into the threaded anchor.</p>	 <p>Lightly glue one end of the wood dowel and tap halfway into hole. Add 2nd drop of glue to top of dowel.</p>	 <p>Connect to second panel by inserting dowels into holes.</p>	 <p>Insert cam lock with arrow pointing down. Screw the cam firmly into locked position.</p>
--	---	--	---	---

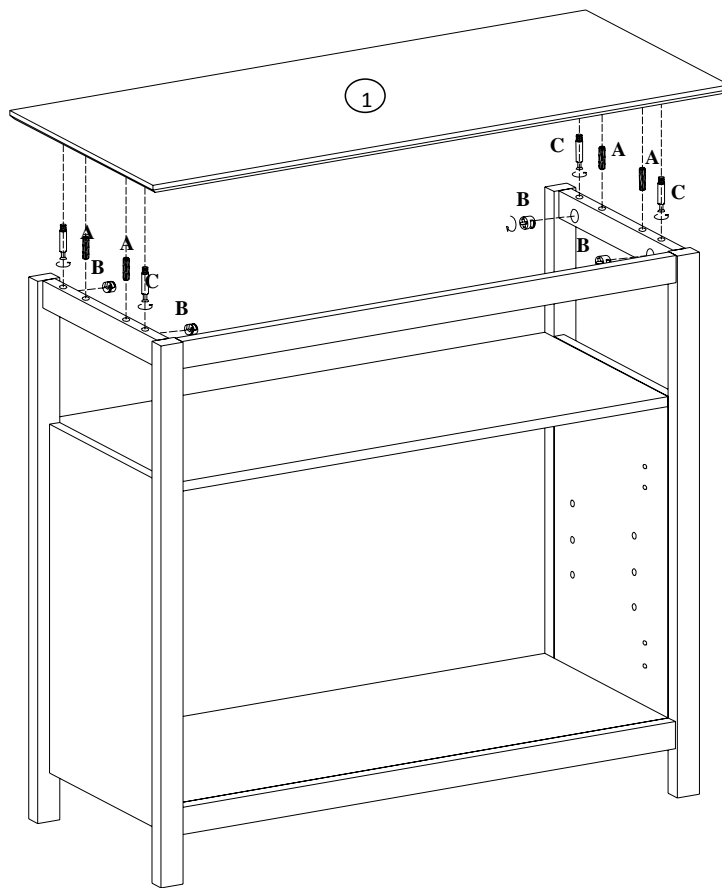

### STEP 3

HARDWARE  
NEEDED

A x 4

B x 4

C x 4

- 1.) Place unit upright and attach Top Panel ( 1 ) using Wood Dowels ( A ), Cam Bolts ( C ), and Cam Locks ( B ) as shown.


### STEP 4

HARDWARE  
NEEDED

E x 8

F x 4

- 1.) Attach Door Hinges ( F ) to Doors ( 7 ) using Medium Screws ( E ). Use care not to over tighten.

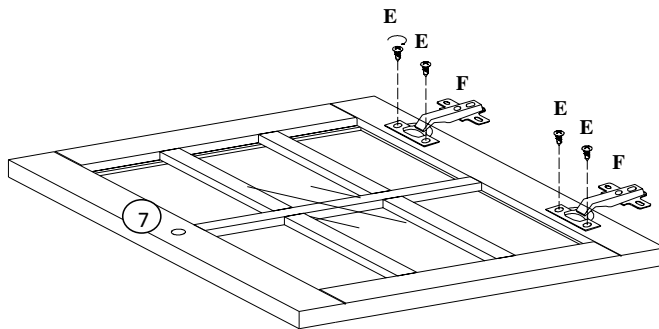


## STEP 5

HARDWARE	<b>E x 8</b>
NEEDED	<b>G x 2</b>
	<b>H x 2</b>

1.) Attach Doors ( 7 ) to unit using Medium Screws ( E ).

2.) Attach Knobs ( G ) to Doors using Knob Screws ( H ).

**\*\*After Final Assembly, Adjust Hinge Screws for Better Alignment \*\***

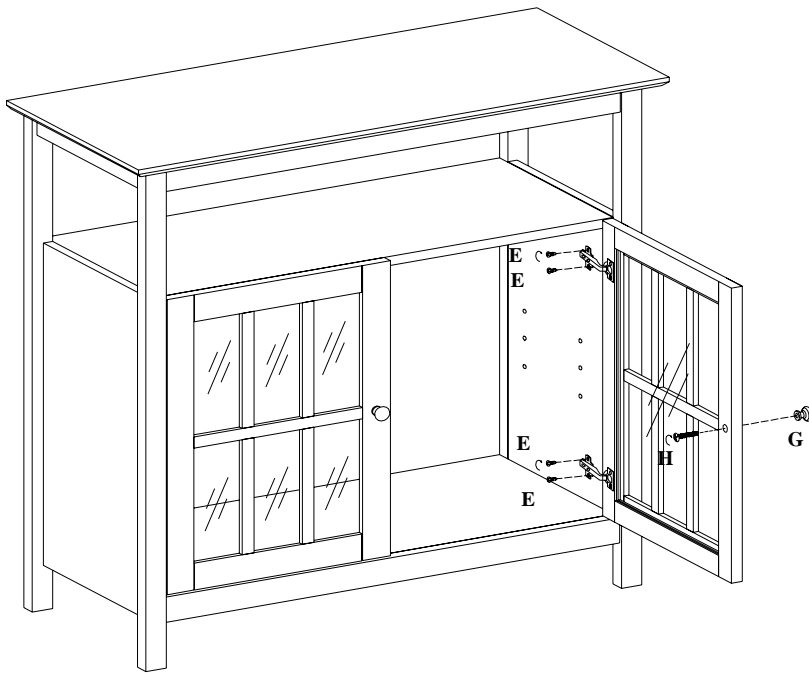



## STEP 6

HARDWARE  
NEEDED

**J x 1**

1.) Carefully pull apart Wire Cap ( J ) into Two pieces if needed.

2.) Align each half of the Wire Cap with pre-cut openings in both sides of Back Panel ( 9 ). Firmly push together until snapped into place.

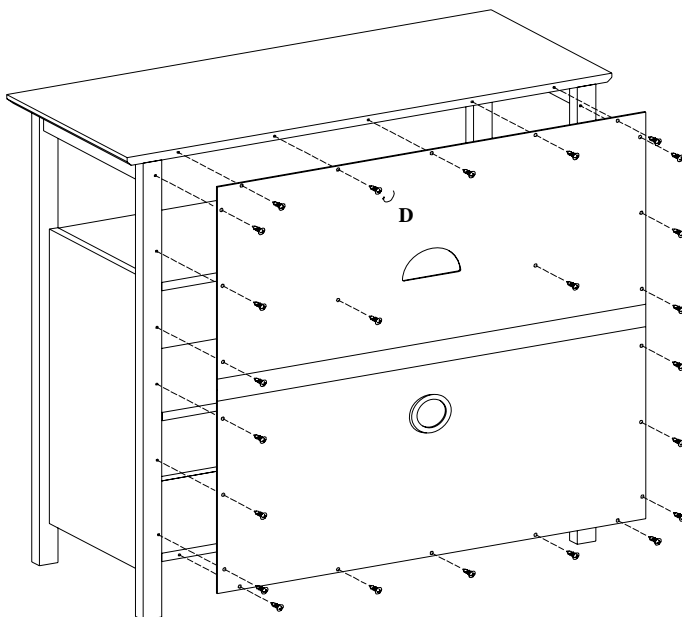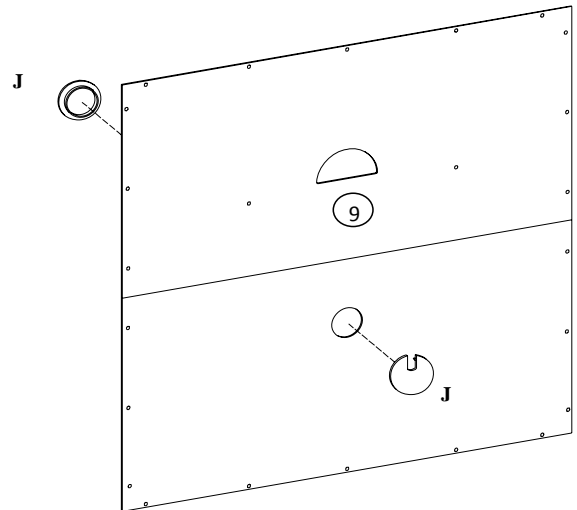


## STEP 7

HARDWARE  
NEEDED

**D x 24**

1.) Attach Back Panel ( 9 ) to unit by using Small Screws ( D ).

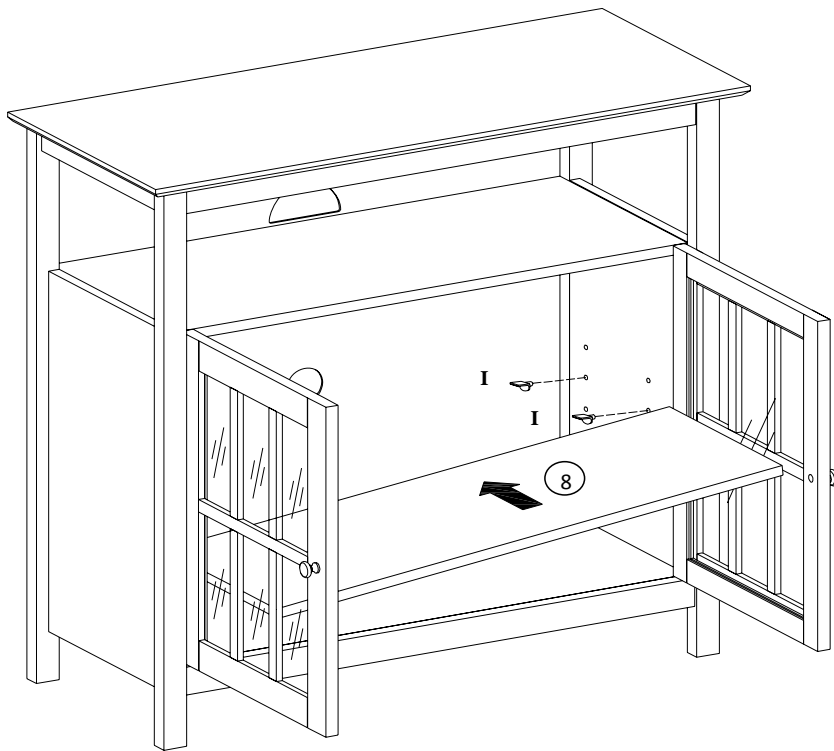**STEP 8**HARDWARE  
NEEDED**I x 4**

- 1.) Insert Shelf Supports ( I ) into desired position holes in side panels.
- 2.) On a slight angle, carefully slide Adjustable Shelf ( 8 ) into unit and on top of Shelf Supports ( I ).



Enjoy your new piece of Quality Furniture!