

INSTALLATION INSTRUCTIONS

Item#LPL-530013-BB/LPL-530013-PN

READ AND SAVE THESE INSTRUCTIONS

Black or

Smooth

Black

(Hot)

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

ASSEMBLING THE FIXTURE (Fig. 1)


- 1. Shut off the power at the circuit breaker and remove old fixture from ceiling, including the old crossbar.
- 2. Carefully unpack the new fixture and lay all the parts on a clear surface.
- 3. Attach the crossbar (A) to the junction box using screws (C). The side of the crossbar marked "GND" must face out. The junction box is not included.
- 4. Determine the desired hanging height and thread tube (1 & H&G) to the fixture body (1).
- 5. Feed fixture wires through center tube (I &H &G). Connectingcenter part (I &H &G) to the fixture body (J) and the canopy (D) and turn clockwise until firmly tightened.

CONNECTING THE WIRES (Fig. 2)

- 1. Take the black wire from the ceiling junction box and the smooth wire leg from the fixture and twist bare ends together. Twist wire connector onto end of wire until snug.
- 2. Repeat same process with white junction box wire and ribbed wire leg of fixture wire. NOTE: Twist wires together in the same direction you twist the wire connector onto wires.
- 3.If your junction box has a grounding wire (green or bare copper), attach this wire and the bare copper wire from the fixture together as step 1. If junction box has no ground wire, attach the bare copper fixture wire to the green ground screw on the mounting plate.
- 4. Put the Lamp Body onto the ceiling, aligning the nipple on the mounting plate with the mounting holes on the canopy (D), lock it securely with the hex nut (E) and the Ball Nut (F).
- 5. Attach the crystal (K) onto of the fixture body (J) and turn clockwise until firmly tightened. Your installation is now complete. Return power to the junction box and test the fixture.

Note: Illustration (Fig. 1) on this manual is for installation purposes only.

It may or may not be identical to the fixture purchased.

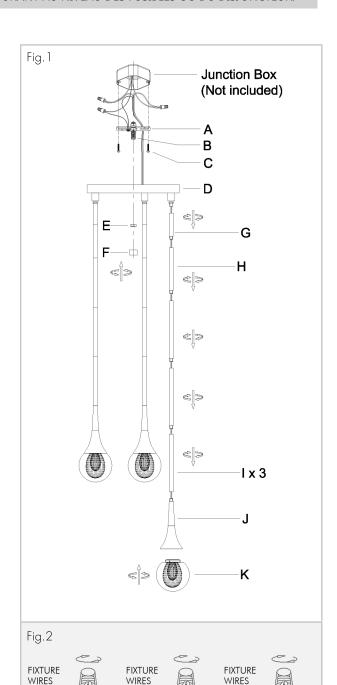

White or

White

(Neutral)

Ribbed



HOUSE

WIRES

Green or

Bare Copper (Ground)

Copper (Ground)