


Loveseat Assembly Instructions

 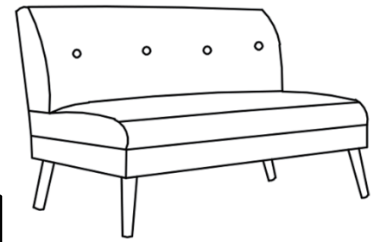


Your loveseat come packaged in one box.

DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.






Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching the finish.



Parts List


- A** 1 x Back 
- B** 1 x Seat 
- C** 4 x Legs 

Hardware List


- D** 8 x Bolts with Lock Washers & Flat washers  M8 x 50mm  M8  M8
- E** 1 x Hex Key  M6 x 100mm
-  Hardware bag can be found inside seat deck.

Assembly


Step 1

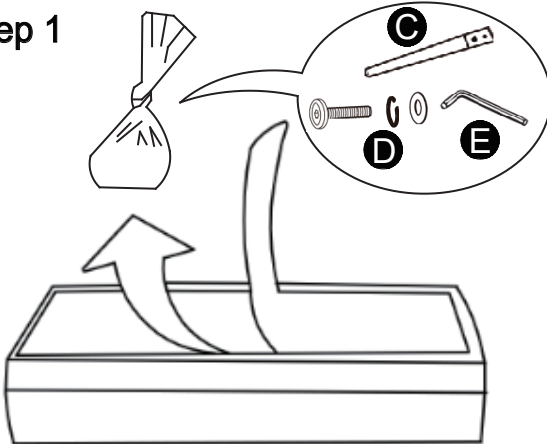

Step 2

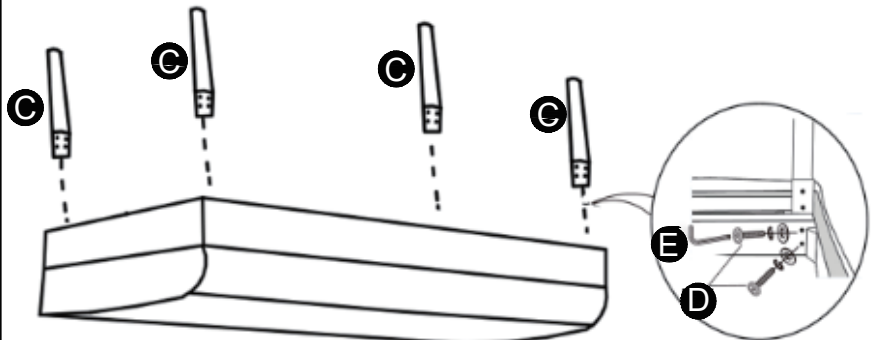

Step 3

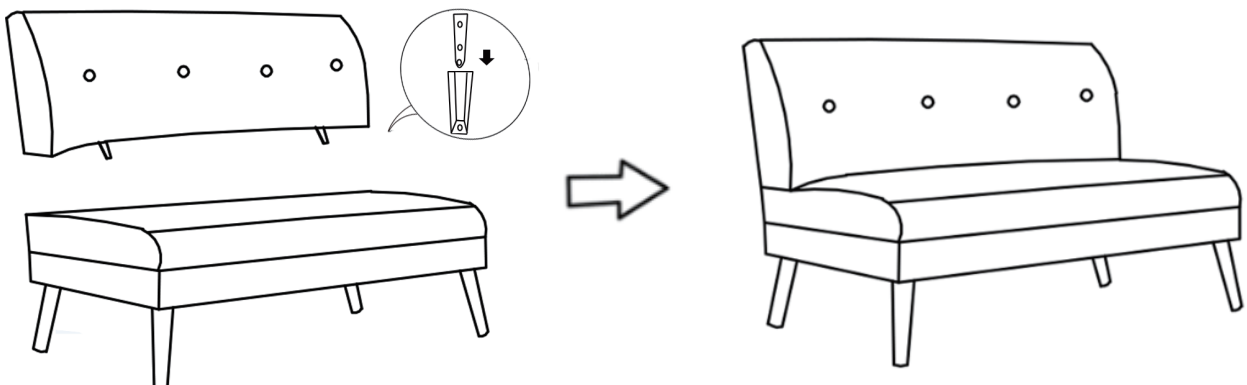

Your loveseat style may differ from images.
Care for your furniture by periodically tightening all bolts using the included hex key.
Fabric will fade or discolor in direct sunlight. Minimize exposure to direct sunlight to extend the life of your furniture.

One Year Warranty: The furniture is warranted against defects in workmanship and materials. Items covered would be seam slippage, frame structural integrity, fit and finish of parts. Items not covered would be product abused by the user, normal wear and tear, stains or discoloration due to use, damage in any transportation. Softening of foam is considered normal wear and tear and is not covered by warranty. Warranty is for PARTS ONLY and does not include transportation and labor costs associated with any warranty claim.

CAUTION: Tighten all components securely before use. Failure to do so may result in personal injury.

Customer Support: 866-238-0531
Mon-Fri 8:00am - 4:30pm CST
customerservice@furniturequestions.com