

TV STAND

ASSEMBLY INSTRUCTION COASTER FINE FURNITURE



www.coastercompany.com

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




Warning!

- 1. Don't attempt to repair or modify parts that are broken or defective . Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION

Ζ

HARDWARE PACKAGE

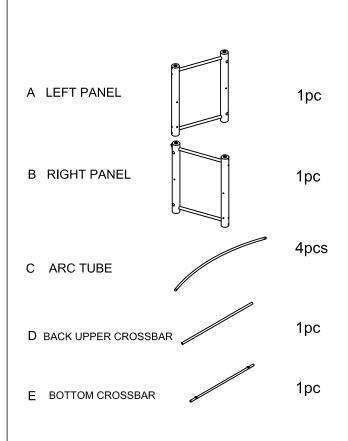

NO	DESCRIPTION	FIGURE	Q`TY
1	ALLEN BOLT - LARGE	①	8pcs
2	ALLEN BOLT - SMALL	0	4pcs
3	SCREW		6pcs
4	SUCTION CUP	0%	6pcs
5	CONNECTION IRON	\$	1pc
6	ANCHORS		1pc
7	TIPPING RESTRAINT	Q	1рс
8	SCREW	©mmm>	1pc
9	ALLEN WRENCH		1рс

G MIDDLE GLASS

F TOP GLASS



1pc


1pc

H BOTTOM GLASS




1pc




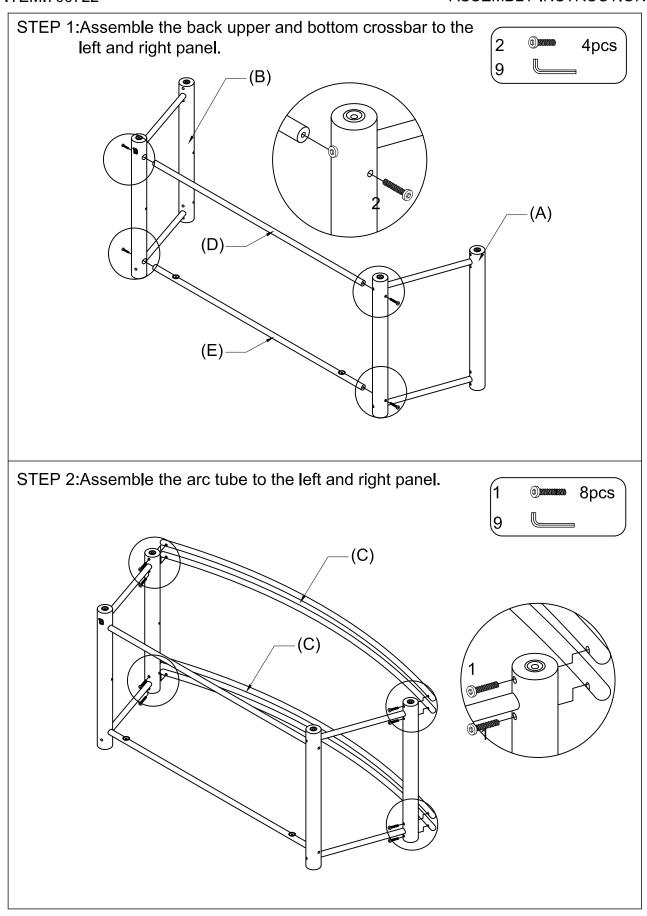



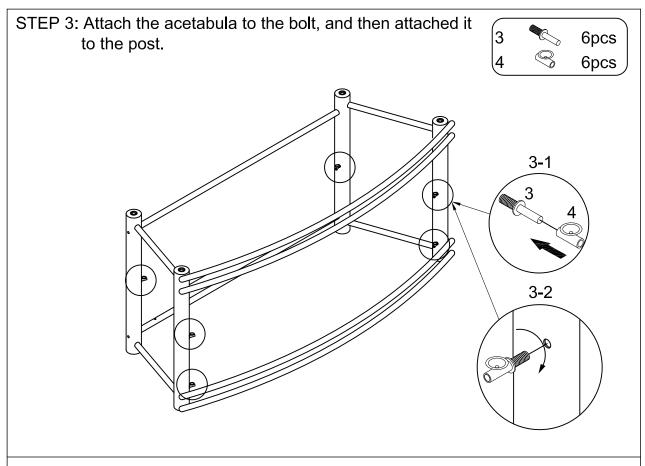


STEP 4: Carefully lift the top glass to the frame, and put the middle and bottom glass to each position.

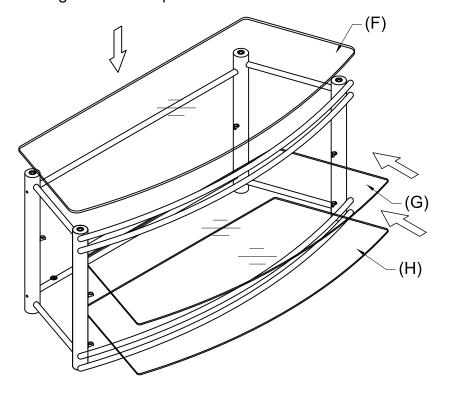




www.coastercompany.com

 STEP 5: Drill one hole into wall with power drill, push Anchors into wall holes. Using a Phillips screwdriver, turn screw with Connection iron into Anchors.




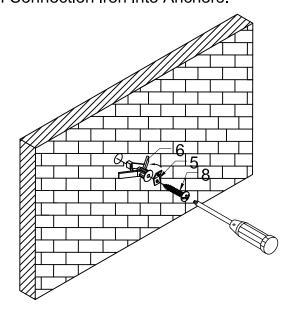

TO PREVENT TIP OVER PRODUCT MUST BE ATTACHED TO WALL

STEP 6:We have included one Tipping Restraint for this unit. You must connect this one to prevent accidents or injuries. When properly connected, this Tipping Restraint can provide protection



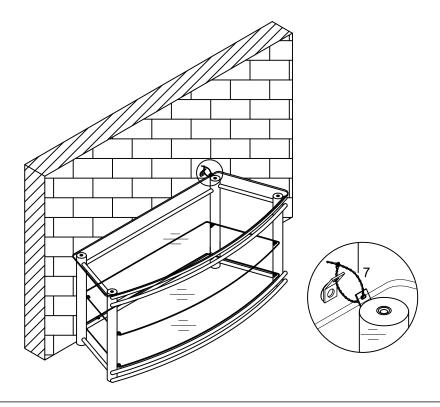



www.coastercompany.com