

User's Manual



services@rbrohant.com

INSTALLATION INSTRUCTIONS

INSTALLATION MANUAL



000



RCS85015BN



BEFORE INSTALLTION

Usage

As shown in the right, the water outflow can be turned on or off independently by the switch button, and the water temperature can be adjusted by the constant temperature hand wheel on the right.



Notes

1. The valve core of the main body has been tested and adjusted by the manufacturer. Please do not disassemble and install it by yourself.

2. Hot water temperature 55-80 $^\circ\!\!\!C$ (recommended 65 $^\circ\!\!\!C$), cold water temperature 5-29 $^\circ\!\!\!C$ (recommended 15 $^\circ\!\!\!C$).

3. Cold water should be connected to the main body on the side marked with "C", and hot water on the side marked with "H". Revered connection is strictly prohibited. The water pressure at the cold and hot water inlet should not vary too much (pressure difference between the two ends \leq 20%). 4. The working water pressure of the valve core is 0.1-0.5 MPa (including the pressure of cold or hot water). Working water pressure of 0.3 MPa is recommended to use. A pressure reducing valve should be installed on the pipeline when the working water pressure exceeds 0.5 MPa.

5. The temperature displayed on the constant temperature handwheel is adjusted under the specific water temperature condition in the factory. The product may be different as the working water temperature changes. The difference of $\pm 2 \ ^{\circ}$ C is normal. If there is large difference, it should be adjusted by professional personnel.



INSTALL THE SHOWER VALVE BODY

This product has been inspecter and debugged by the factory to the best condition.Please do not disassemble and assemble it yourself.



1.According to the basic size of the product (with reference to the figure above), the pre-embedded grooves of main body, inlets of hot and cold water and mixed water outlets and joints should be excavated.



3. Drive 4 expansible colloidal particles into the drilled holes with hammer.



5. Adjust the pre-embedded main body to the horizontal line and fix the main body on the wall with four self-tapping screw and a cross screwdriver. Seal the pipeline with cement filler.



Before installing the faucet ,please be sure to remove sundries and sludge from the water pipe to prevent sundries from blocking the faucet.



2. Drill four 6-mm holes with percussion drill according to the product size.



4.Each pipe should be linked and connected to water to confirm there is no leakage.



6. Loosen the two M5 screws on the sheath counterclockwise with a cross screwdriver and remove the sheath.



INSTALL THE SHOWER VALVE BODY

7. First, take out the color button of the constant temperature handwheel; then loosen the main body of the handwheel counterclockwise with the 2.5-mm hexagon wrench, and unload it. Do not rotate the constant temperature handwheel when taking it out. Ensure that the button of the constant temperature handwheel is aligned with the 38-degree line on the panel.





Excess part of extension rod



8. Tighten the three extension rods on the valve core with button; then put the positioning plate on the surface of wall; cut off the redundant part by cutting machine or the blade along the outer plane of the extension rod of positioning plate; finally, remove the positioning plate again (as shown in the figure).



9. Install the panel on the main body in a balanced manner.

10. Install the parts of the constant temperature handwheel on the main body in the opposite direction of unloading. (please ensure that the valve core does not rotate when installing the constant temperature hand wheel and the direction of the button is aligned with the direction of the





INSTALLATION OF THE HANDSHOWER

1. Wrap the PTFE tape on the 1/2 thread of the stand for shower head.

2. Screw the stand for shower head clockwise on the outlet hole of the water outlet.

3. Connect the water outlet of the stand for shower head with the tube of shower head, and put the hand-held shower head in the stand.





Hand-heal shower Head 1/2 flat spacer Tube of shower head

INSTALLATION OF OF RAIN SHOWER HEAD

Parts list



Number	Name	Quantity	Number	Name	Quantity
1	Explosive bolt	4	6	Spring spacer	4
2	1/2 spacer	2	7	Locknut	4
3	Joint of connecting pipe	2	8	Parts of shower head	1
4	Pre-embedded main body	1	9	M6X8 screw	2
5	Spacer	4	10	20CM connecting pipe	2

Sketchy diagram



1. When customer receives the product, loosen the M6X8 screw with an Allen key as shown above.







INSTALLATION OF OF RAIN SHOWER HEAD

1, With reference of above size, excavate a pre-embedded groove in the appropriate position on the wall.



Connect the shower head Connect the waterfall water outlet

4. The pre-embedded body is supported by hand and installed on the four explosion bolts.



7. Connect the water pipe to the pre-embedded main body to confirm there is no leakage.



2, With reference of the basic size of the product, drill four \emptyset 10 holes in the appropriate position on the wall.



5. Install the spacer and spring spacer with the explosive bolt, and then lock the nut to the pre-embedded main body with the wrench and copper sleeve. 3. Drive four explosive bolts into the drilled holes with a hammer.



6. Put 1/2 flat spacer into the pre-embedded main body and tighten the water inlet joint.



8. Tile or other decorative materials will be pasted on the wall and size shown above should be reserved.



9. Insert the parts of shower head into the pre-embedded main body according to the corresponding hole.



10.Tigthen the parts of shower head with N6X8 screw and a hexagon wrench.



FINISHED



CLEANING CARE

1.To keep the surface of the product clean and bright, please wash it frequently:

A, Rinse with water and dry with soft cotton cloth;

B, Do not use abrasive detergent, emery cloth and sandpaper; C, Do not use any acid cleaner, polish, soap, coarse detergent, abrasive polish.

2. When the water outflow is reduced or the temperature is difficult to adjust, please follow the following steps to remove the impurities on the filter screen: (as shown above)

A, Disassemble the inlet parts on both sides of the main body with tools;

B. Brush the impurities attached to the filter screen on the backwater-proof inlet;

C. Reinstall the parts sequentially, and then open the supply of cold and hot water on the body part.



Please feel free to contact us if you have any questions. we will help to solve the issue together with you. OUR EMAIL: services@rbrohant.com





Service Contact:

6264872662 services@rbrohant.com

Made in China