

### MAINTENANCE AND CARE INSTRUCTIONS

Olympia products are designed and engineered under strict quality standards. Regular and proper care of our products will ensure years of trouble free service. To clean, simply wipe with a damp, soft cloth. Do not use abrasive or harsh cleaners as they may result in finish damage. Regularly remove and clean minor debris from the aerator.

TROUBLE SHOOTING								
Α.	If water leaks from the spout outlet:		Shut off both hot and cold water supplies.					
		2.	Remove handles (A), bonnet nuts (B), and cartridges (C).					
		3.	Check and replace springs and seats (D).					
		4.	Reassemble handles (A), bonnet nuts (B), and cartridges (C).					
		5.	If seepage still occurs, replace cartridges (C).					
В.	If faucet has low flow:	1.	Remove Aerator (3), clean all internal debris and tighten Aerator (3) back.					
		2.	Repeat Trouble Shooting 'A' and clean any debris trapped in the seats and springs (E).					
C.	If water leaks from spout bonnet nuts:	1.	Shut off both hot and cold water supplies.					
			Unscrew spout bonnet nut (4) and gently pull off spout(I-I2).					
		3.	Replace O-rings (6), and carefully reassemble spout(I-I2).					

## OLYMPIA FAUCETS, INC. LIMITED LIFETIME WARRANTY \*

Olympia Faucets, Inc. warrants its products to the original consumer purchaser to be free from defects in material and workmanship as long as the consumer purchaser owns it. Dated proof of purchase must accompany all warranty claims. PVD finishes carry a lifetime warranty in residential service.

Olympia Faucets, Inc. will replace, free of charge, to the original consumer purchaser, any and all parts that prove defective under normal installation, use, and service. Damage as a result of misuse, abuse, accident, or improper installation, will consequentially void this warranty. Replacement parts can be obtained from your local dealer or directly from Olympia Faucets. Olympia Faucets, Inc. recommends using a certified plumber for all faucet installation and repair.

This warranty is limited to replacement of defective parts only. Incidental and consequential damages, labor charges, repair, or replacement costs are expressly excluded. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, as you may have other rights of which vary from state to state.

Installation or maintenance and cleaning must be in compliance with instructions furnished with every Olympia product. If you find a problem with your product, please immediately contact your nearest Olympia Faucets, Inc. dealer or sales representative.

\* 2 year limited warranty on commercial and multi-family projects.



## INSTALLATION AND MAINTENANCE INSTRUCTIONS FOR OLYMPIA TWO HANDLE BAR FAUCET

THIS PRODUCT MEETS THE FOLLOWING STANDARDS: ASME A112.18.1 ~ ANSI A117.1 ~ ANSI / NSF 61, SECTION 9 ~ UPC / IAPMO LISTED / ADA COMPLIANT ~ COMPLIES WITH CALIFORNIA LEAD PLUMBING LAW

## PRODUCT NUMBERS

#B-8170	5-1/4" Reach Gooseneck Spout
#B-8180	3-1/2" Reach Gooseneck Spout
#B-8190	Hi-Rise Spout





Thank you for purchasing this quality product. Olympia products are rigorously tested to provide long service under normal conditions. Prior to installation, familiarize yourself with this parts diagram. Make sure that you have all of the illustrated parts for your Olympia product before installation.



F

G

н

11

12

2

3

4

5

6

OP-450012

OP-590003

OP-590001 OP-250004

OP-250005

OP-250007

OP-450013

OP-490035

OP-450010

OP-490038

OP-490039

OP-450014

OP-490001C,H



For more care information or trouble shooting inquiries about your Olympia product, please call: OLYMPIA FAUCETS, INC. (888) 772-7701 Central Standard Time: 8:00am ~ 7:00pm www.olympiafaucets.com

		7. Remov one mi		
		CAL	JTION: ES.	r
 DESCRIPTION				
ADA Wrist Blade Handle Cold, Hot				
Bonnet Nut				
Cartridge–Brass Post				
Springs and Seats				
Deck Plate				
Base Gasket				
Mounting Locknut & Washer				
Supply Nut				
Gooseneck Spout (B-8170 Spout)				

Gooseneck Spout (B-8180 Spout)

Hi-Rise Spout (B-8190 Spout)

Handle Screw

Cold & Hot Indicator

1.5 GPM Aerator

Spout Bonnet Nut

Spout Snap Ring

Hose Thread Adapter

Spout O-ring

# INSTALLATION INSTRUCTIONS

## Tools you will need:

- Plumbers Putty
- Screwdriver
- Teflon Tape
- Flexible Supply Lines
- Adjustable Wrench
- Pipe Wrench **Basin Wrench**
- Soft Cloth

#### FAUCET INSTALLATION:

.

- 1. Carefully shut off both hot and cold water supplies from under the sink. Plug the sink drain with a soft cloth to prevent intrusion of debris or the loss of any faucet parts. If this installation is for a replacement, carefully remove the existing faucet and clean the entire surface of the sink mounting holes.
- 2. Apply adequate plumbers putty along the boundary of the bottom of the base gasket (F).
- Gently align the faucet with the sink mounting holes and place the faucet on the sink. Use caution to 3. lead brass waterways through the sink mounting holes.
- 4. Thread friction washers and mounting locknuts (G) alone the brass waterways. Carefully hand tighten the mounting locknuts. CAUTION: Do not overtighten.
- 5. Connect supply lines to hot (LEFT INLET) and cold (RIGHT INLET) waterways. Use with Teflon tape when attaching supply lines to waterways.
- 6. Turn on the hot and cold water. Check all around for any leaks.
- ve aerator (3) from end of spout. Flush both water lines by allowing water to run through for nute. Replace aerator (3).

MAKE SURE TO TIGHTEN THE AERATOR SECURELY AFTER FLUSHING THE WATER