


SP3015

ASSEMBLY & INSTALLATION GUIDE

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

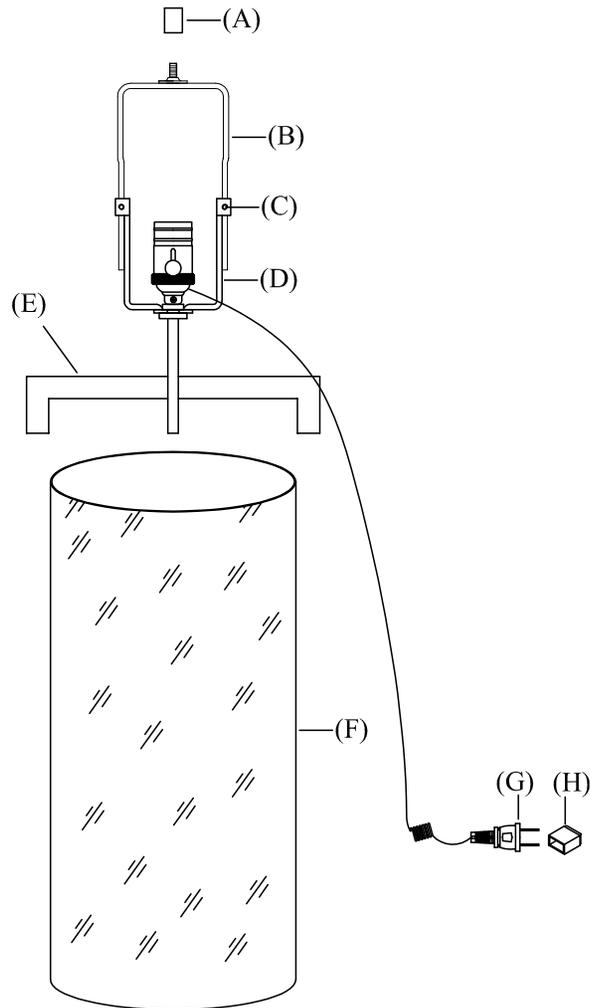

1. Carefully place the cross part assembly (E) on glass cylinder (F). Note: if one side of glass cylinder DOES NOT fit in cross part (B), DO NOT TRY TO FORCE IT. Please turn it over, try to fit another side in.
2. Loosen adjustment knobs (C), insert both sides of harp (B) into top opening of harp (D) and secure with adjustment knobs (C).
3. Remove finial (A) from harp (B), place lamp shade (not included) over the bolt attached on top of harp (B). Screw finial (A) onto the bolt to secure shade to harp (B).
4. Screw light bulb into socket.
5. Remove protective plastic (H) from electrical plug (G). Plug lamp into wall outlet.
6. ADJUSTMENT INSTRUCTIONS:
 1. Loosen adjustment knobs (C) on both sides of harp (B)
 2. Adjust harp (B), up or down, to get desired height. The socket should not show under shade when the harp is adjusted correctly.
 3. Tighten the adjustment knobs (C).