




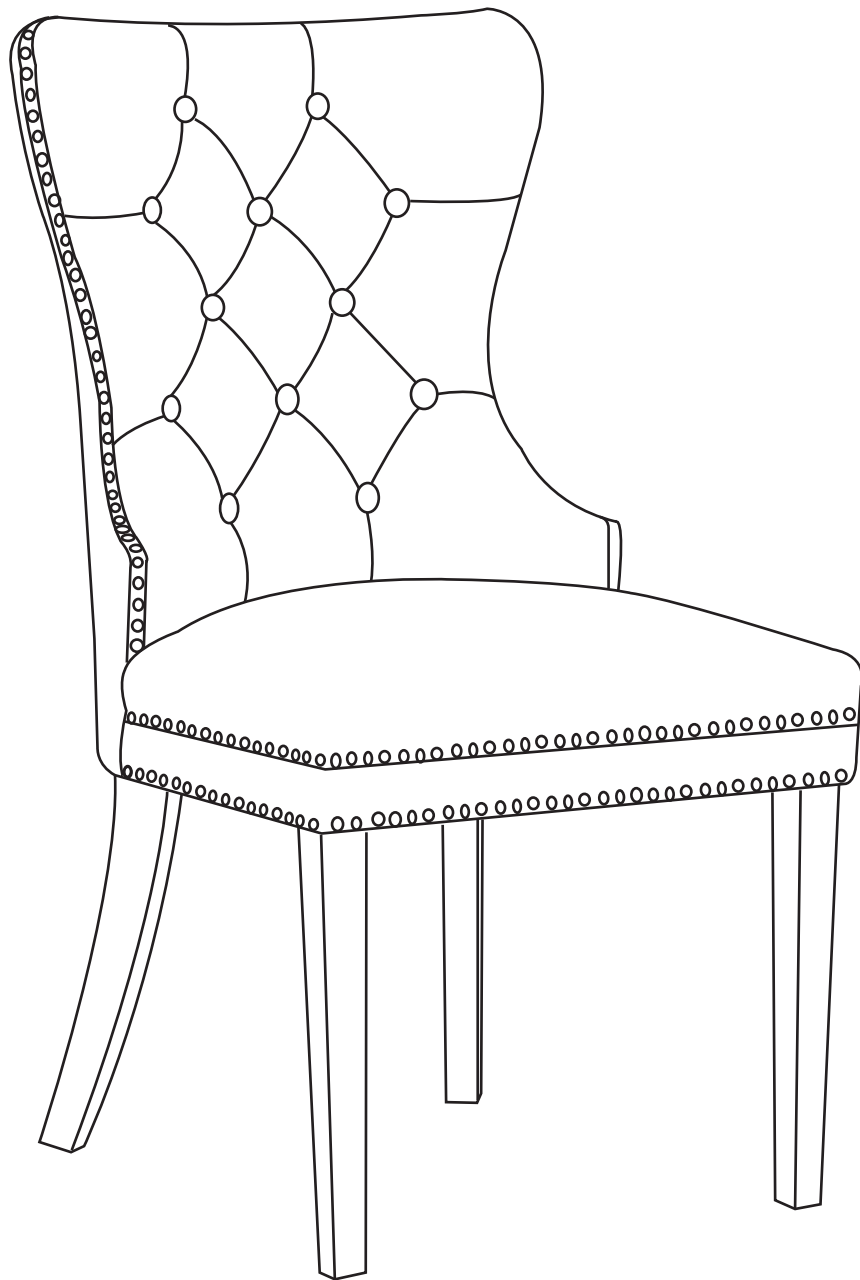


DINING CHAIR

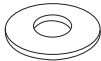


VC-10




Hardware:

A×8	B×8	C×1	D×4	E×4
				
Φ8	Φ8	M8	M8x55MM	M8x60MM
Flat washer	Lock washer	Allen key	Shorter Screw	Longer Screw

Parts list:

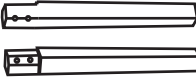	F×1  Back
G×2  Hind Legs	H×2  Front Legs

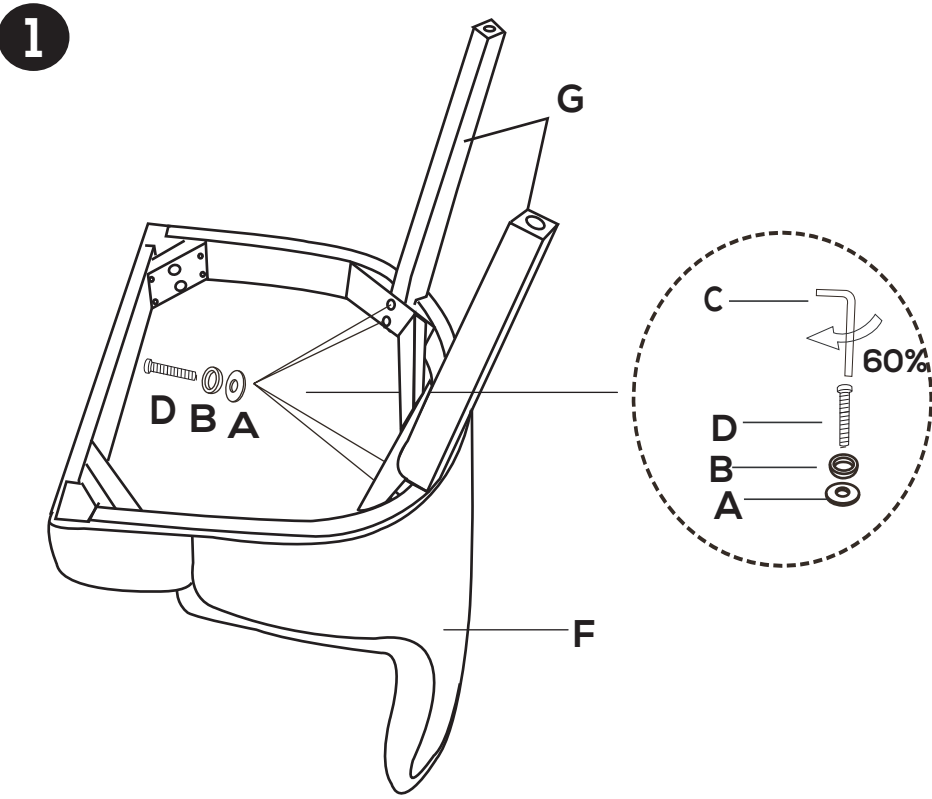


Put chair back on a clean flat surface.
Align Hind legs in the seat pad as shown in the diagram.

Using SHORTER SCREW (D) with Washer (#A,B).

DO NOT FULLY TIGHTEN.

First HAND tighten then tightened using key up-to 60-80% only at this stage.

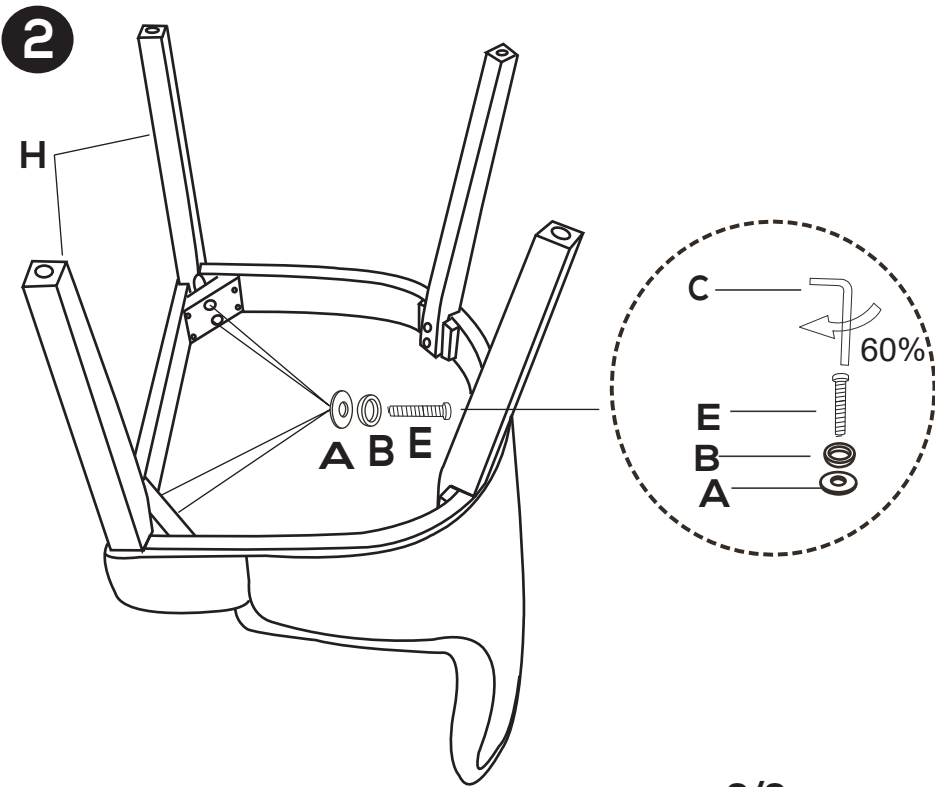




Align front legs in the seat pad as shown in the diagram.

Using LONGER SCREW (E) with Washer (#A,B).

DO NOT FULLY TIGHTEN.

First HAND tighten then tightened using key up-to 60-80% only at this stage.


3

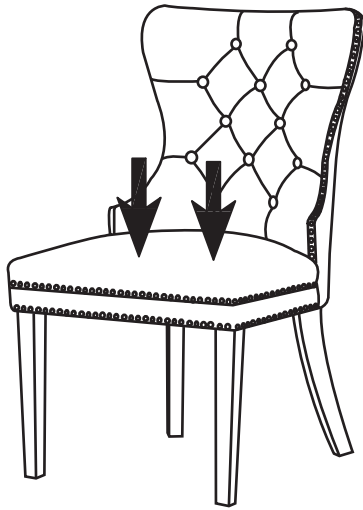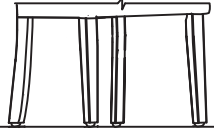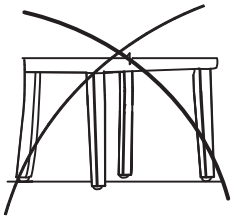


Put chair in the upright position and **SIT ON THE CHAIR** to press downwards on the seat pad ensuring that all 4 feet touch the ground and chair is leveled.

Proceed to tighten all screws making sure the chair remains level when tightening.

Check that all screws are tight on a regular basis to ensure chair remains level and secure.

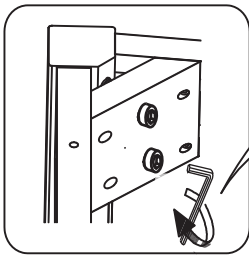

100%

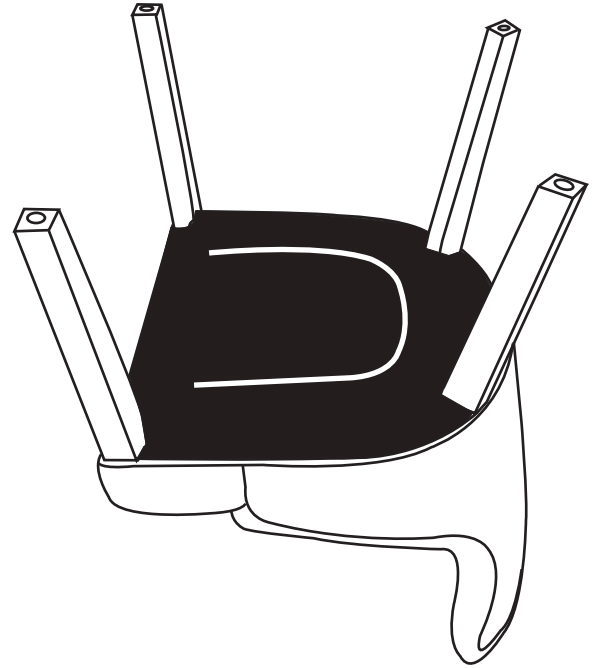

4

