

# Wall Mounted Vanity Installation Instructions

Scan to watch the installation video  
<https://delivr.com/2c5ve>



## IMPORTANT:

Before you begin, make sure you familiarize yourself with all the parts and fully read the instructions.

## CUSTOMER SERVICE:

Toll free customer help line available weekdays between 7:00am and 6:00pm Central Time at 800-463-0660.

## TOOLS NECESSARY:

Drill, drill bit, tape measure, level, non-acidic silicone, pencil and screwdriver.

## PARTS IDENTIFICATION:

### 24" - 48" Wall Mounted Vanities


Vanity Base	1 pc
Vanity Top (48" Only)	1 pc
Vanity Basin	1 pc
Wall Mounting Brackets	2 pc
Mounting Bracket Screws	6 pcs

### 60" Wall Mounted Vanities

Vanity Base	1 pc
Vanity Top	1 pc
Vanity Basin	2 pcs
Wall Mounting Brackets	4 pcs
Mounting Bracket Screws	12 pcs


## HOLLOW WALL INSTALLATION

### STEP 1

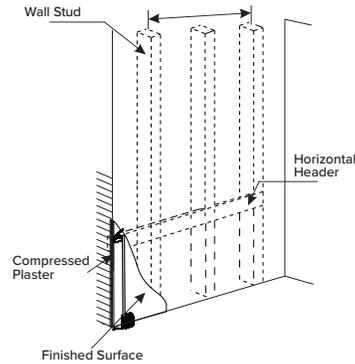


Install in-wall horizontal header at framing stage factoring in desired height of vanity, including vanity sink.

### STEP 2

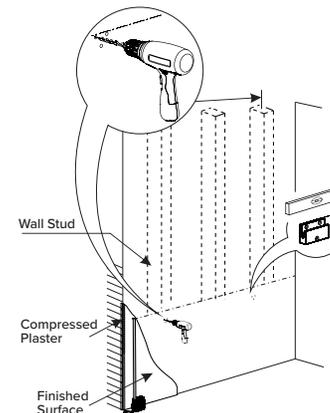

Use level to mark holes for mounting brackets, proceed to drill holes


### STEP 3

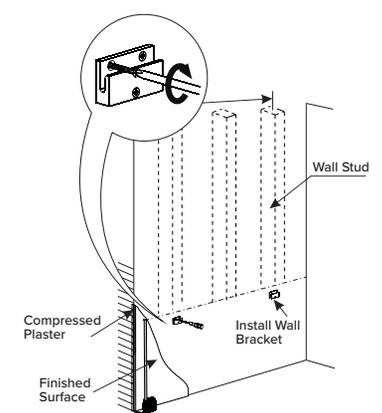

Install mounting brackets using screws provided. Proceed to Step 4.


## CONCRETE WALL INSTALLATION

### STEP 1

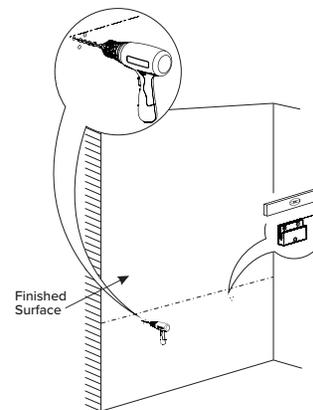

Use level to mark holes for mounting brackets, proceed to drill holes

### STEP 2

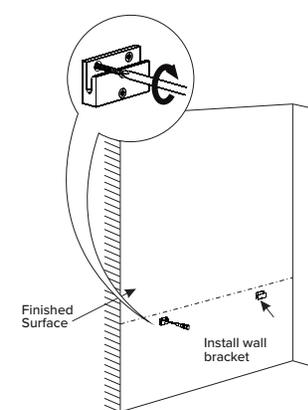


Install mounting brackets using screws provided. Proceed to Step 4.

#### STEP 4


To avoid damage, remove cabinet drawers. Then cover the drawer slides with plastic sheet to prevent debris from getting into the slides.

#### STEP 5

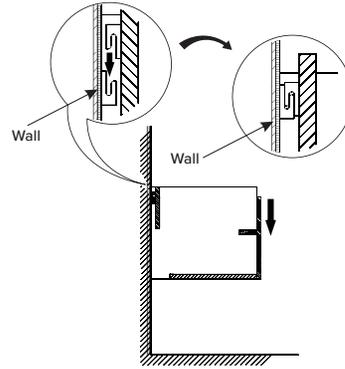

Align the preinstalled brackets on the back of the vanity to the previously installed wall brackets and hang the vanity.

#### STEP 6

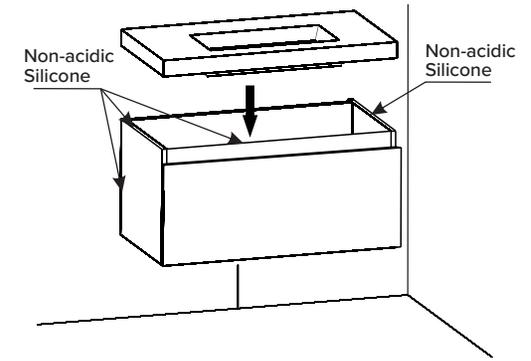

Using a non-acidic kitchen & bathroom silicone, install the basin to the vanity base.

#### STEP 7

The unit must be sealed along the back edge of the top and down the side against the wall with non-acidic kitchen & bathroom silicone. Seal around the cabinet with silicone.

#### STEP 8

Please note when installing an undermount basin or counter basin onto a stone top, they must be siliconed on. When the silicone has dried, ensure you caulk around the basin and stone top.

#### STEP 9

The vanity is now ready for plumbing installation.

### Care Instructions

#### Door and Cabinet Care:

Regular cleaning with a damp cloth is sufficient. Never use strong detergents or abrasive cleaners as this may damage the surface finish of your furniture.

#### Glass Care:

When cleaning glass panels or mirrors, use a cloth with approved window/glass cleaner. Do not use washing powders or any other substance containing abrasives, as these will scratch the glass. Bathroom furniture may deteriorate if subjected to heavy water spillage or prolonged condensation.

#### Solid Surface Countertop/Basin Care:

For general cleaning, just use soap and water or any ammonia based household cleaners. For stubborn stains, use a mild abrasive cleaner or a diluted solution of bleach. To remove light scratches and to renew the finish, use a combination of mild abrasive and a "Kitchen Scrub" pad or the equivalent pad. Matte Finish: To remove deep scratches and cuts, use a 600 grit sandpaper equipped in the package using a sanding block. Sand until the scratch disappears. Be sure to feather out the area so that you do not leave a low spot in your counter top. Next, restore the finish by using a mild abrasive cleaner and a "Kitchen Scrub" pad or the equivalent pad.