


CONVENIENCE CONCEPTS

Key west TV Stand Console

151317

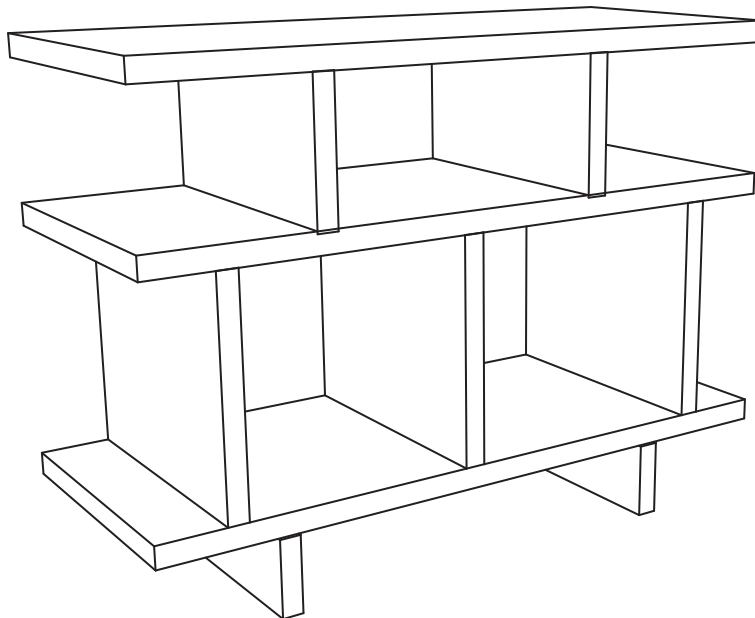

ASSEMBLY INSTRUCTIONS

We have designed our furniture with you, the customer in mind. Our clear, easy to follow, step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.









Please do not return to the store

Broken or missing parts?


Need help with assembly?

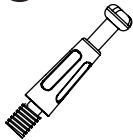If you have any questions just call 1-800-468-6447 or email us at parts@convenience-concepts.com

Hardware List


A	B	C	D	E	F
					
Cambolt (18pcs)	Camlock (18pcs)	Wood dowel (26pcs)	Screw (10pcs)	Allen Wrench (1pcs)	Plastic Cap (14pcs)

Panel List

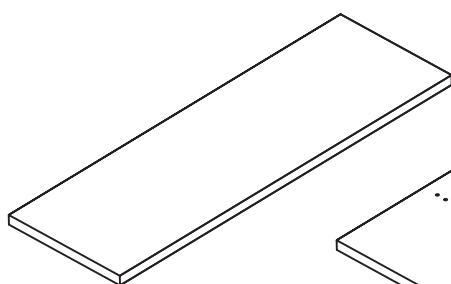


①

Top Panel (1pcs)

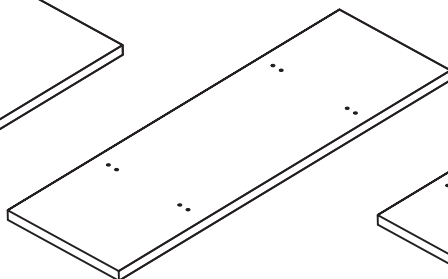


②

Middle Panel (1pcs)

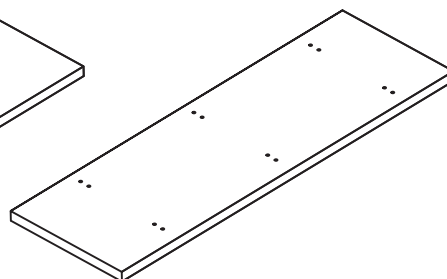


③

Bottom Panel (1pcs)

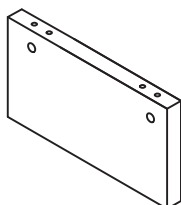


④

Top side panel (2pcs)

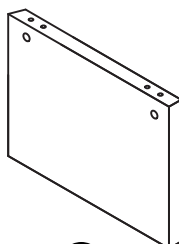


⑤

Middle side Panel (3pcs)

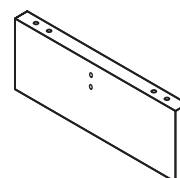

⑥





Bottom side Panel (2pcs)

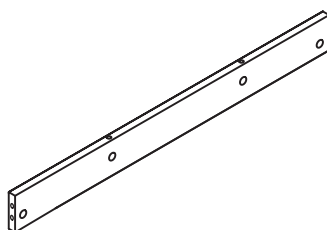


⑦

Support Panel (1pcs)

Assembling the unit with camlocks and wood dowels.

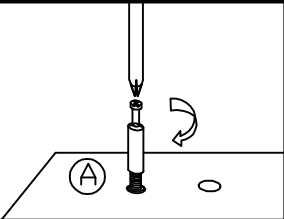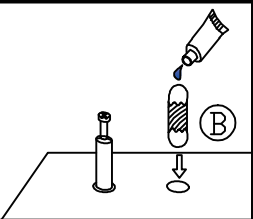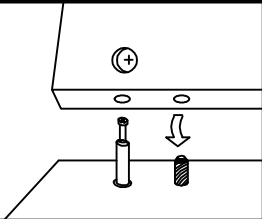
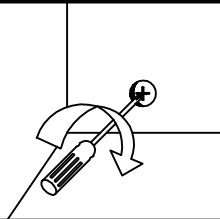
			
<p>Gently screw cam bolt into the threaded anchor.</p>	<p>Lightly glue one end of the wood dowel and tap halfway into hole.</p>	<p>Lightly glue wood dowel and connect to second panel by inserting dowels into holes.</p>	<p>Screw the camlock firmly into locked position.</p>

Hardware List

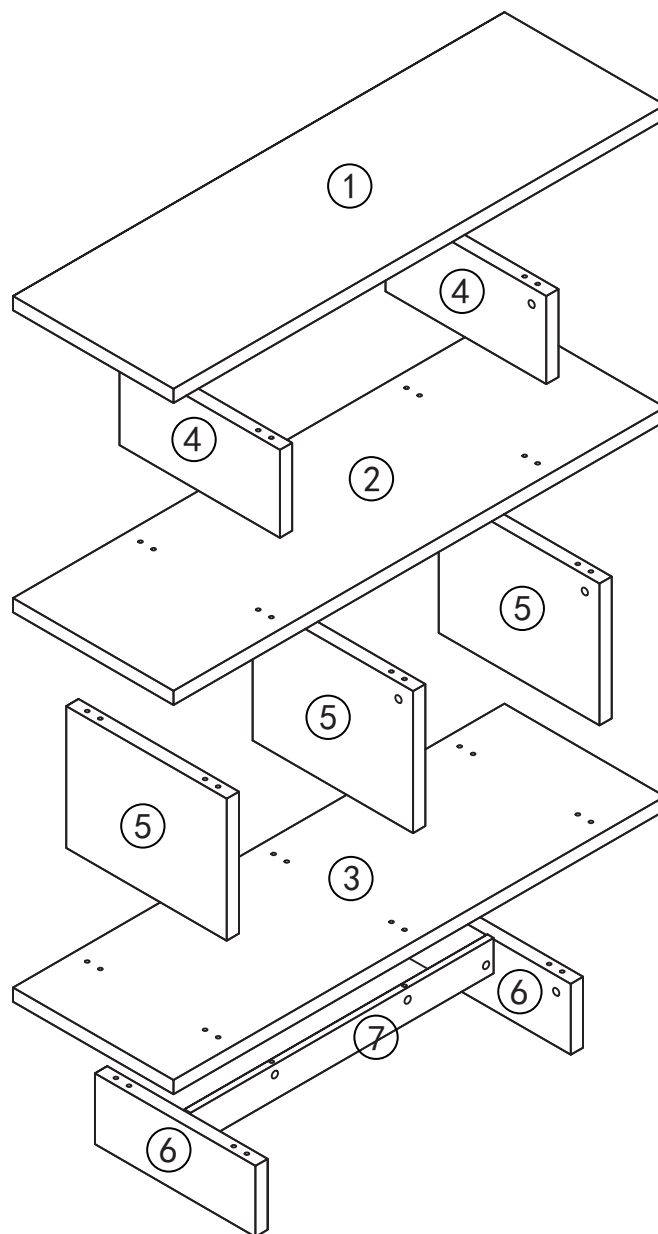

Step 1

1. Screw cambolts **A** and insert wood dowels **C** into bottom side panels **6**.
2. Insert camlocks **B** into support panel **7**.
3. Connect side panels **6** to support bar **7** by gently tightening camlocks **B**.

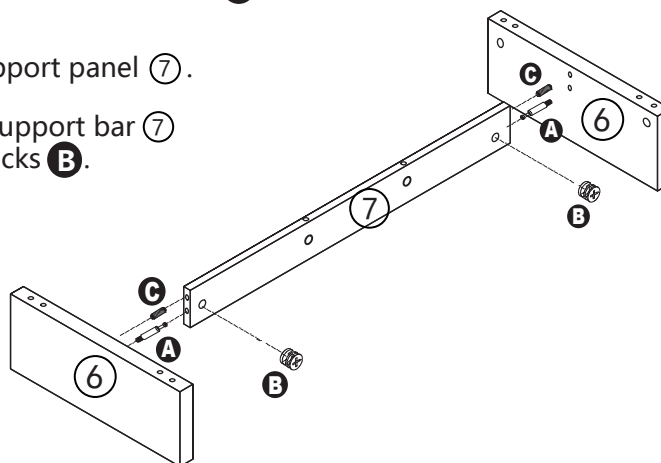

x2





x2



x2

Step 2

1. Screw cambolts **A** and insert wood dowels **C** into bottom panels **3**.
2. Insert camlocks **B** into bottom support assembly as shown.
3. Connect bottom panel **3** to bottom support assembly by gently tightening camlocks.

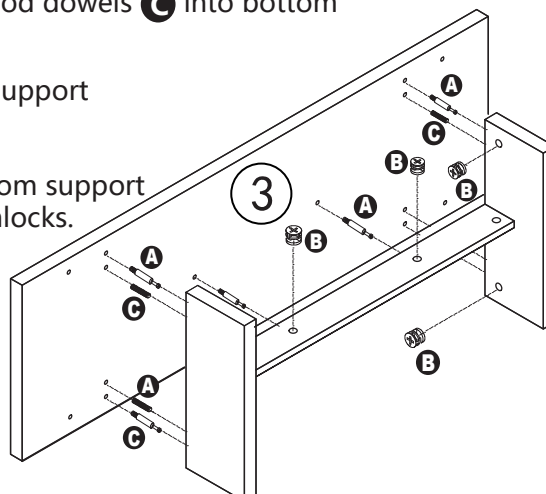

x6




x6



x4

Step 3

1. Connect the Middle side panels **5** to the assembly using wood dowels **C**, screws **D**, and allen wrench **E**.

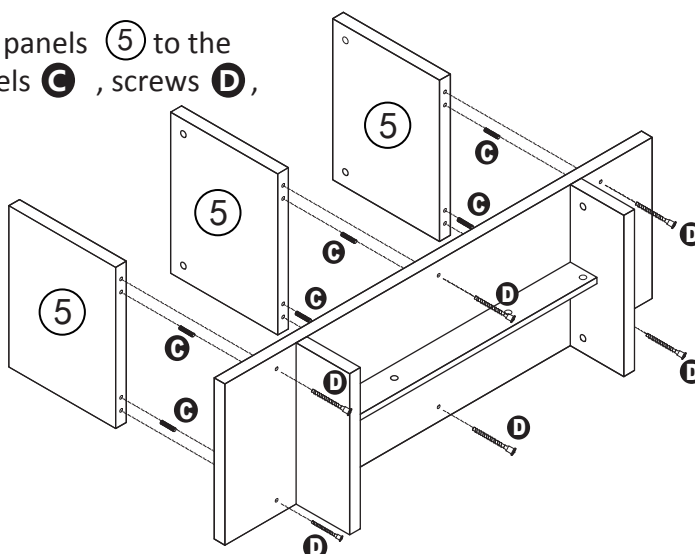

x6





x1



x6



Step 4

1. Screw cambolts **A** and insert wood dowels **C** into middle panel **2**.
2. Insert camlocks (B) into middle side panels **5**, as shown.
3. Connect middle panel **2** to assembly by gently tightening camlocks.

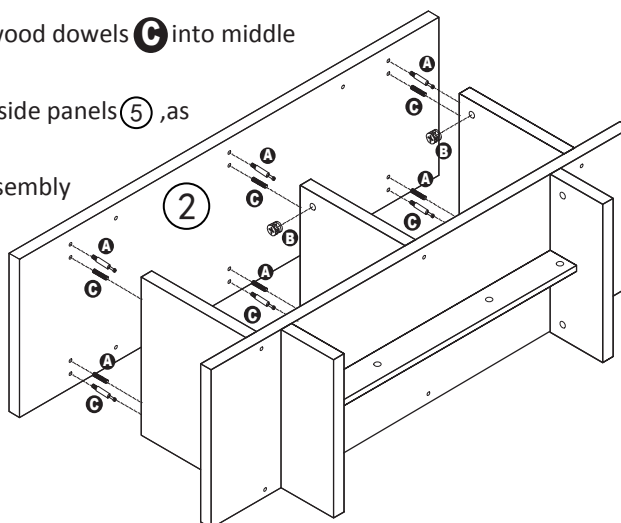

Step 5

1. Connect the Top side panels **4** to assembly using screws **D**, wood dowels **C**, and allen wrench **E**.

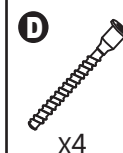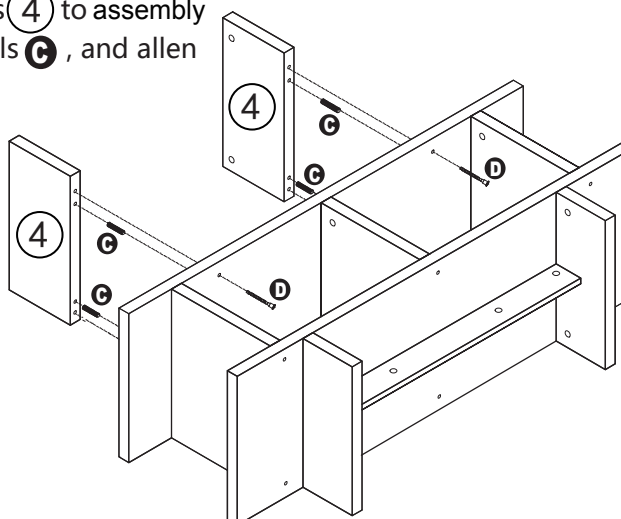

Step 6

1. Screw cambolts **A** and insert wood dowels **C** into top panel **1**.
2. Insert camlocks (B) into top side panels **4**.
3. Connect top panel **1** to assembly by gently tightening camlocks.
4. Cover camlocks with plastic caps **F**.

