




# Assembly Instruction

INSTRUCTION DE MONTAGE  
MONTAGEANLEITUNG  
SAMLEVEJLEDNING

**MAKE SURE THE LETTERS  
MATCH BEFORE ASSEMBLING  
NEED ASSEMBLY ASSISTANCE?  
CALL US AT 866-814-8325**

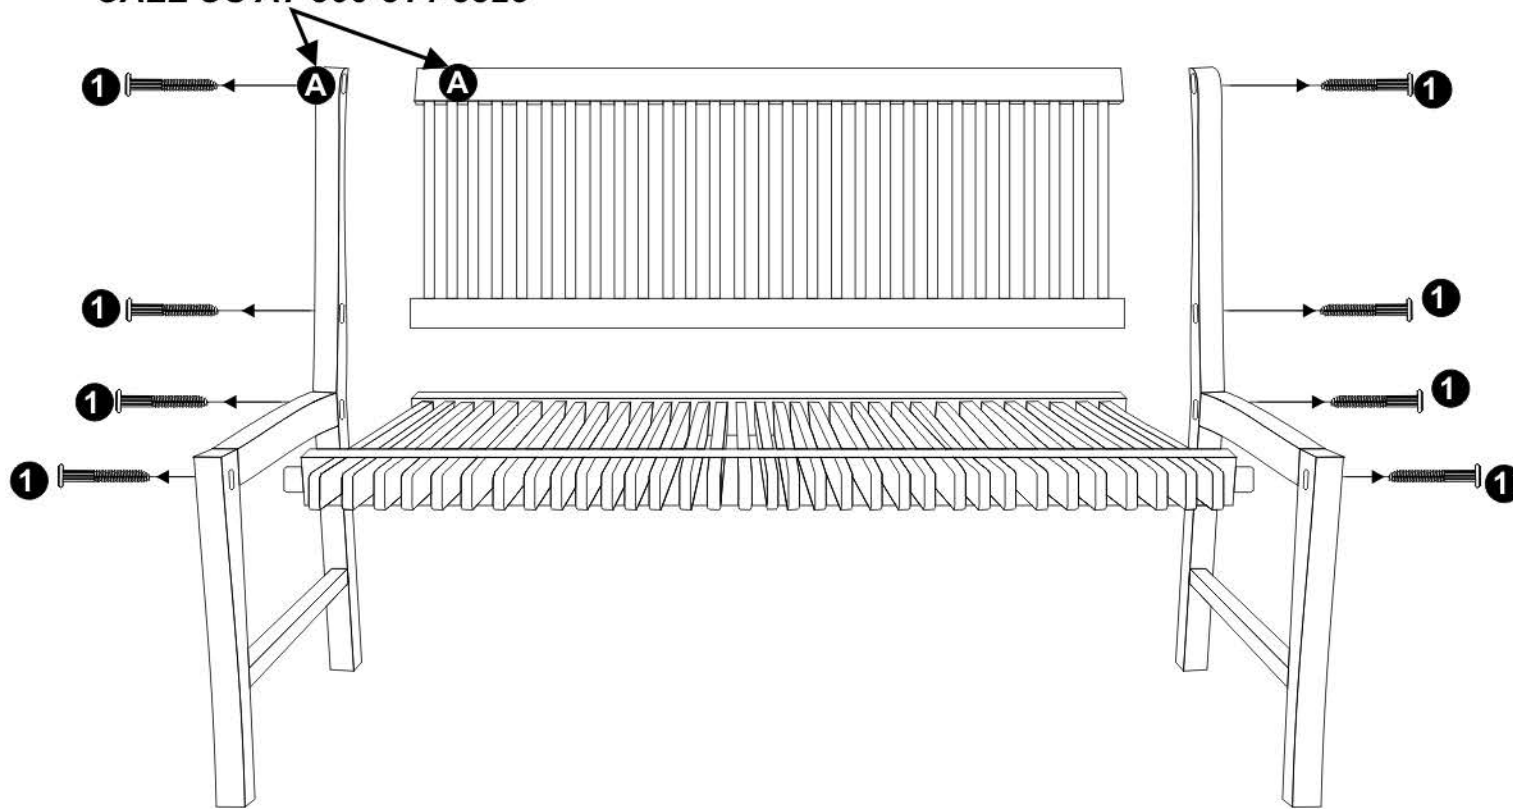


***Make sure to use Gorilla Glue (Not Included)  
on all wood joints before assembly***

Code

**HJ426**

Hardware



Tool



Socket Wrench 4m/m Ht

Total Section

**4 Section**