For Style 1054P28 Assembly Instruction Sheet #IS-1054P28


is Required: Flathead screwidiver, Phillips screwidiver, pilors, who calters, who shippers, electrical tops, ealerly glasses.

8 Sources (11) 120V LED 46W DIMBASE (2000K)
mated Assembly Time: 10-20 minutes
accident Mariely Time: 10-20 minutes
accident Mariely Time: 10-20 minutes
accident Mariely and Impact all puris before beginning installation. Check package content list and diagrams below to be sure all puris are
accident Mariely are miseing or duraged, do not effectly to essentials, index, or operate the fidure. Context customer services for replacement.

∆Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electricism if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the tidure. We strongly recommend that a licensed, professional electricism perform the installation.

Disconnect fluture from power source before reptecing bulbs. Make sure bulbs are given sufficient time to cool before removal.

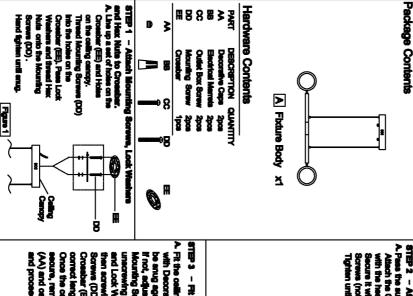

A. Pass the supply wires through the Crossber (EE).

Attach the Crossber (EE) to the Outet Box (CC) STEP 2 - Attach Crossbar to Outlet Box. with the head of the Green Ground Screw facing you. Secure It with Outlet Box Screws (not included). ighten until snug Supply Wires with Outlet Box Screws Ground Wire Figure 2 Outlet Box m 8

A. Fit the ceiling canopy to Mounting Screws (DD) and secure STEP 3 — Fit Calling Canopy to Crossber Assembly with Decorative Caps (AA). Note: The ceiling canopy should be anug against the ceiling and the Decorative Caps (AA). not, adjust the length of the founting Screws (DD) by

Once the ceiling canopy is secure, remove the Decorati (AA) and ceiling canopy and proceed to Step 4. unacrewing the Hex Nut and Lock Washer and Screws (DD) in or out of the Crossbar (EE) until the orrect length is achieved nen screwing Mounting ative Cape

