

ASSEMBLY INSTRUCTIONS

(For LD777-9)

WARNING!




- This chair has a 250 lbs weight capacity.
- Hang cushion over chair frame to dry if it gets wet to prevent mold/mildew.

ATTENTION:

1. Please read these instructions carefully before assembly.
2. Aluminum is soft metal over tighten may strip threads or break the part.
3. DO NOT use power tools.
4. Check parts against the parts list to make sure you have all parts needed for proper assembly.
5. Familiarize yourself with the inventory of parts and the accompanying illustrations to ensure safe and proper assembly.

Assembly steps:

1. Place the bed(A) section on a soft surface, then, loosely attach the left arm(C) and the bed section with bolts(H), big flat washers(I) and big lock washers(J), Do not over tighten.
Attach the adjuster bar(G) to the left arm with bolts(K) and pvc cover(L).
 2. Attach the axle(E) and put the backrest(B) into the left arm.
 3. Assemble the wheel(F) onto the axle, tighten with the flat washers(N), small lock washers(O) and bolts(M).
 5. Attach the right arm(D) to the bed section as the same way, tighten all the bolts.
- Note: You could change the additional adjuster feet(Q) to keep the sunbed level.
- Warning : DO NOT clean the product with acid or alkaline washing liquid.

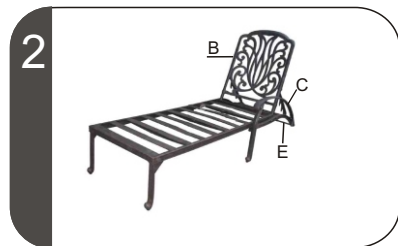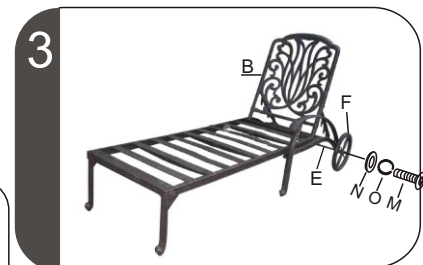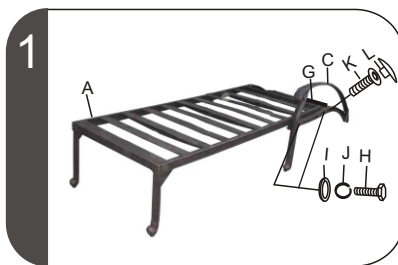

Parts list	Parts picture	Description	Q'ty	Parts list	Parts picture	Description	Q'ty
A		Bed	1	H		Bolt (M8*30)	6
B		Backrest	1	I		Big flat washer (M8)	6
C		Left arm	1	J		Big lock washer (M8)	6
D		Right arm	1	K		Bolt (M6*35)	2
E		Axle	1	L		PVC cover	2
F		Wheel	2	M		Bolt (M6*15)	2
G		Adjuster Bar	1	N		Small flat washer (M6)	2
S		FOOT LEVELER	Factory already assembled	O		Small lock washer (M6)	2
T		Cushion	1	P		Wrench	1
				Q		Adjuster feet	2
				R		Wrench	1

* DO NOT OVER TIGHTEN Made in China * NO POWER TOOLS

* NO SOCKET DRIVERS

