

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

Part List

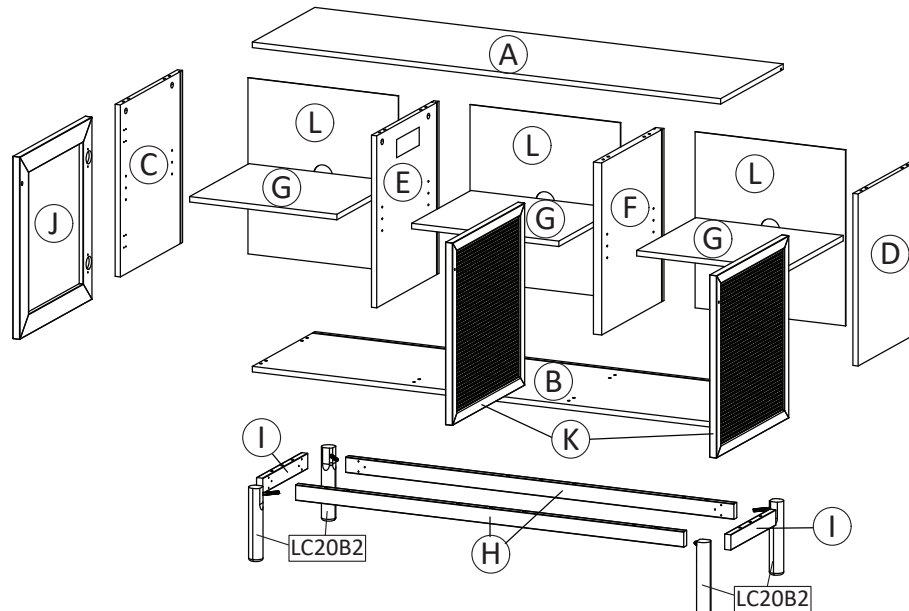


SAFAVIEH

FURNITURE

Model# MED9618

Product Dimensions: 54"Wx16"Dx28"H

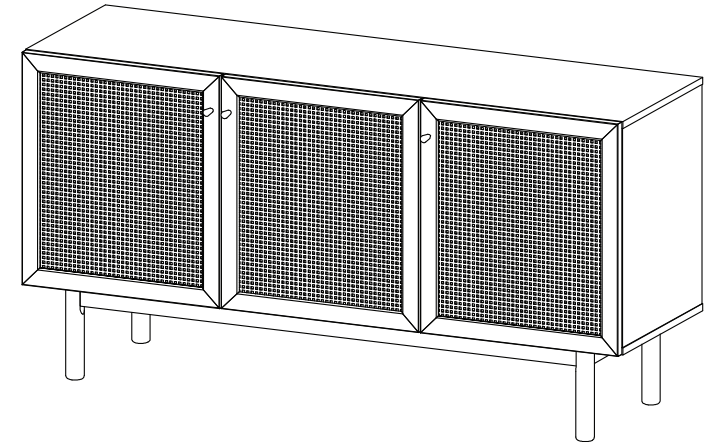























WARNING :

WEIGHT CAPACITY: 75 LBS.

Warning : Do not stand on media stand.

Warning : Do not over torque bolts.

Hardware List

<div>HW1x8</div> <div></div> <div>Ø 6 x 35 mm</div>	<div>HW2x8</div> <div></div> <div>Ø 15 mm</div>	<div>HW3x26</div> <div></div> <div>Ø 8 x 30 mm</div>	<div>HW4x8</div> <div></div> <div>M 7 x 50 mm</div>	<div>HW5x2</div> <div></div>
<div>HW6x10</div> <div></div> <div>M 6.4 x 53 mm</div>	<div>HW7x3</div> <div></div> <div>M 4 x 25 mm</div>	<div>HW8x6</div> <div></div> <div>Ø 15 mm</div>	<div>HW9x36</div> <div></div> <div>M 4.5 x 12.5 mm</div>	<div>HW10x4</div> <div></div>
<div>HW11x3</div> <div></div>	<div>HW12x1</div> <div></div>	<div>HW13x12</div> <div></div>	<div>HW14x24</div> <div></div> <div>M 4 x 16 mm</div>	<div>HW15x12</div> <div></div>
<div>HW16x12</div> <div></div> <div>M 3.5 x 15.5 mm</div>	<div>HW17x14</div> <div></div> <div>M 6 x 12.5 mm</div>	<div>HW18x3</div> <div></div>	<div>HW19x2</div> <div></div>	<div>HW HS35Ax6</div> <div></div>
<div>HW BC410x4</div> <div></div>	<div>HW US11x1</div> <div></div>			

Part List & HW For Multi-Box Items

Piece	Description	Qty
A	Top Board	1
B	Bottom Board	1
C	Side Board Left	1
D	Side Board Right	1
E	Center Board Left	1
F	Center Board Right	1
G	Adjustable Shelf	3
H	Bottom Skirt 1	2
I	Bottom Skirt 2	2
J	Door Left	1
K	Door Right	2
L	Back Board	3
LC20B2	Leg	4

Piece	Description	Qty
HW1	Cambolt	8
HW2	CamLock	8
HW3	Dowel	26
HW4	Screw M 7 x 50 mm	8
HW5	Allen Key	2
HW6	Screw M 6.4 x 53 mm	10
HW7	Screw M 4 x 25 mm	3
HW8	Screw Cap	6
HW9	Screw M 4.5 x 12.5 mm	36
HW10	Flange Nut	4
HW11	Handle	3
HW12	Wrench	1
HW13	Shelf Support	12
HW14	Screw M 4 x 16 mm	24
HW15	Wedge	12
HW16	Screw M 3.5 x 15.5 mm	12
HW17	Screw M 6 x 12.5 mm	14
HW18	Hole Cable	3
HW19	Screw Cap	2
HW HS35A	Hinge	6
HW BC410	Corner Brace	4
HW US11	Anti-Deflection Bar	1

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

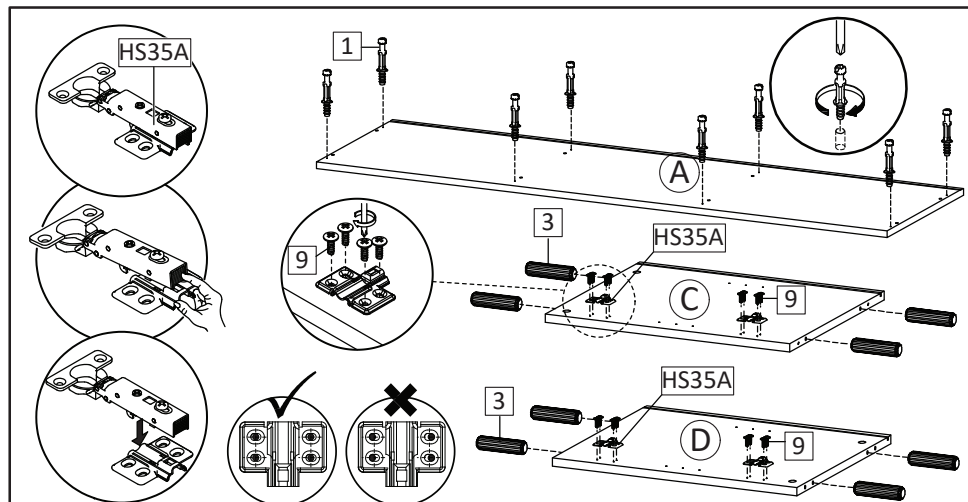


STEP1: Insert Cambolt (HW1) into Top Board (A). Insert Dowel (HW3) into Side Boards (C&D). Prepare Hinge (HW HS35A), Remove the Mounting Plate by pressing the backside of Hinge (HS35A). Install Mounting Plate with Screw (HW9) on Side Boards (C&D). Set aside and indicate the remaining part of the hinge as (HW HS35A) to avoid any mix up.

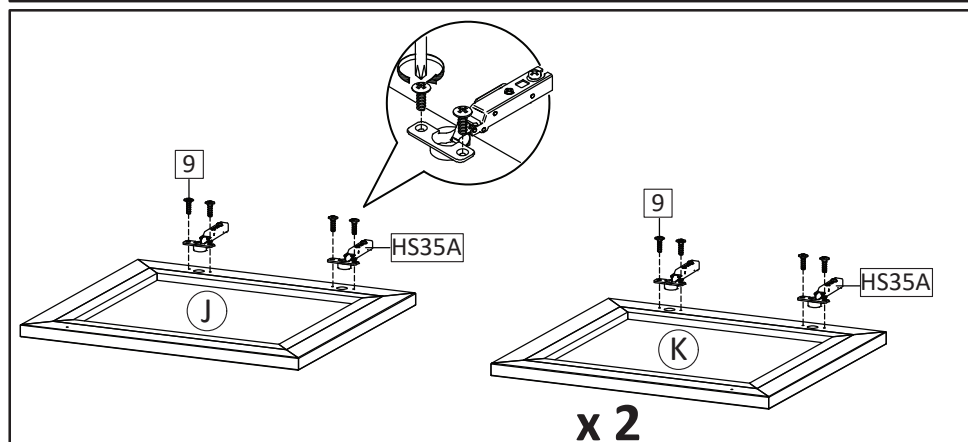

STEP3: Install remaining part of Hinge (HW HS35A) into Door Left (J) and Door Right (K) position as shown in picture. Secure with screws M4.5x12.5mm (HW9).

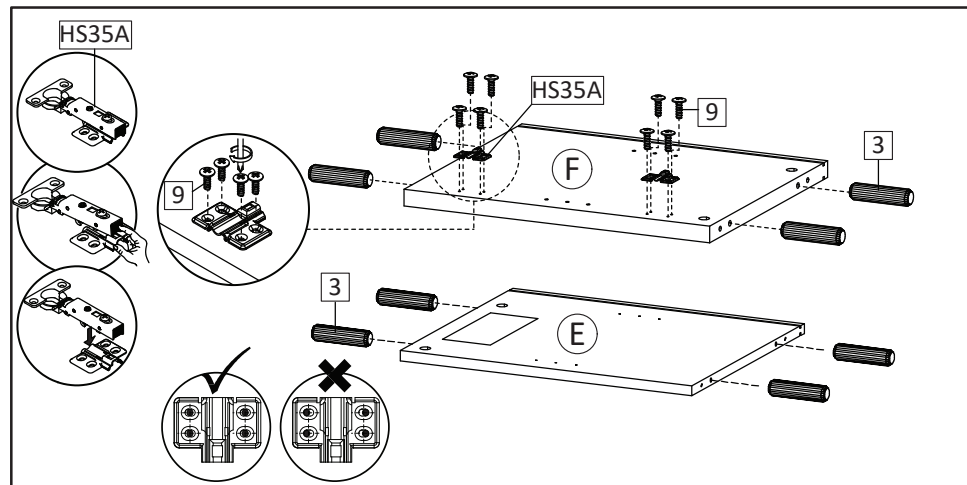

STEP2: Insert Dowel (HW3) into Center Board (E&F). Prepare Hinges (HW HS35A), Remove the Mounting Plate by pressing the back of the Hinge (HW HS35A). Attach the Mounting Plate with M4.5x12.5mm Screws (HW9). As shown in Step 1.

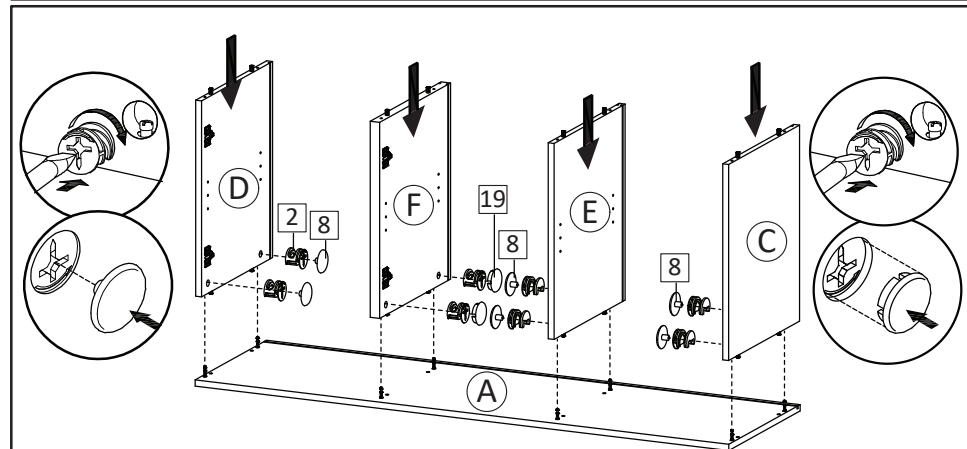

STEP4: Attach Side Boards (C&D) and Center Boards (E&F) into Top Board (A). Insert the Camlock (HW2) then tighten using a screwdriver. Place the Screw Caps (HW8&HW19) over the camlock as shown.

PREPARATION





*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

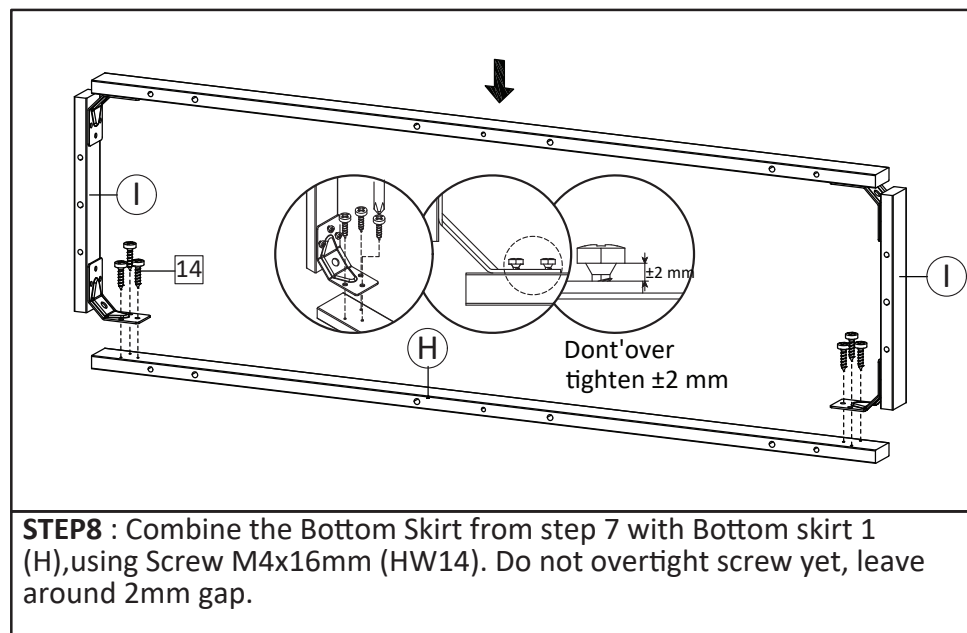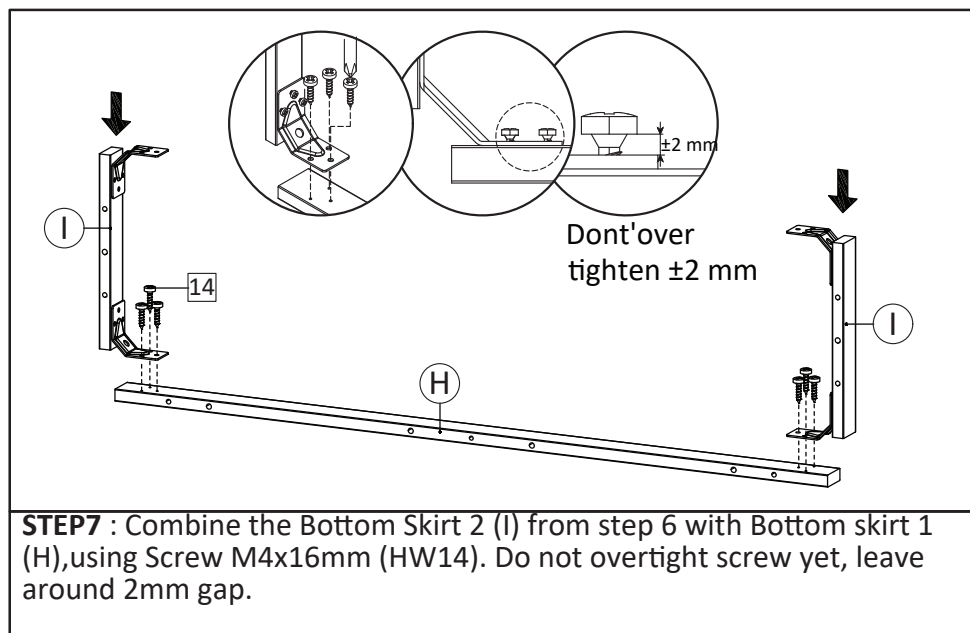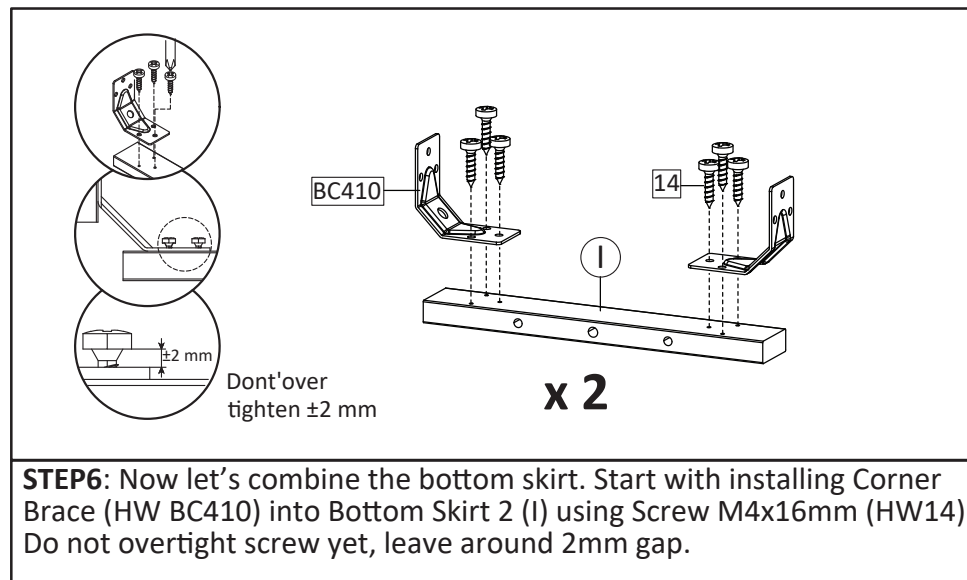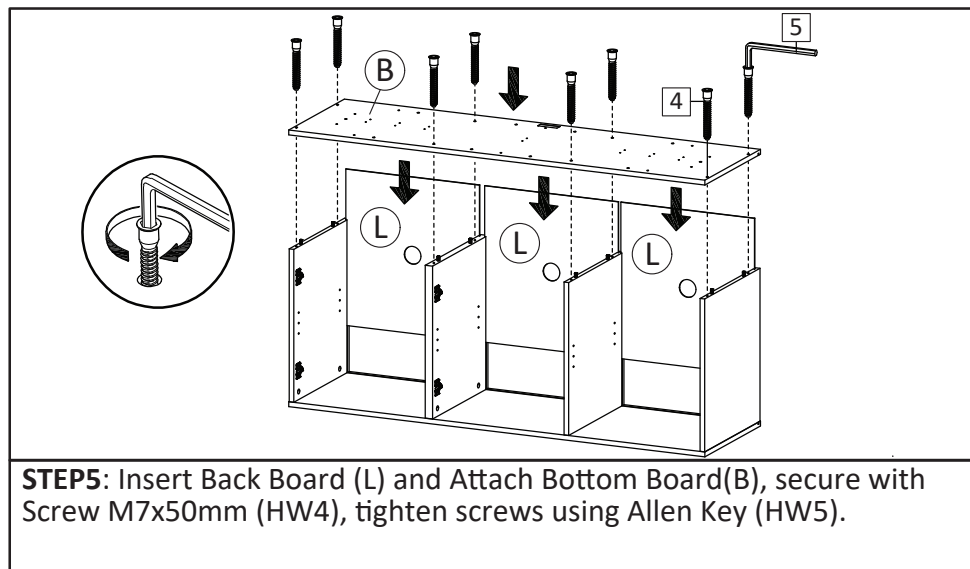

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

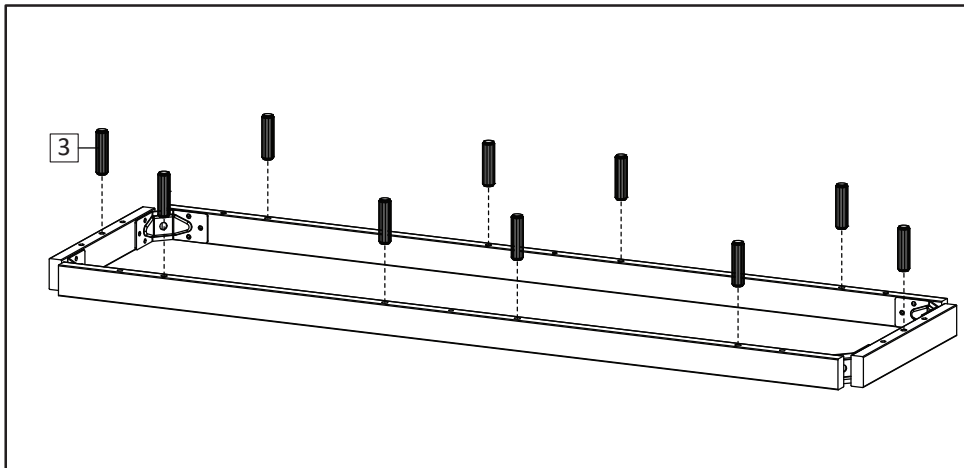


STEP9: Insert Dowel (HW3) into assembled Bottom skirt from previous step.

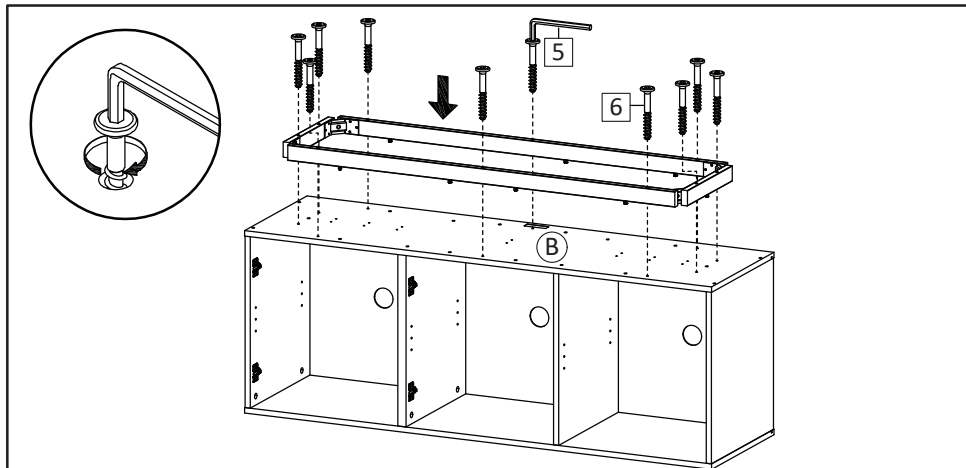

STEP10: Attach the assembled Bottom Skirt onto Bottom Board (B) secure with Screw M6.4x53mm (HW6) using Allen Key (HW5).

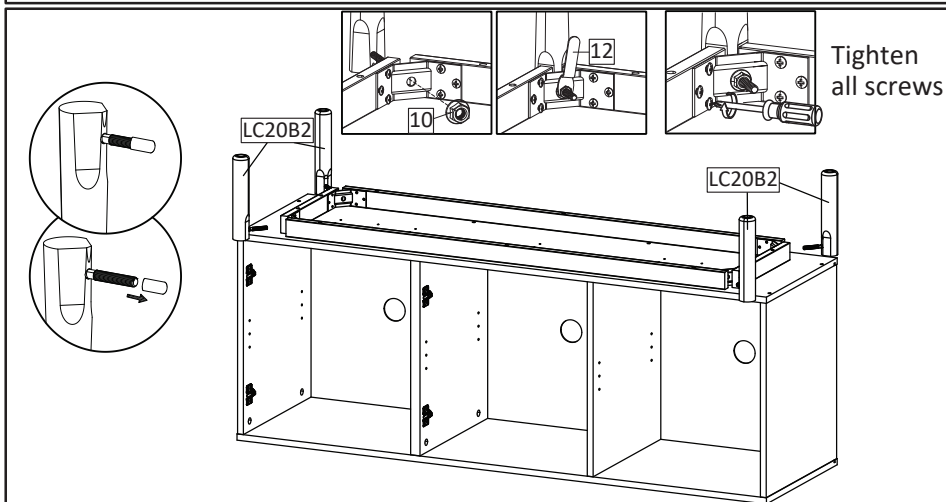

STEP11: First, let's fixing the leg by inserting leg to Corner Brace, Insert Flange Nut (HW10) first into the hanger bolt of leg, tighten all the Flange Nut using provided Wrench (HW12). Second, after Ensuring that all legs has been tightened, continue with tighten all screws on the corner brace.

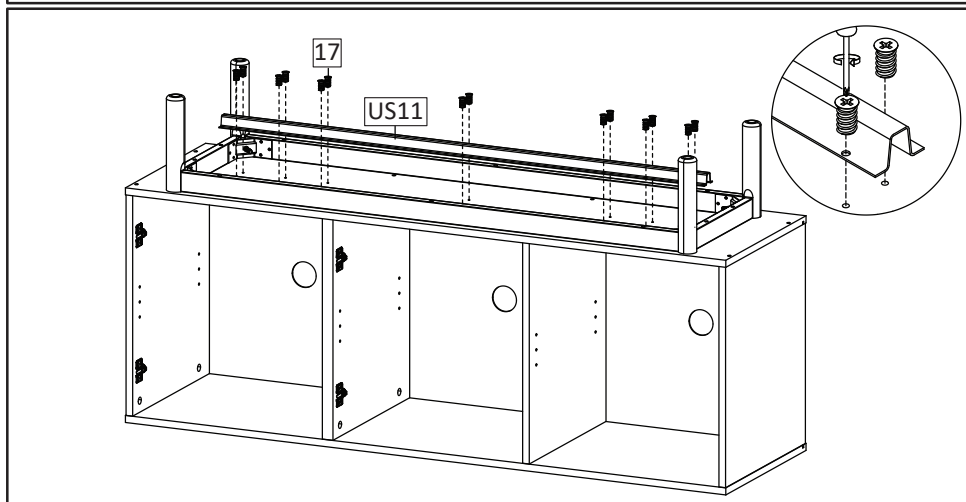

STEP12: Place Anti-Deflection Bar (HW US11), secure with screw M6x12.5mm (HW17), tighten using screwdriver.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

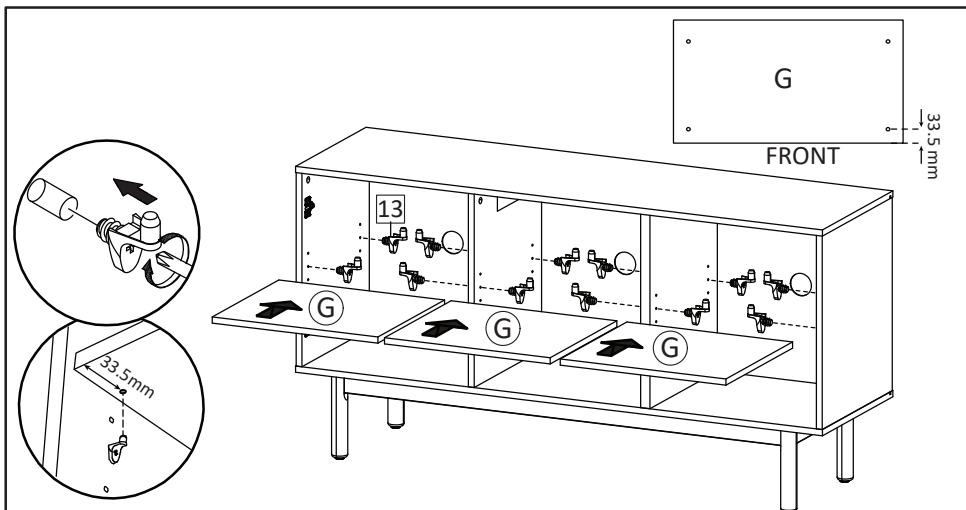


STEP13: After bringing the product upright, insert Shelf Support (HW13) into the holes on Side board & Center board, on the desired level. Then place the Adjustable Shelf (G) by inserting the hole on the shelf into the shelf support.

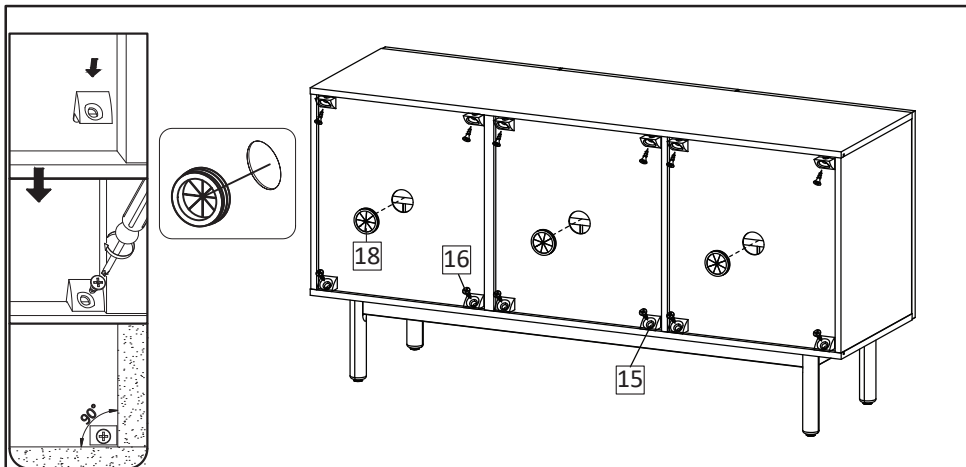

STEP15: Use Wedge (HW15), Screw M3.5x15.5mm (HW16) to tighten the back of media stand by using screwdriver. Please align the top board and bottom board in 90° position against the side board, before securing the wedges (HW15). Insert Hole Cable (HW18) as shown in picture.

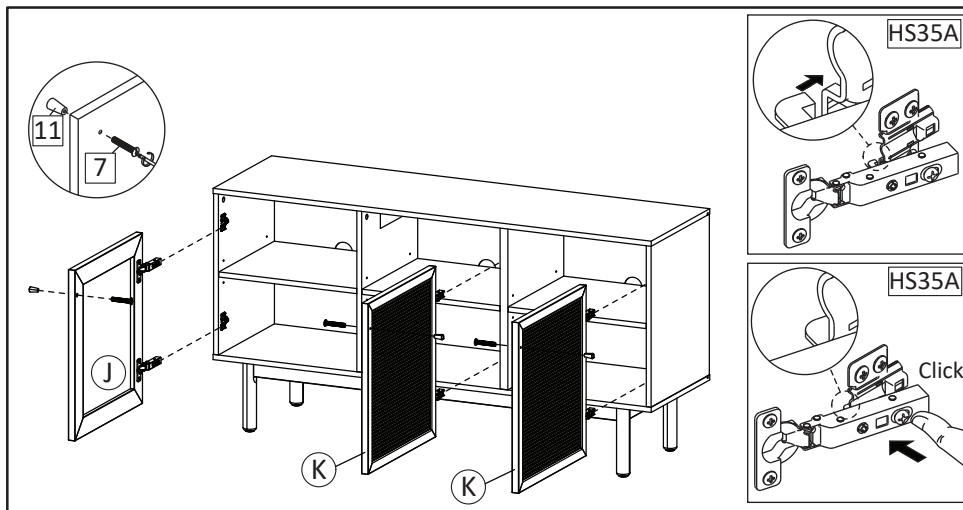

STEP14: Install Door Left (J) and Door Right (K) into Side Board Left, Side Board Right and Center Board. Please review above images carefully. Insert Handle (HW11) Secure with Screw M4x25mm (HW7) into Doors. Refer to separate page to adjust hinges.

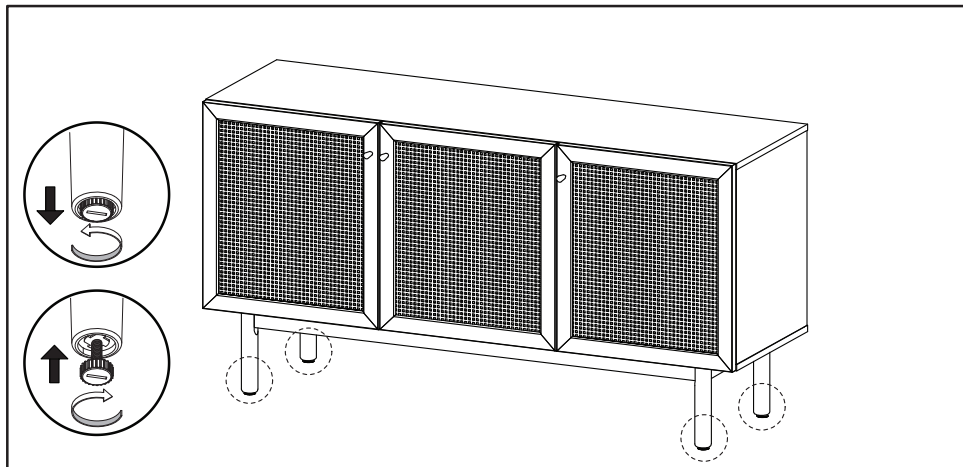






STEP16: Place your furniture on level floor. The legs come with adjustable leveler, adjust it as needed until your furniture stands steadily on the floor. Assembly is Complete.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE



Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

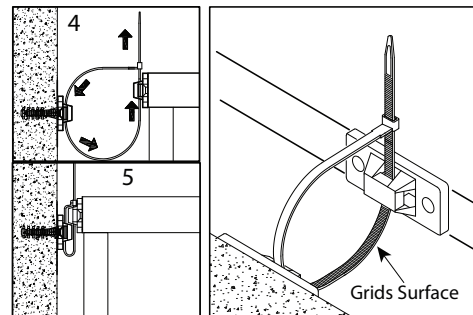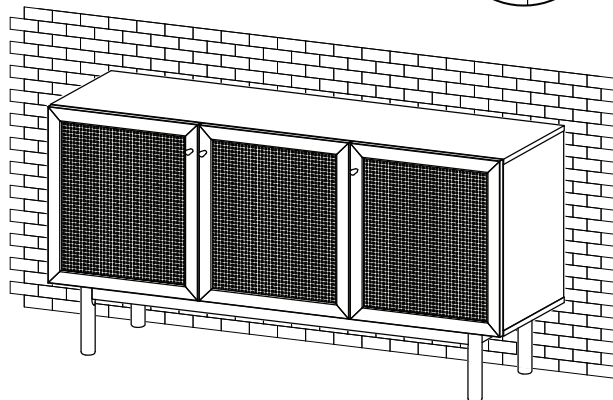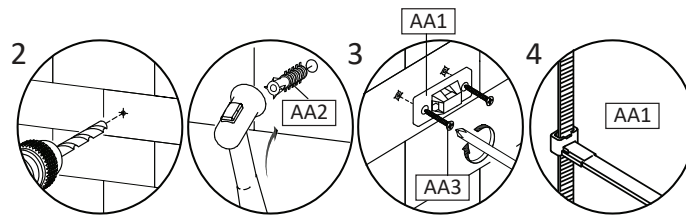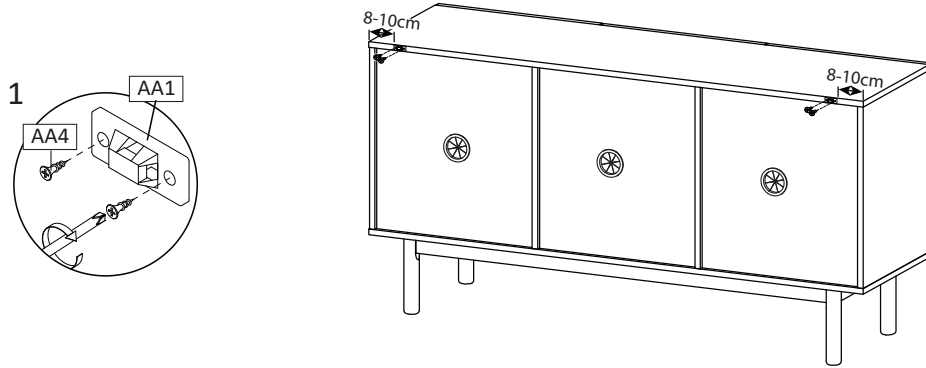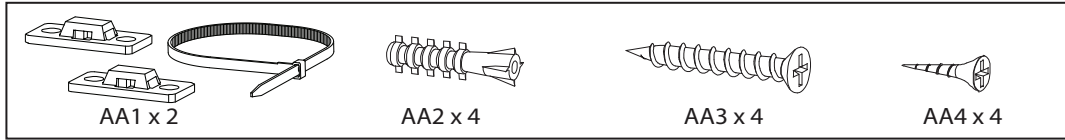


HOW TO ADJUST HINGES

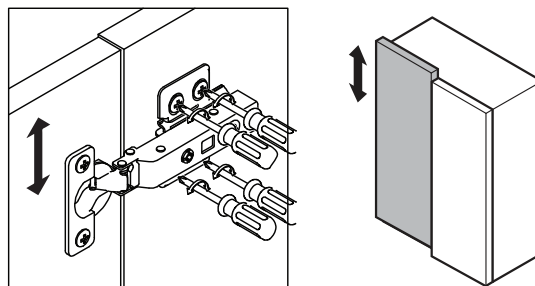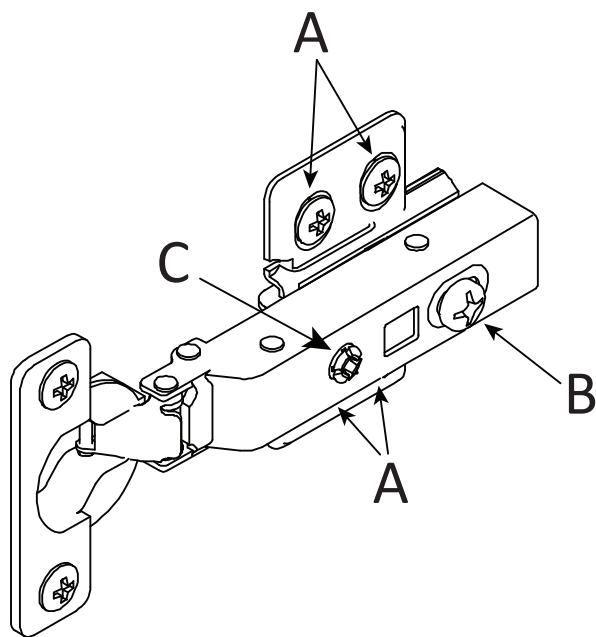


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

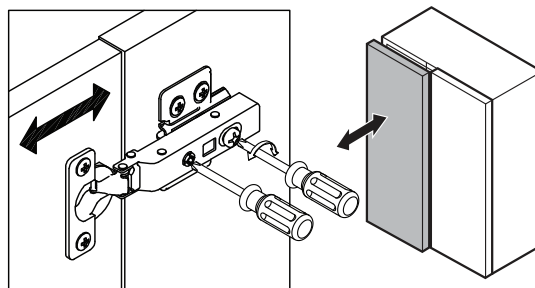

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

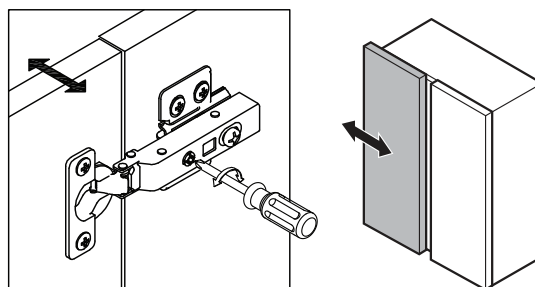

To adjust side ways.

Turn screw "C" on BOTH hinges on each door.