




# ASSEMBLY INSTRUCTIONS

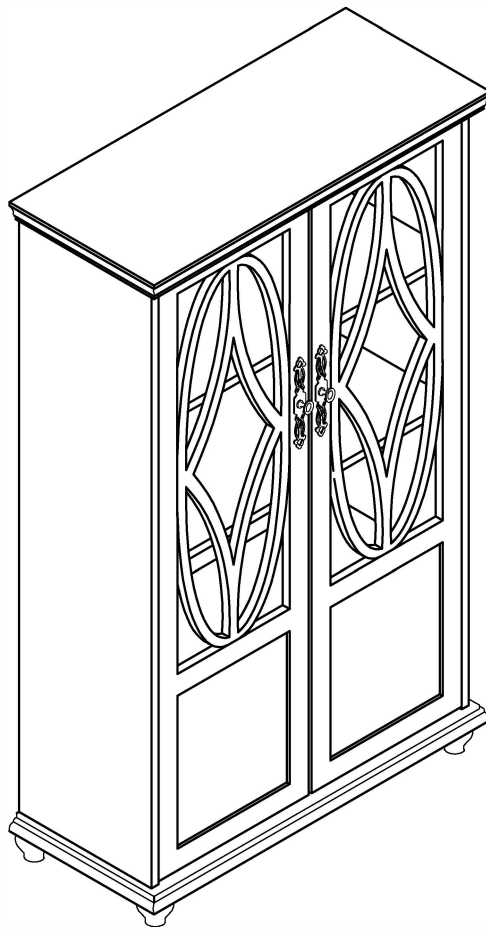

## NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

## To use a cam lock: (Please read below instructions before assembling)

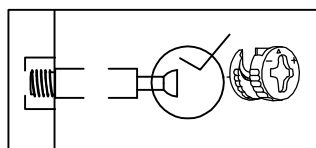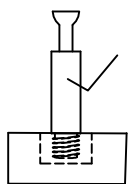

1. Insert cam screw into hole as shown in diagram A .

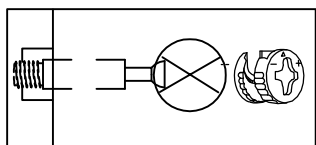
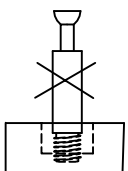


Diagram B

Make sure not to insert the cam screw:  
Too deep as shown in figure B as this will cause the  
cam screw to be misaligned and unable to  
interlock properly.




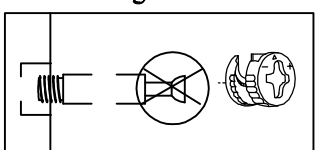


Diagram C

Also avoid inserting the cam screw too close to the  
surface of the hole as shown in figure C, as this will  
cause the cam lock to be too loose, and not interlock  
properly.

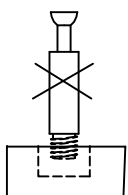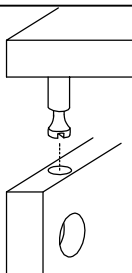


2. Connect the panels together.

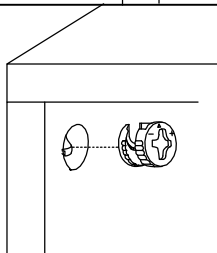

ARROW SIGN



3. When inserting the cam lock make sure the arrow  
of the cam lock faces the cam screw.

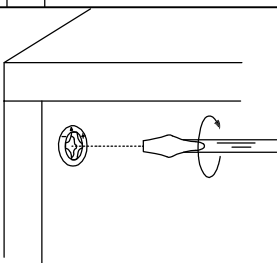






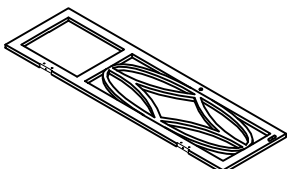
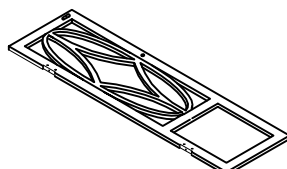
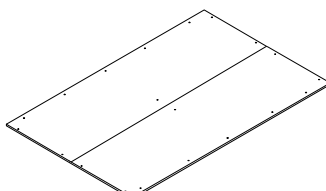
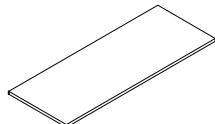
4. To tighten the cam lock turn the cam lock clockwise  
90-180 degree or until the arrow is facing opposite  
the place cam lock was inserted.

**NOTE: DO NOT USE AN AUTOMATIC  
SCREWDRIVER TO TIGHTEN CAM LOCKS.**











### Note:

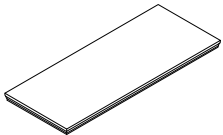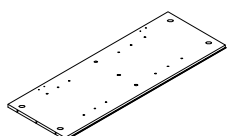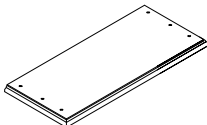- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.


# Part List

<b>A1</b> Quantity of 1  Top Panel	<b>A2</b> Quantity of 2  Side Panel	<b>A3</b> Quantity of 1  Bottom Panel	<b>A4</b> Quantity of 1  Middle Shelf
<b>A5</b> Quantity of 4  Leg	<b>A6</b> Quantity of 1  Door(left)	<b>A7</b> Quantity of 1  Door(right)	<b>A8</b> Quantity of 1  Back Panel
<b>A9</b> Quantity of 2  Adjustable Shelf			

# Hardware List


<b>B1</b> Quantity of 6  Wood Dowel	<b>B2</b> Quantity of 12  Cam-bolt	<b>B3</b> Quantity of 12  Cam-Lock	<b>B4</b> Quantity of 1  Magnet
<b>B5</b> Quantity of 4  Hinge	<b>B6</b> Quantity of 22  Screw	<b>B7</b> Quantity of 2  Bolt	<b>B8</b> Quantity of 8  Shelf Support
<b>B9</b> Quantity of 20  Screw	<b>B10</b> Quantity of 2  Door Handle		

## STEP 1

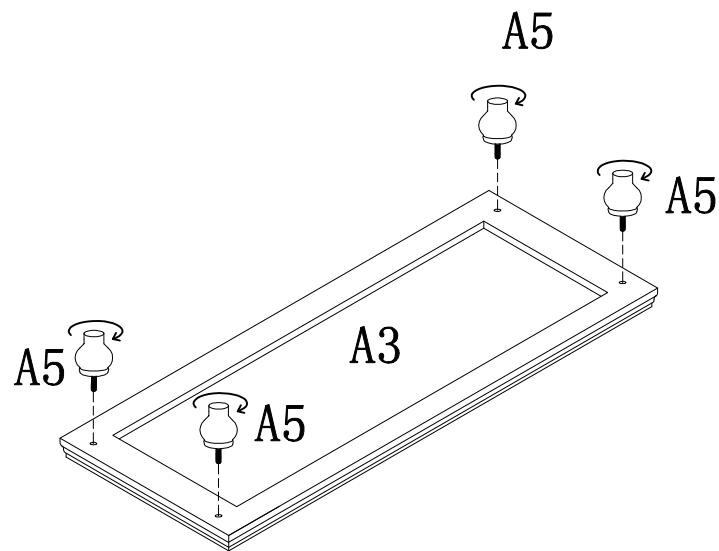


Assemble Legs (A5) to the bottom of Bottom Panel (A3).

## STEP 2

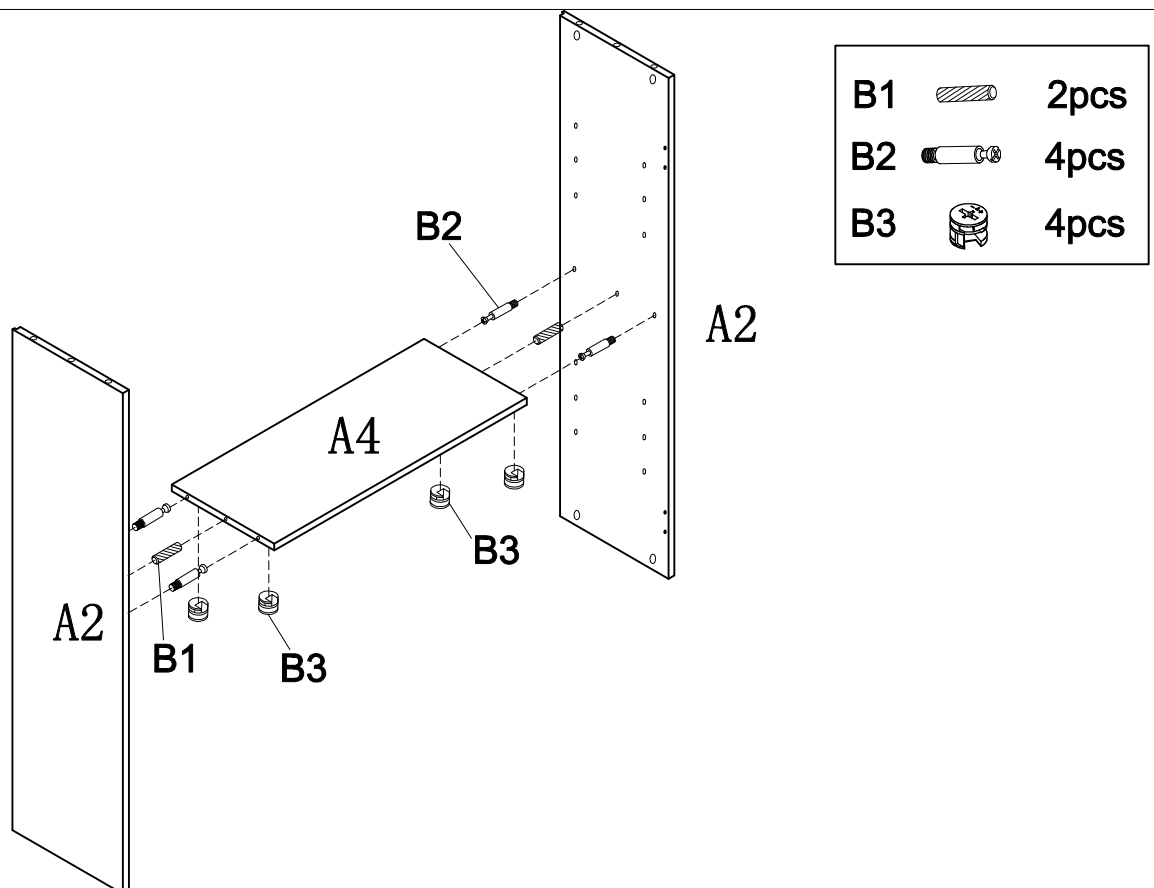


Assemble Side Panels (A2) to Middle Shelf (A4) using Cam-Bolt (B2), Cam-Lock (B3) and Wood Dowels (B1).

## STEP 3

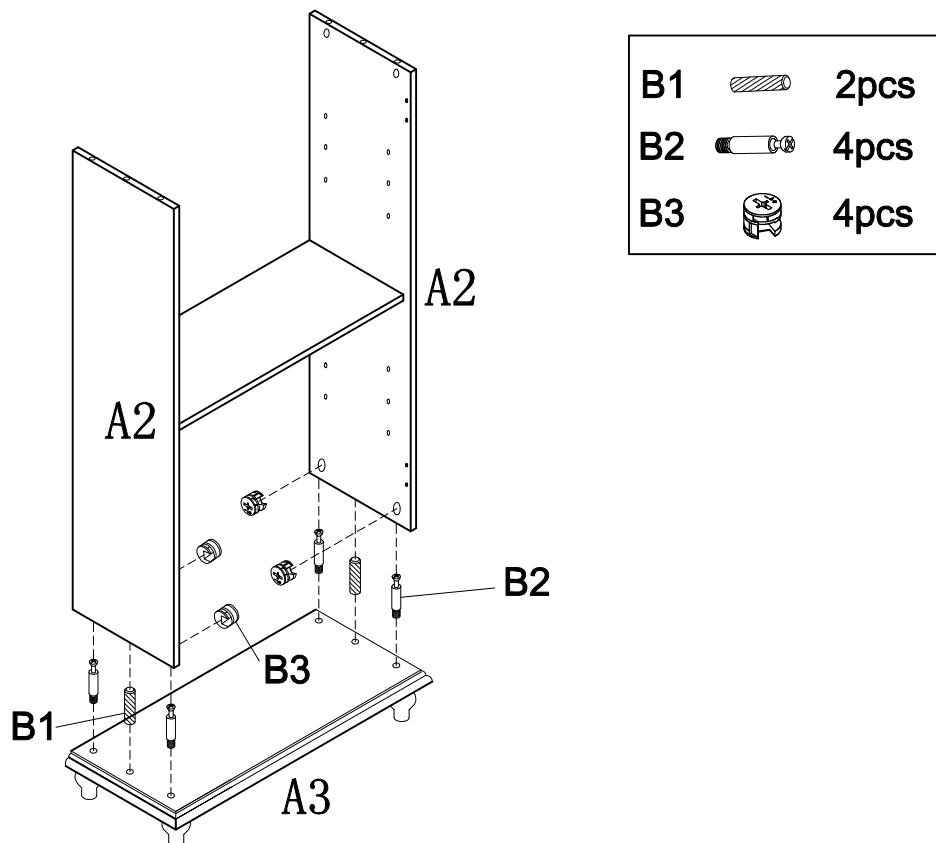


Assemble Side Panels (A2) to Bottom Panel (A3) using Cam-Bolt (B2), Cam-Lock (B3) and Wood Dowels (B1).

## STEP 4

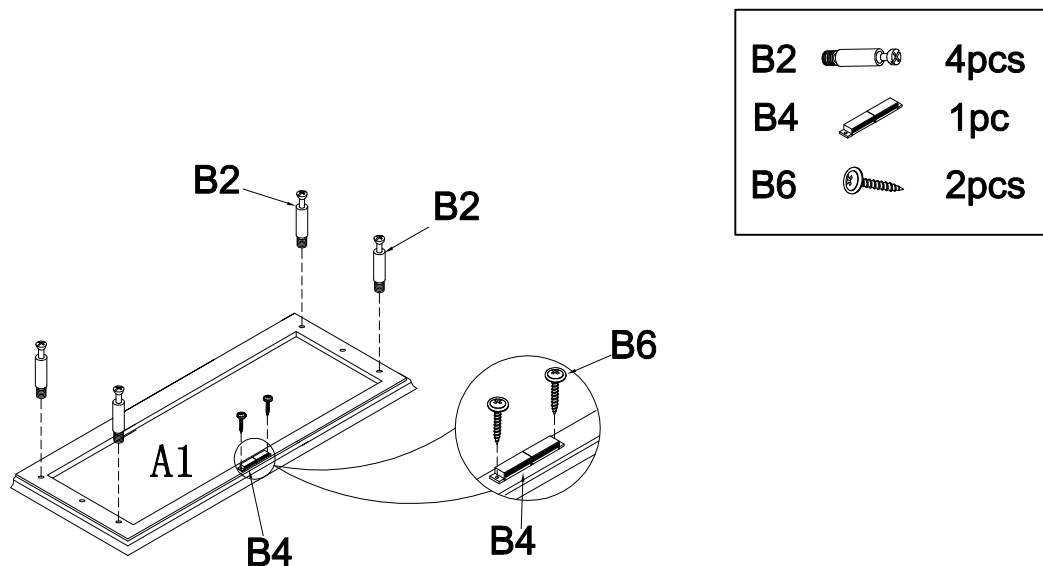

1. Attach Magnet (B4) to the bottom of Top Panel (A1) using Screws (B6). Please note holes are pre-drilled.
2. Insert Cam-Bolts (B2) into the holes on the bottom of Top Panel (A1), then tighten Cam-Bolts (B2).


## STEP 5

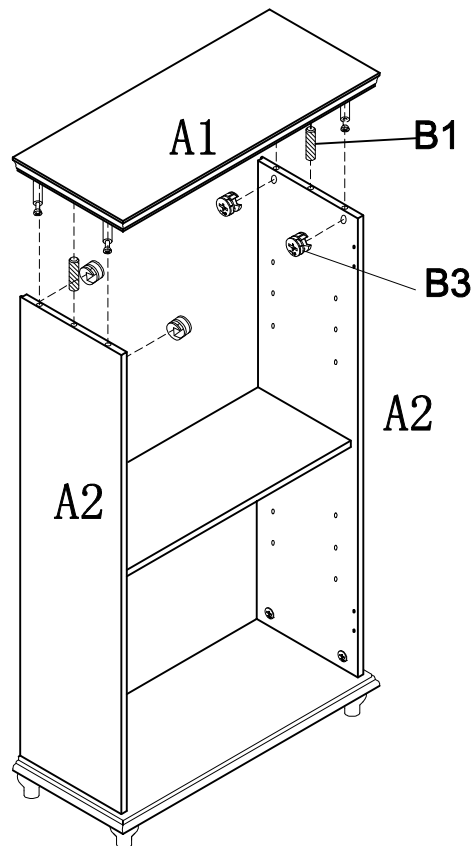

B1		2pcs
B3		4pcs

Attach Top Panel (A1) to Side Panels (A2) , then insert Cam-Lock (B3) and attach to Cam-Bolts (B2).

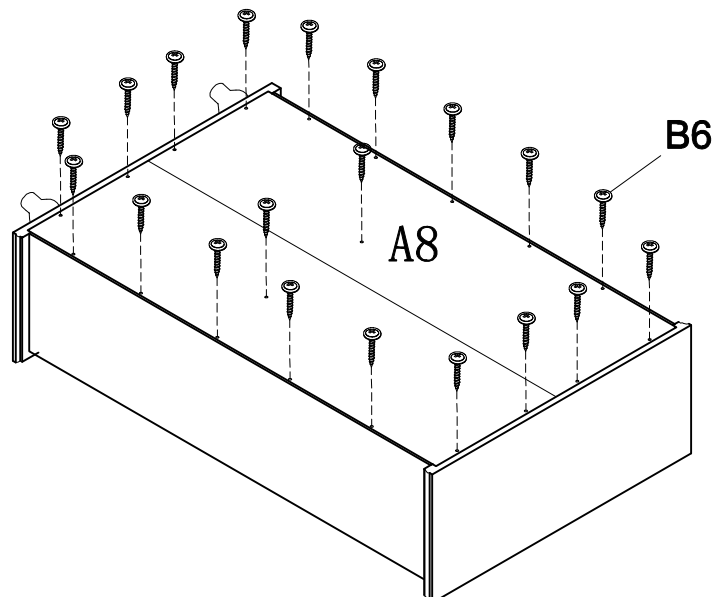

## STEP 6




B6		20pcs
----	--	-------

Attach Back Panel (A8) to the back of this unit using Screws (B6).




## STEP 7

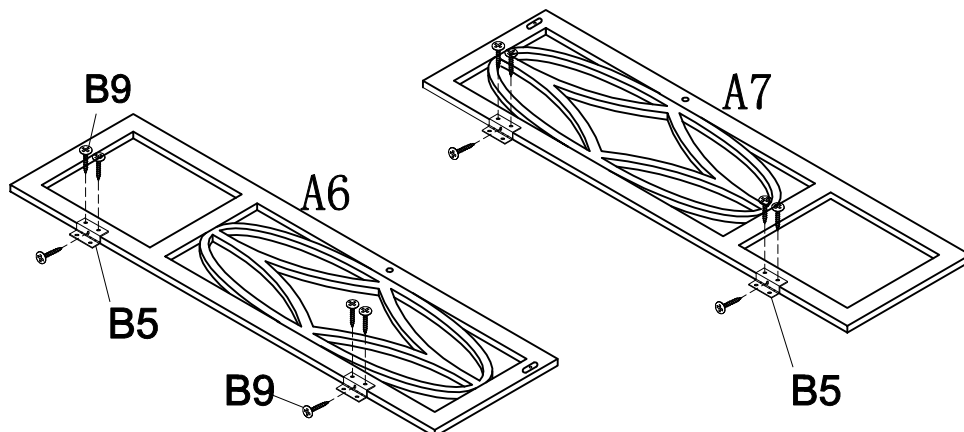
B5		4pcs
B9		12pcs



Attach Hinges (B5) to Door Panels (A6&A7) using Screws (B9).

## STEP 8


B7		2pcs
B9		8pcs
B10		2pcs

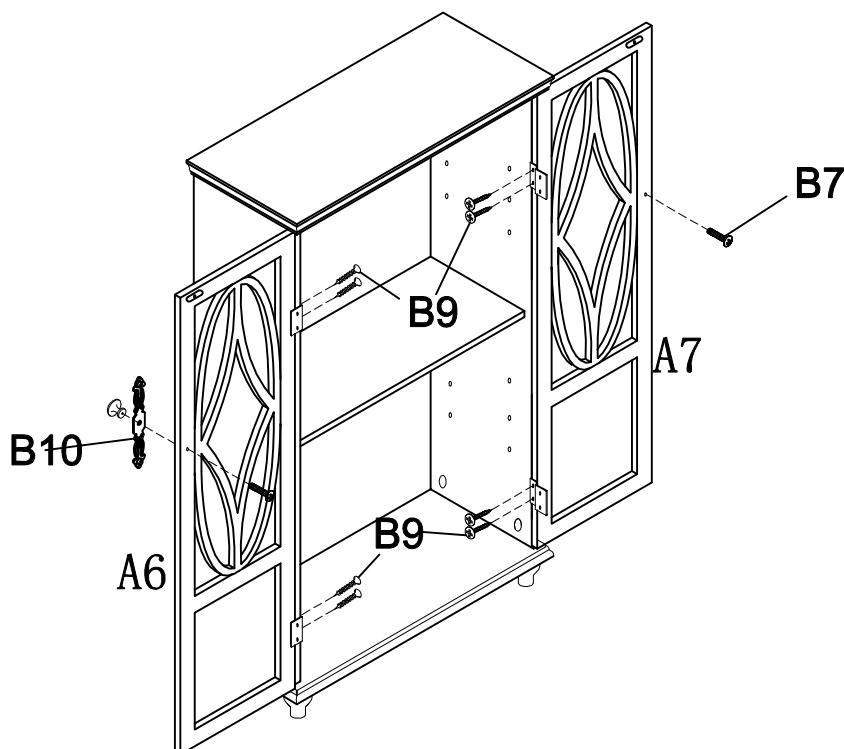

1. Assemble Door Panels (A6&A7) to Side Panels (A2) using Screws (B9).
2. Attach Handles (B10) to Door Panels (A6&A7) using Bolts (B7).

# STEP 9







B8  8pcs

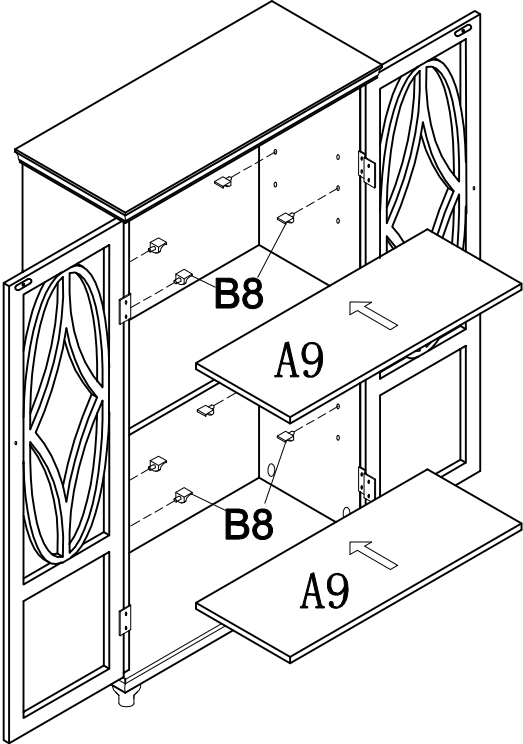

- 1). Insert Shelf Supports (B8) into holes on Side Panels (A2).
- 2). Place Shelves (A9) onto Shelf Supports (B8).

Made in China

## APPENDIX: Dimension of Hardwares in this AI.
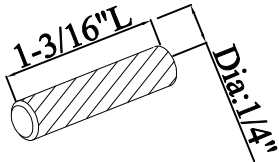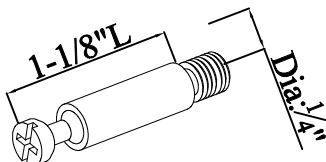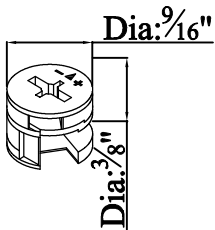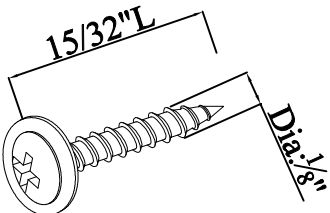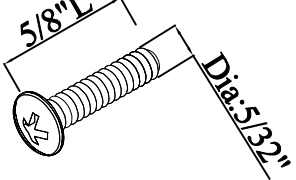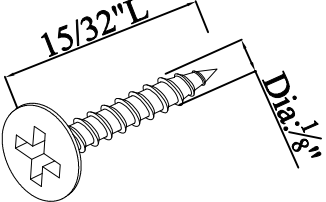
<p>B1.</p>  <p>Wood Dowel</p>	<p>B2.</p>  <p>Cam-bolt</p>	<p>B3.</p>  <p>Cam-lock</p>
<p>B6.</p>  <p>Screw</p>	<p>B7.</p>  <p>Bolt for handle</p>	<p>B9.</p>  <p>Screw</p>