



ASSEMBLY INSTRUCTION

Hall Tree

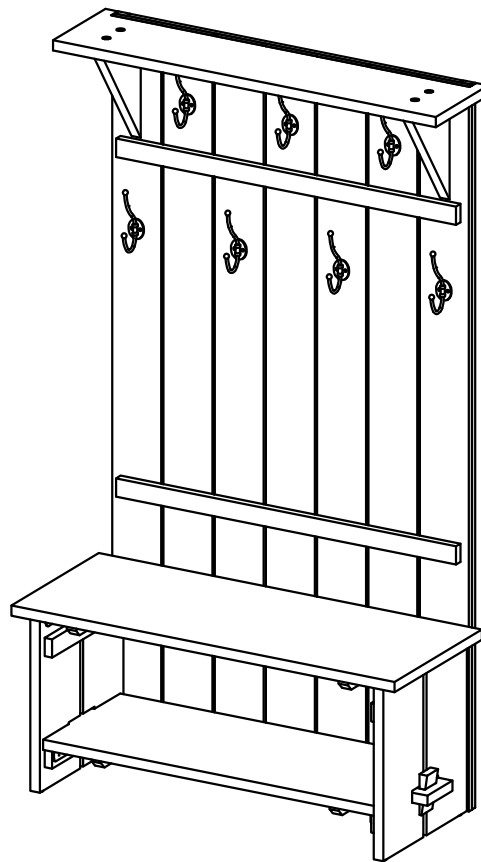


REPLACEMENT PARTS



Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at " www.boltonfurniture.com "

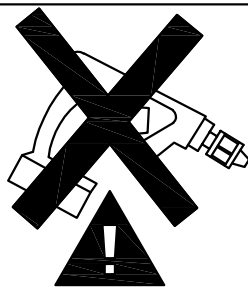

- . Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!
- . Please assemble on a clean soft surface to avoid damage.

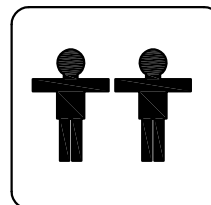


Tools Required

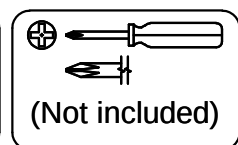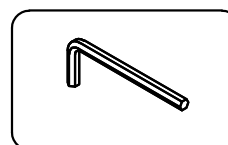

www.boltonfurniture.com

Part list - Hall Tree

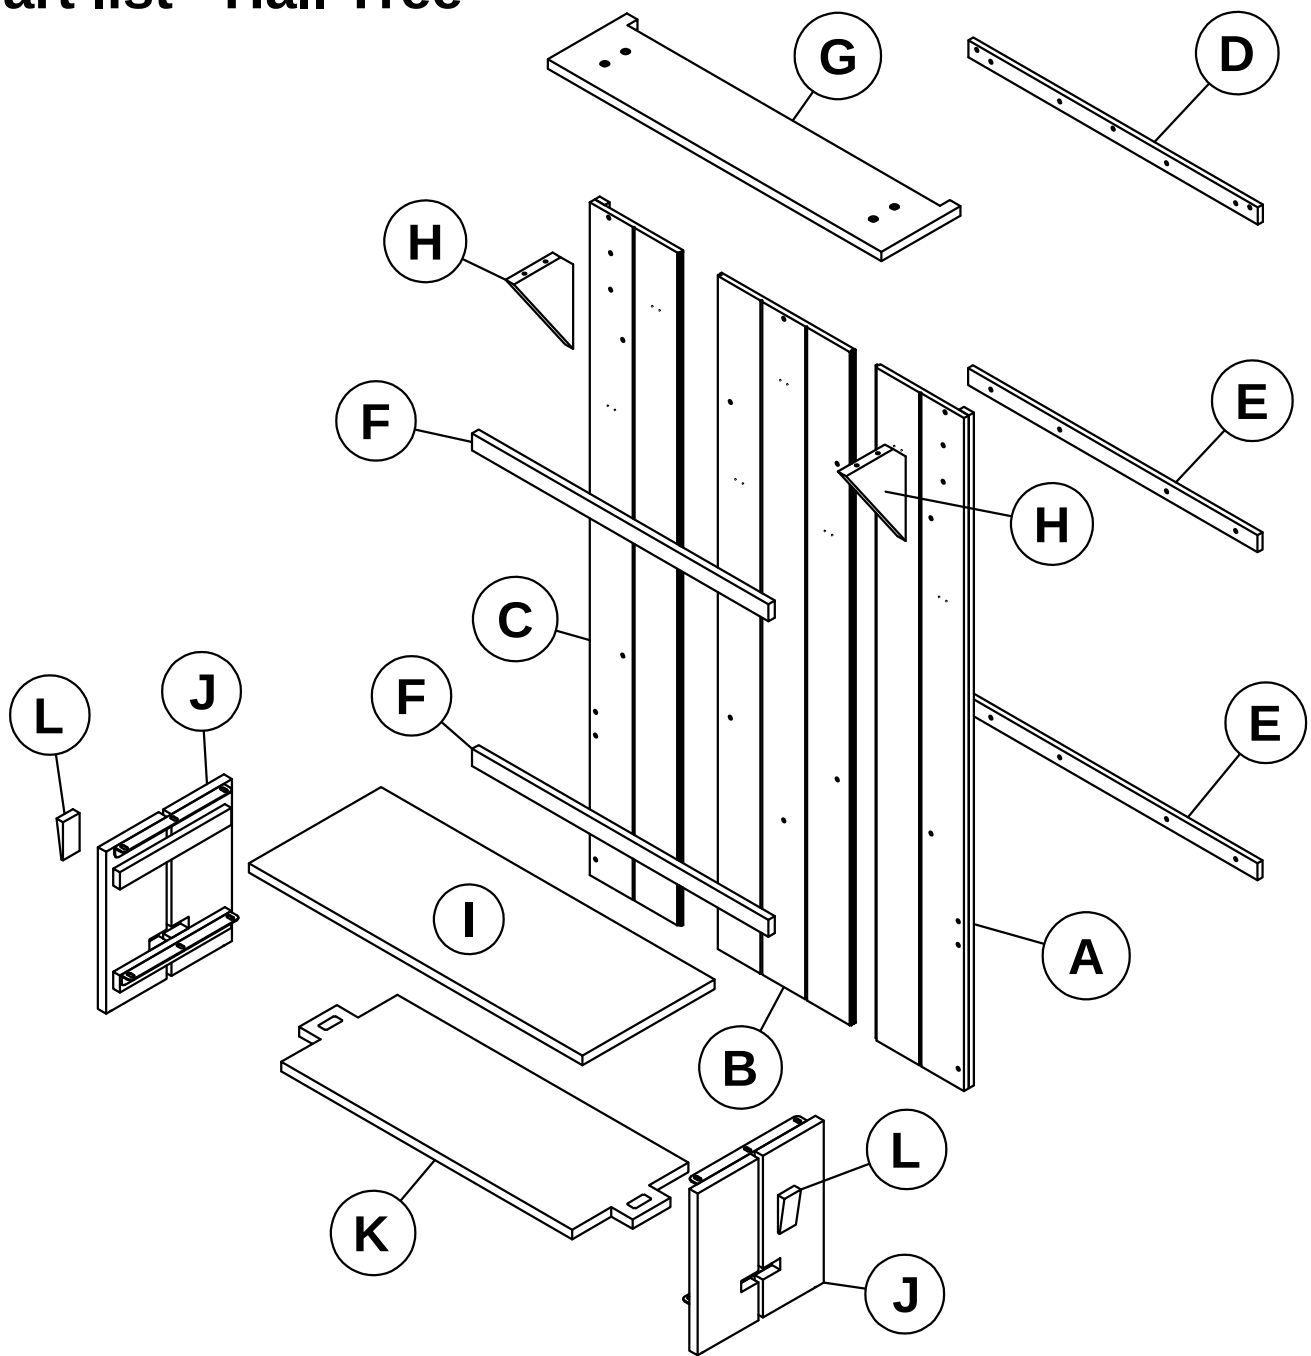

Identifying the hardware-Identify the hardware using the illustrations below

M


M6x20MM BOLT

36

N


M6x40MM BOLT

14

O




07

P


Ø4*15mm

14

Q



01





R


ANTI-TIP



02

www.boltonfurniture.com



Step 01

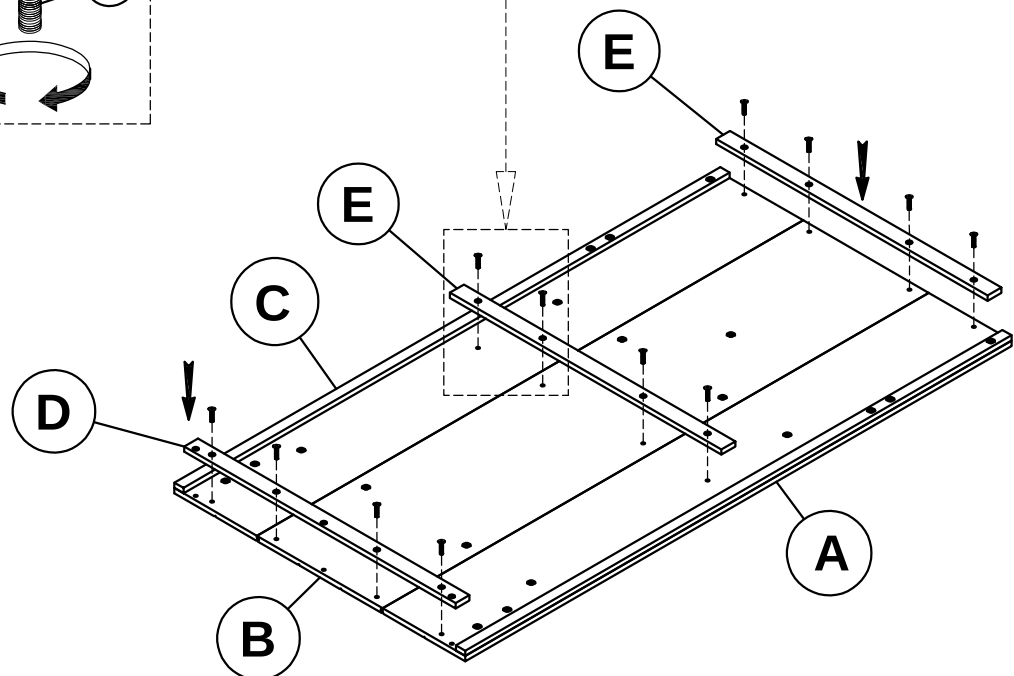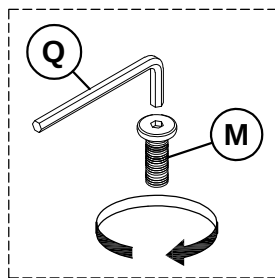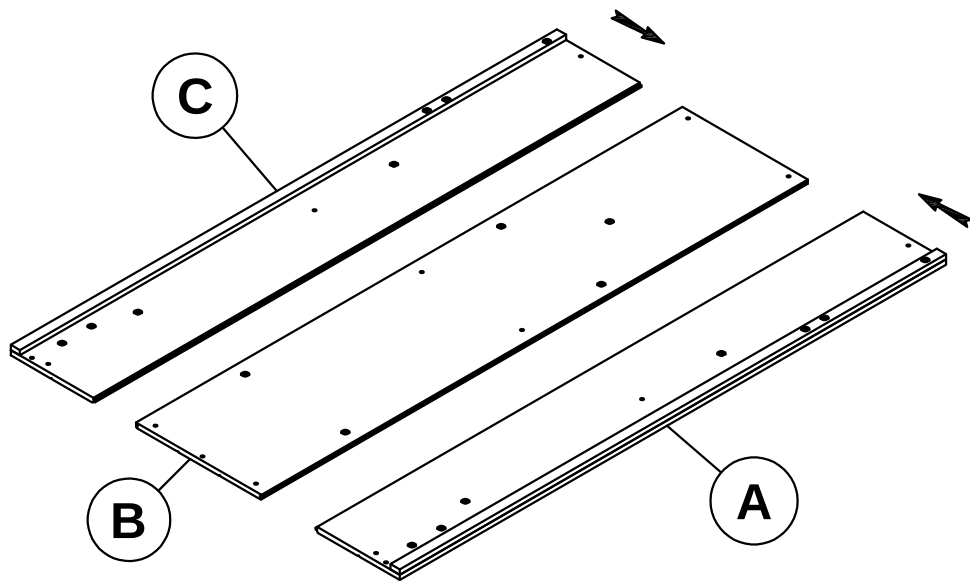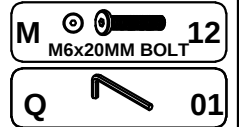


Step 02

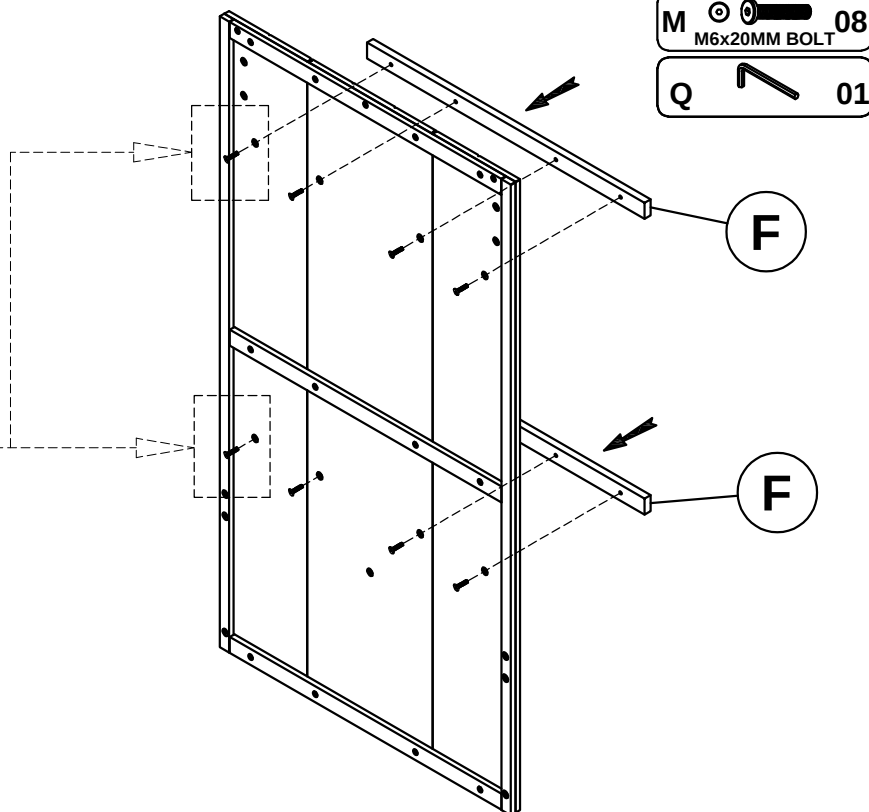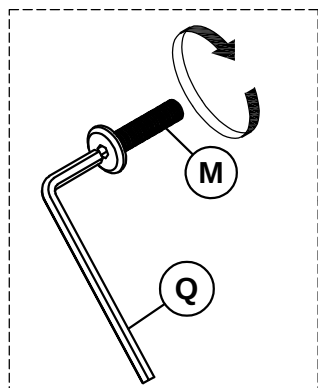


Step 03

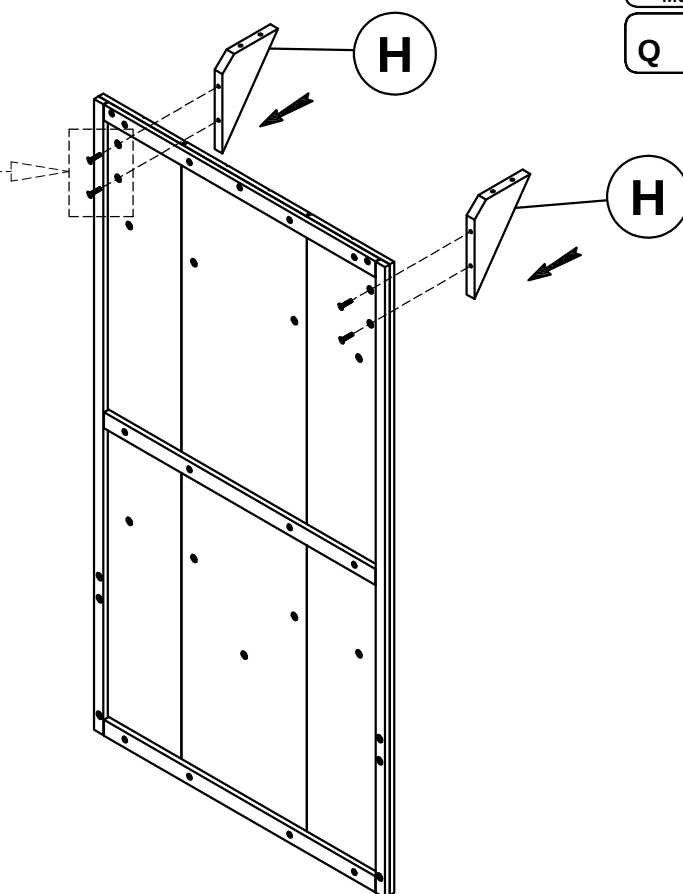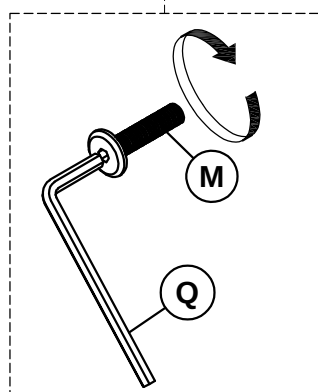

Step 04

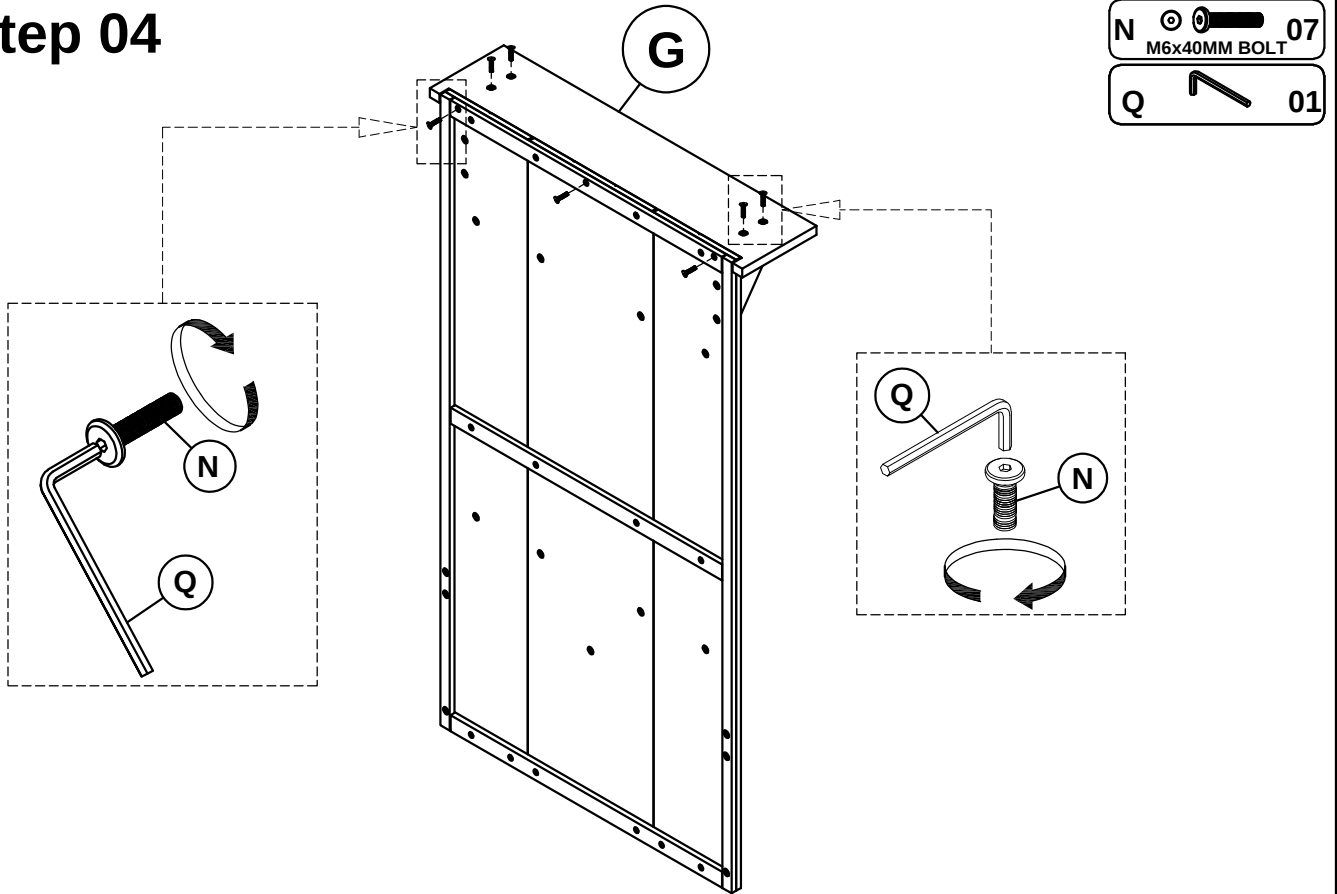


Step 05

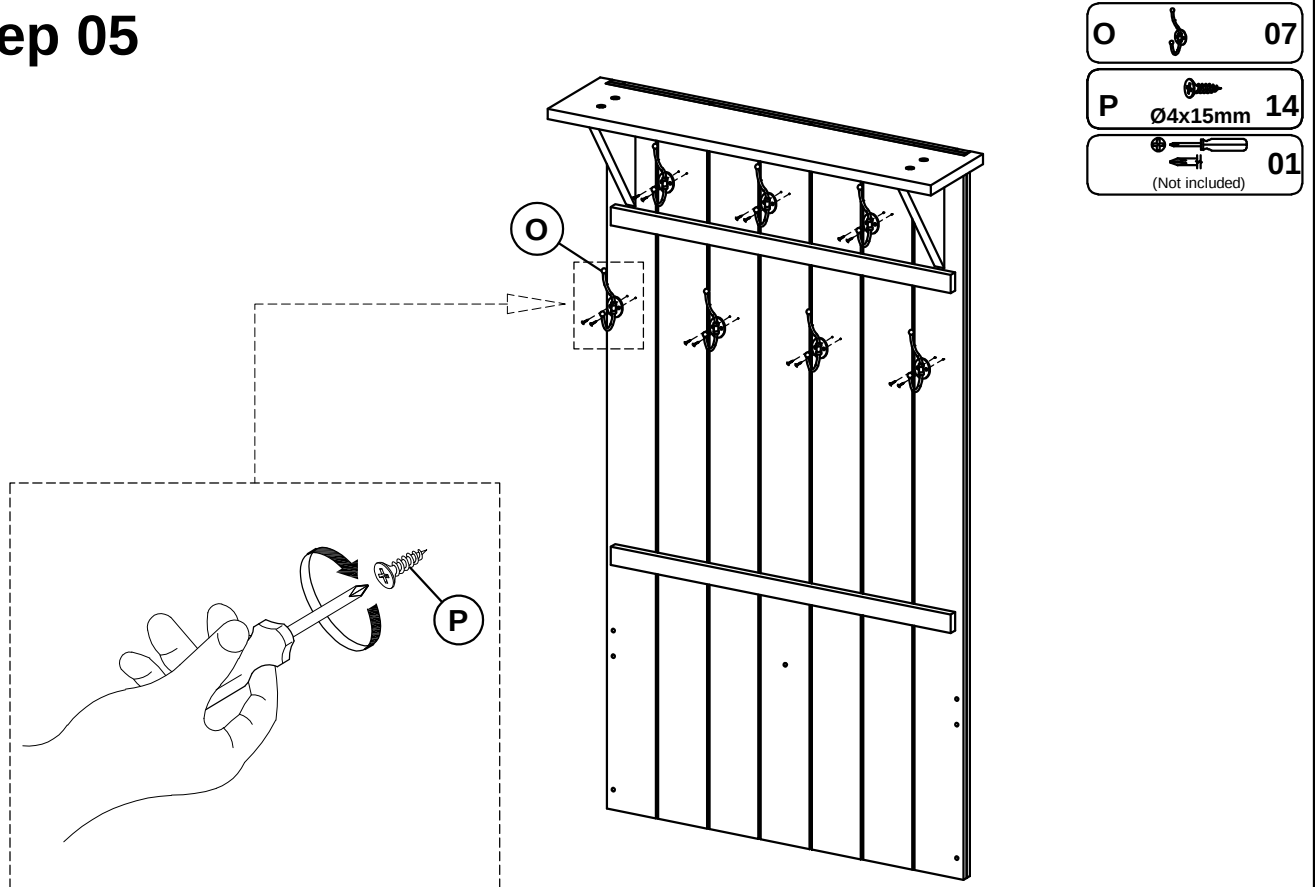

Step 06

M  03
M6x20MM BOLT


Q  01

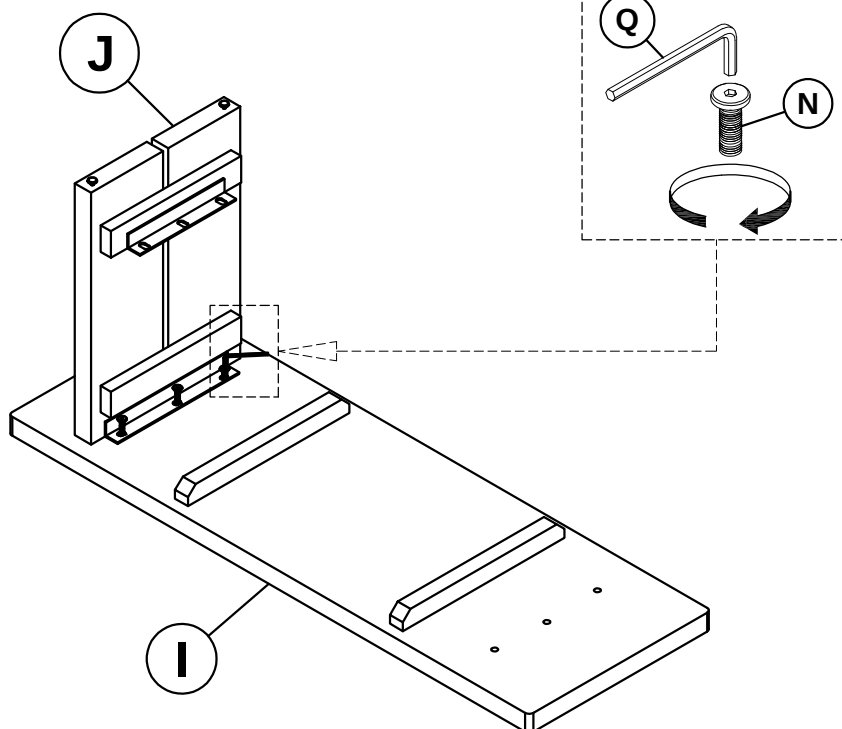

Step 07

M  03
M6x20MM BOLT


Q  01

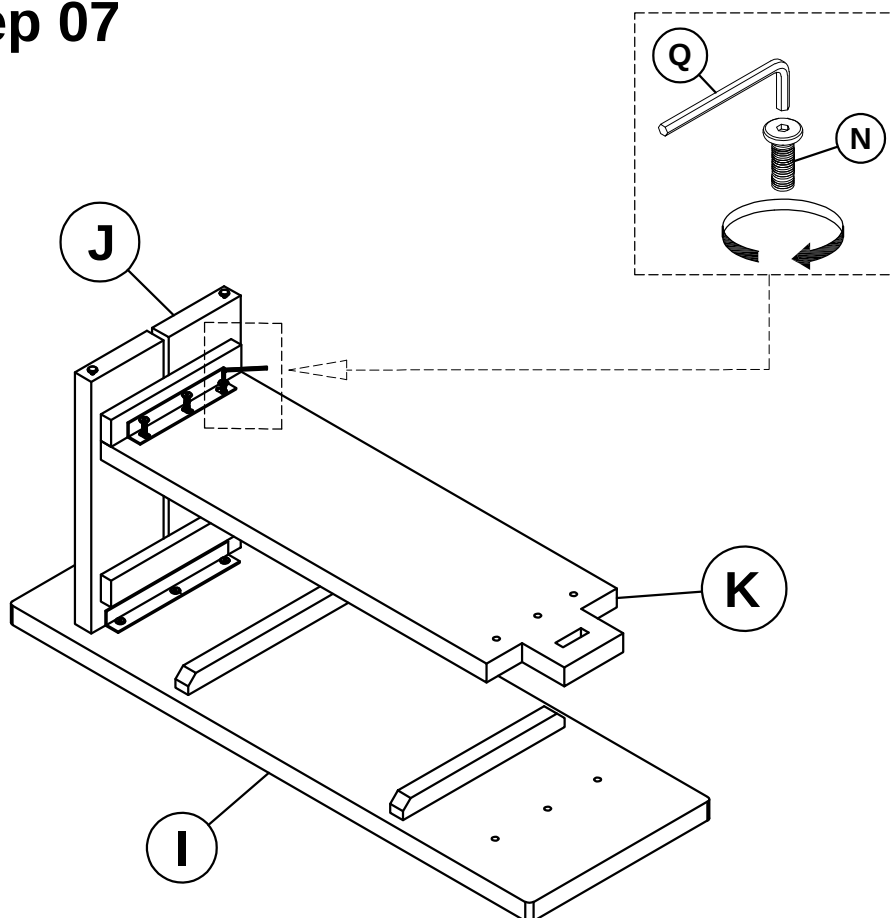



Step 07

M  06
M6x20MM BOLT

Q  01

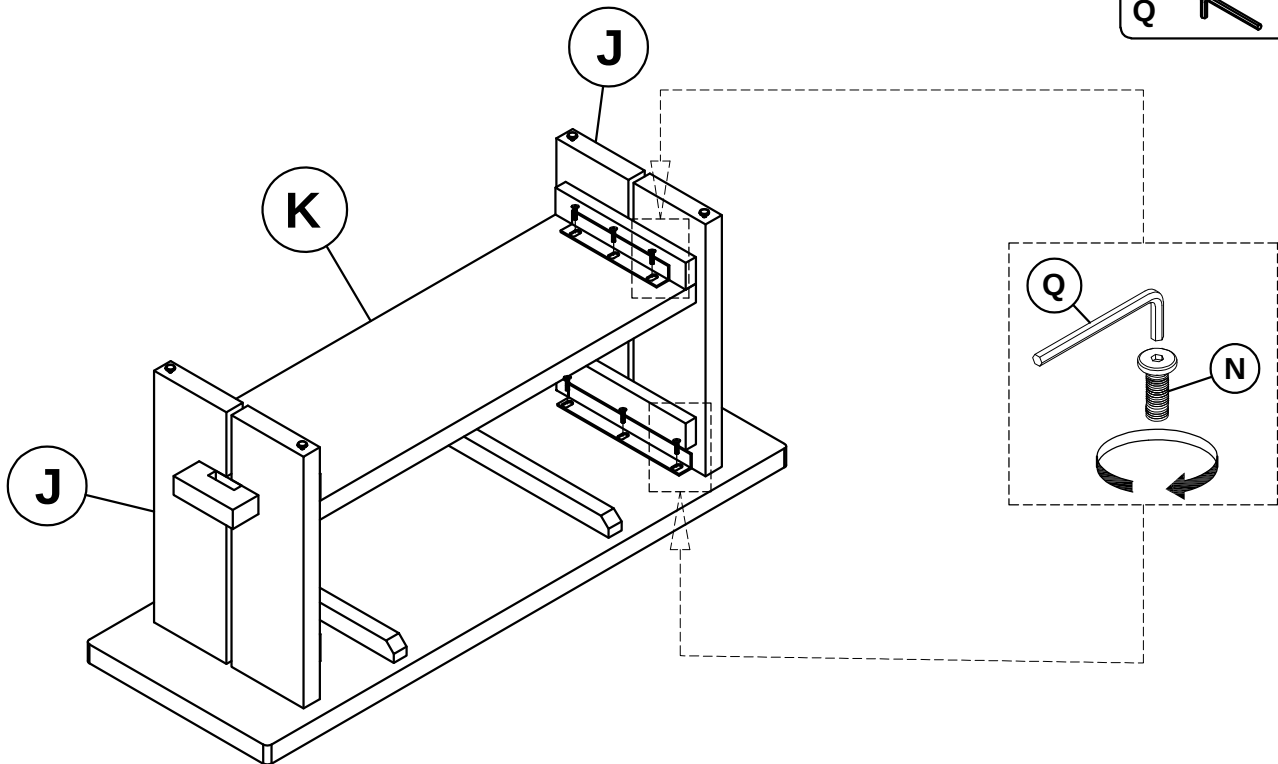


Step 08

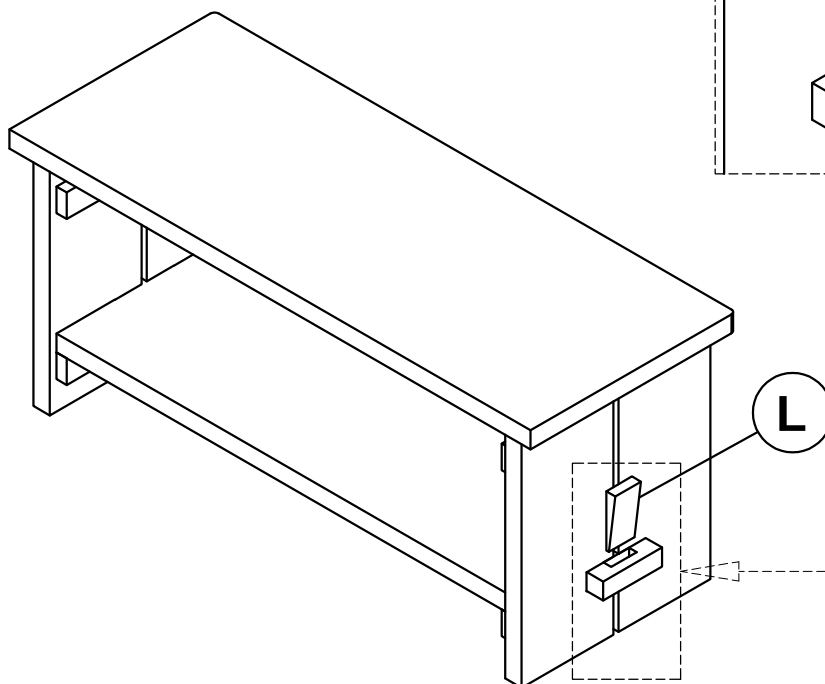



Step 09

N  07
M6x40MM BOLT





Q  01

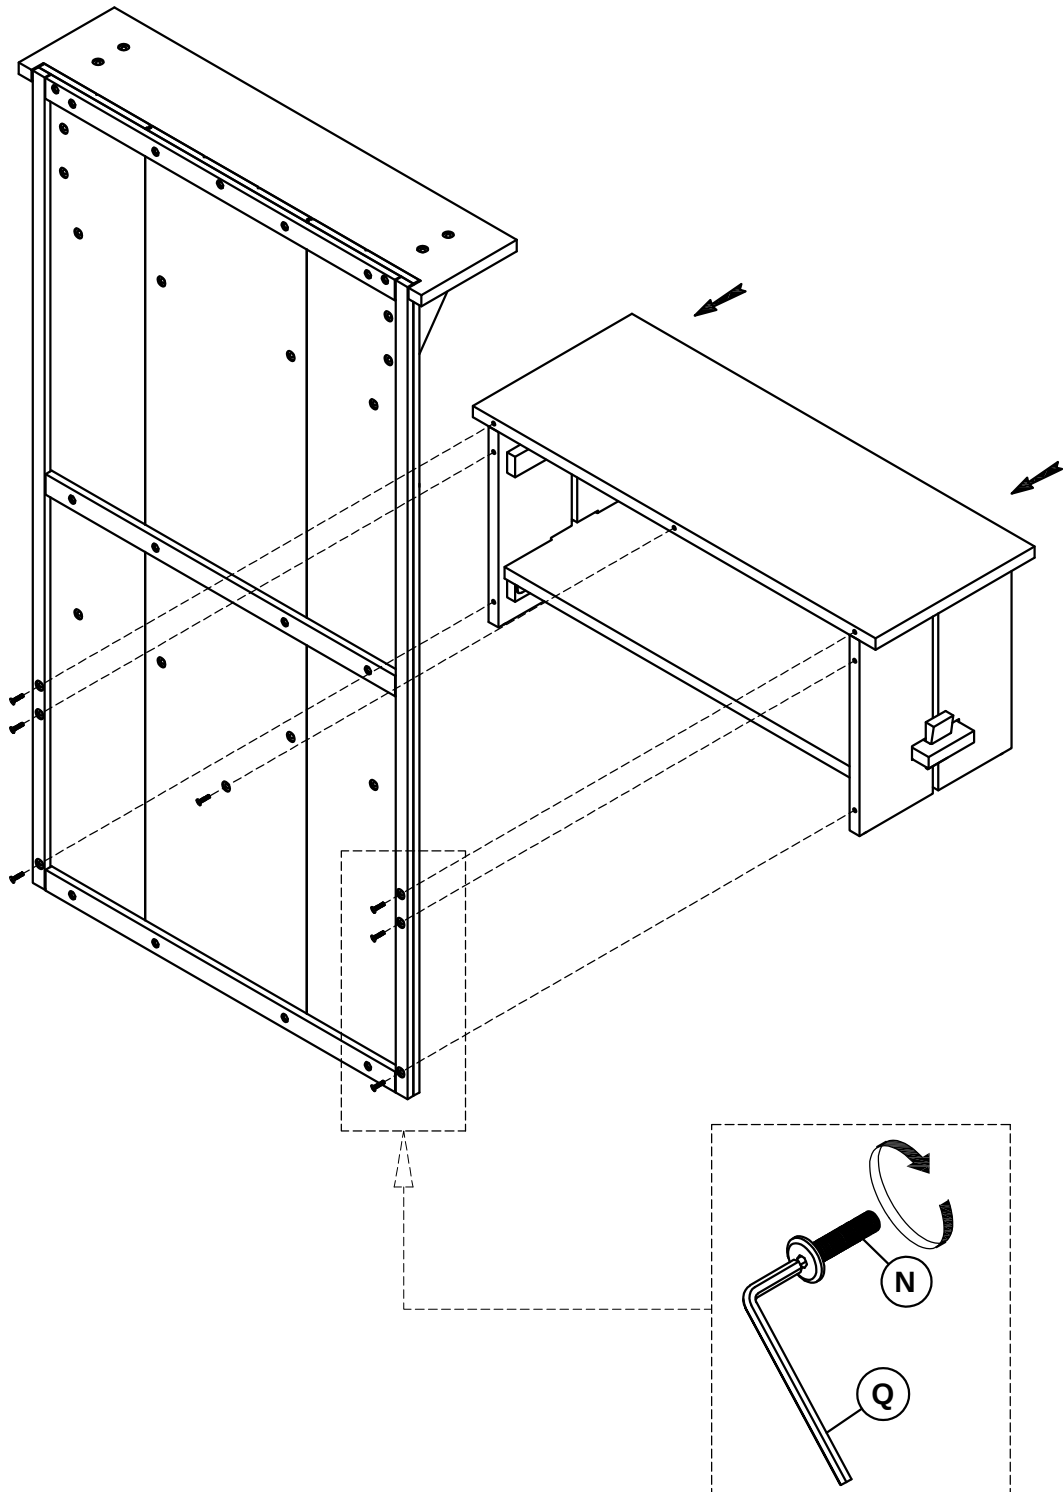

"O" Anti-Tip

A	 4x14 Screw	04	C	 Plastic wall bracket	04
B	 4x35 Screw	04	D	 Nylon strap 1 40mm	02

Secure to Stud behind Wallboard.

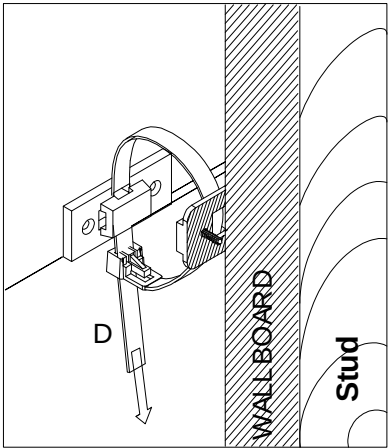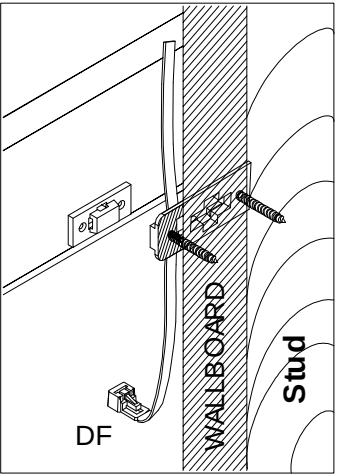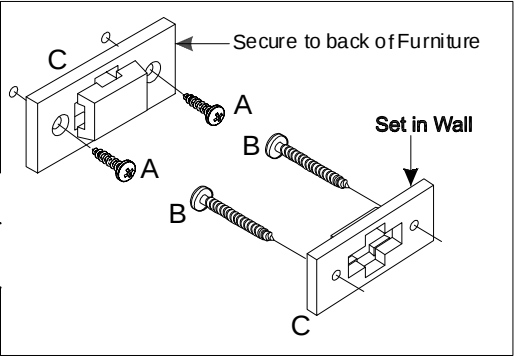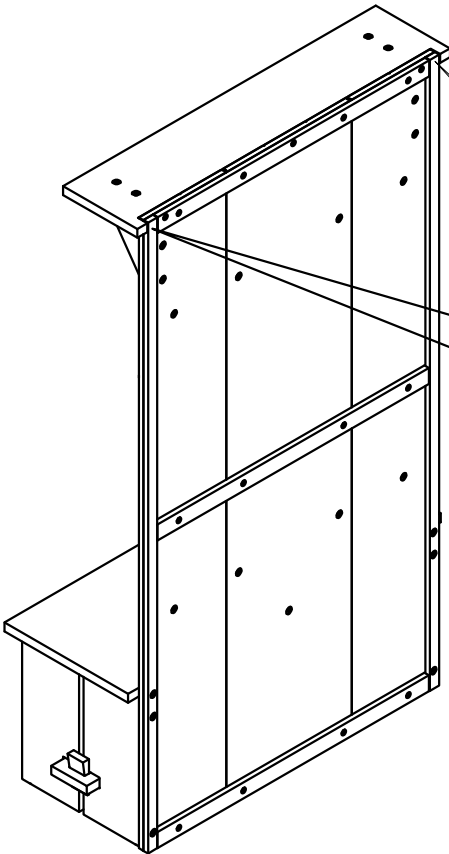

Secure to Stud behind Wallboard!

