SPS822 / SPS824


INSTALLATION GUIDE




SPS822 / SPS824 INSTALLATION GUIDE




Please unpack and inspect all packages and components carefully, and make sure they are complete. Examine for shipping damage. If some parts are damaged or missing, notify your dealer immediately.

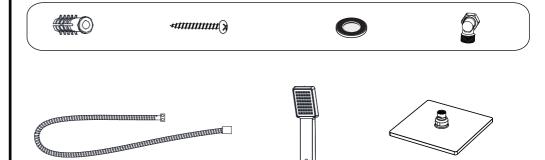

For Installation You may Require the Following Tools

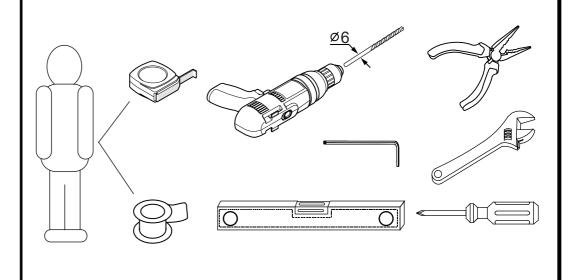

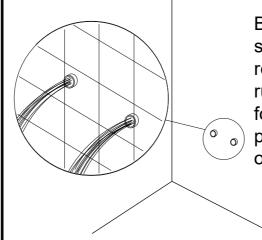


Note!

Before assembly, flush the water supply pipes thoroughly to remove debris(allow the water to run with the main stopcock open for about 3 mins), otherwise dirt particles might affect the function of the shower panel!

PAGE 1

SPS822 / SPS824

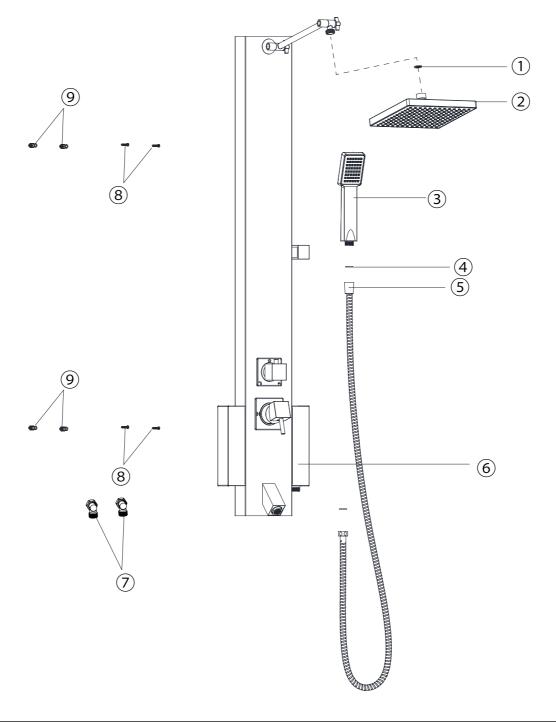

1	Shower Head Filter	6	Shower Panel Body
2	Top shower	7	Brass Elbow(Optional Part)
3	Hand Shower	8	M4X30 Screws
4	Rubber Washer	9	Plastic Expand Plug
(5)	Shower Hose		

Back View


5 1/4" (133 mm) (81 mm) 3 1/5" 20 1/5" (513 mm) 17" (431 mm) 9 1/2" (241 mm) Hot inlet

Measure the distance from the upper fixing hanger to the lower fixing hanger. The dimensions are for your reference only.


Cold inlet

Dimensions

Choose a suitable place to install the shower panel, adjust the shower panel's vertical position based on the user's height and your sanitary room. Usually, install the panels at the distance of 82 3/5" from the top to the ground, but you can assemble according to your preference.



SHOWER HEAD

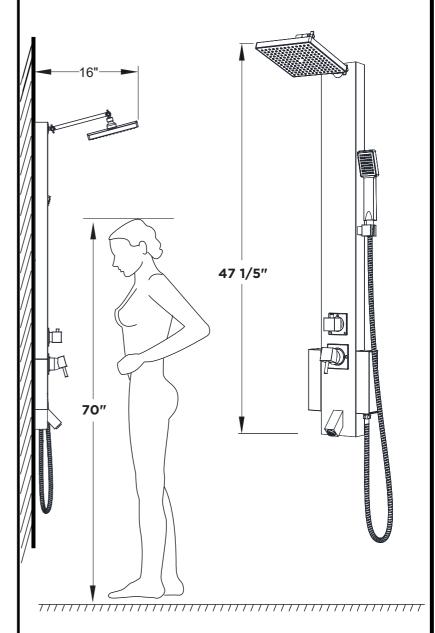

Note!

The height can be altered to suit individual requirements.

The dimensions are for reference only.


PAGE 3

Note! Most of shower panels not only can be mounted on the tile,marble or other flat wall, but also can be mounted against the wall corner.


Your item may appear slightly different from the illustration

Wall-mounting


Note! Before drilling any holes for fixing your shower panel ensure that there are no hidden cables or pipework within the wall.

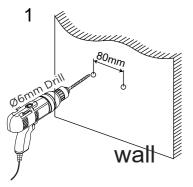

Drill the holes in the wall

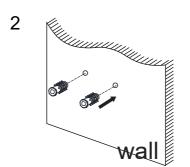



Insert the wall plugs inside the holes

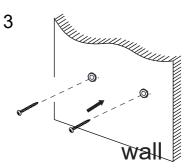

Tighten the screw to 5mm away from the wall

Hang the shower panel on the screws

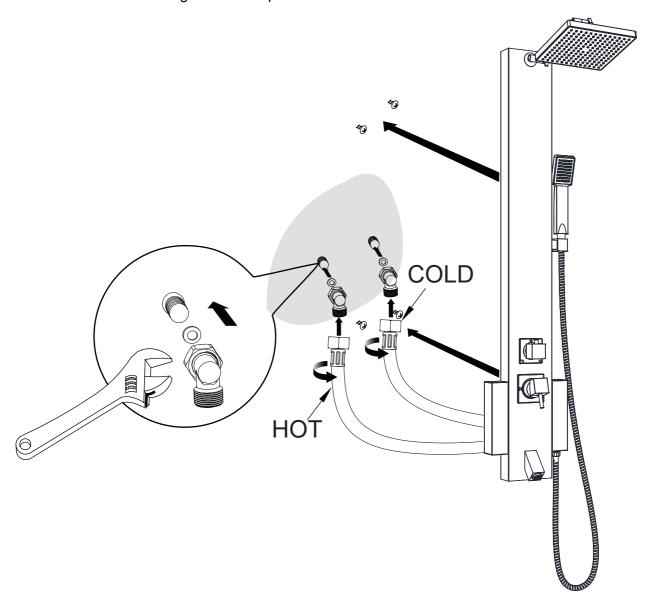

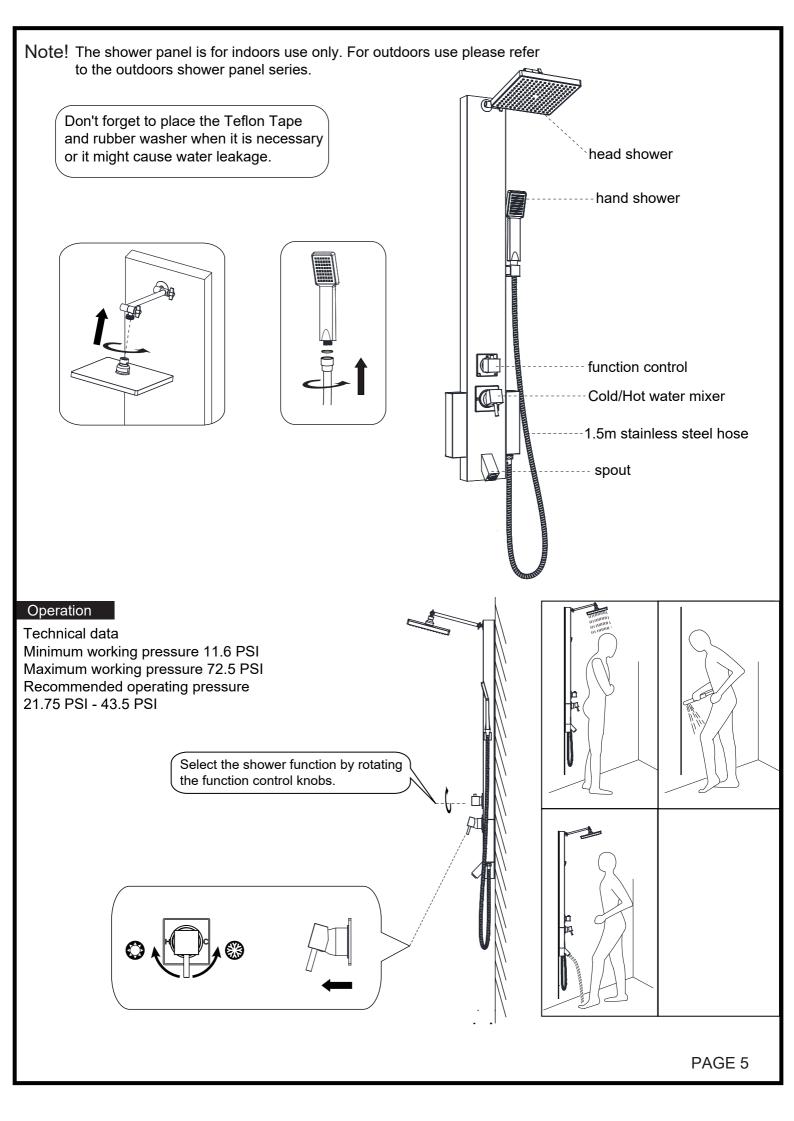



Valve removal process

















4













Valve installation process














4



6

