


CONVENIENCE CONCEPTS

AMERICAN HERITAGE LOGAN CHAIRSIDE END TABLE WITH DRAWER 7102045

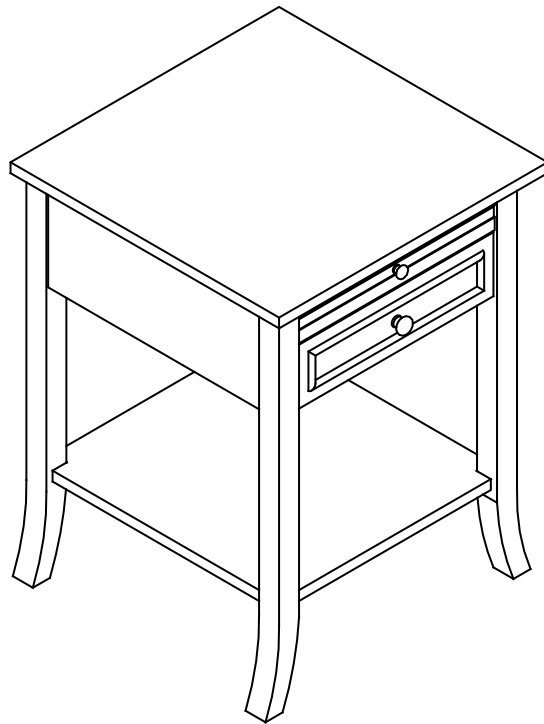

ASSEMBLY INSTRUCTIONS

We have designed our furniture with you , the customer in mind . Our clear , easy to follow , step by step instructions will guide you through the project from start to finish . Feel confident that this will be a fun and rewarding project . The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment .











Please do not return to the store

Broken or missing parts?

Need help with assembly?


If you have any questions just call 1-800-468-6447 or email us at parts@convenience-concepts.com

Hardware List

A	
Camlock (13pcs)	
B	
Cambolt (13pcs)	
C	
Wood dowel (14pcs)	
D	
Allen screw (1pc)	
E	
Small Knob (1pc)	
F	
Knob (1pc)	
G	
Knob Screw (1pc)	
H	
Wood glue(1pc)	


Part List

(1)

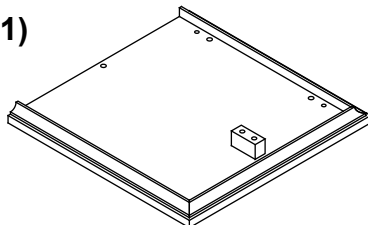


Top Panel (1pc)

(2)

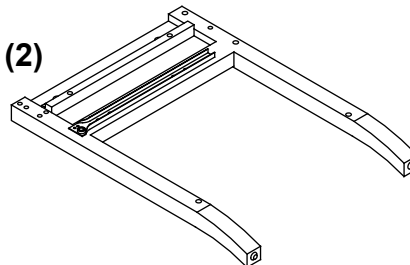


Left Side Panel (1pc)

(3)

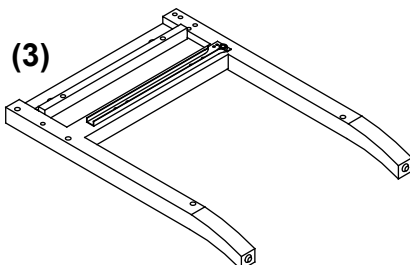


Right Side Panel (1pc)

(4)

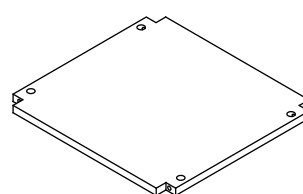


Bottom Panel (1pc)

(5)

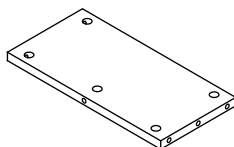


Back Panel (1pc)

(6)

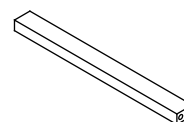


Front Rail (2pc)

(7)

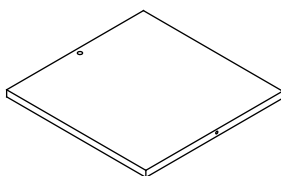


Slide-out Tray (1pc)

(8)

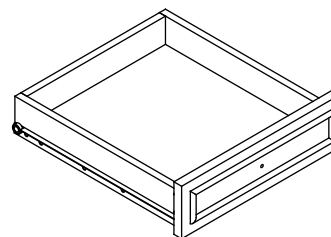


Drawer (1pc)


Assembling the unit with camlocks and wood dowels.

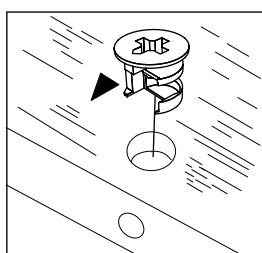


Insert camlock,
camlock arrow must
face bolt hole .

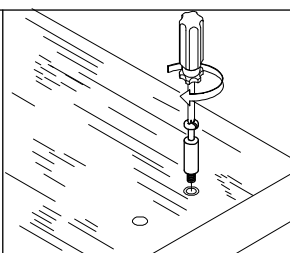


Gently screw cambolt
into the threaded anchor.

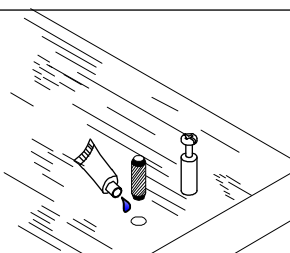

Lightly glue one end of
wood dowel and tap into
hole.

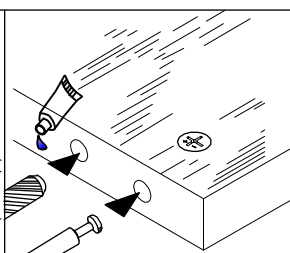

Lightly glue dowel and
connect to second panel
by inserting cambolt and
dowel into holes .

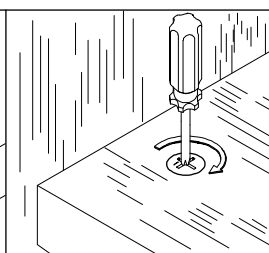

Gently screw the cam
clockwise into locked
position.
Do not overtighten.


Step1

1.Screw Cambolts (B) and insert Wood Dowels (C) into Right Side Panel (3).

2.Insert camlocks (A) into Bottom Panel (4) and Back Panel (5). make sure that arrows on camlock face towards bolt holes.

3.Connect Bottom Panel (4) and Back Panel (5) to Right Side Panel (3) by gently tightening Camlock (B).

4.Connect Front Rails (6) to Right Side Panel (3) as show.

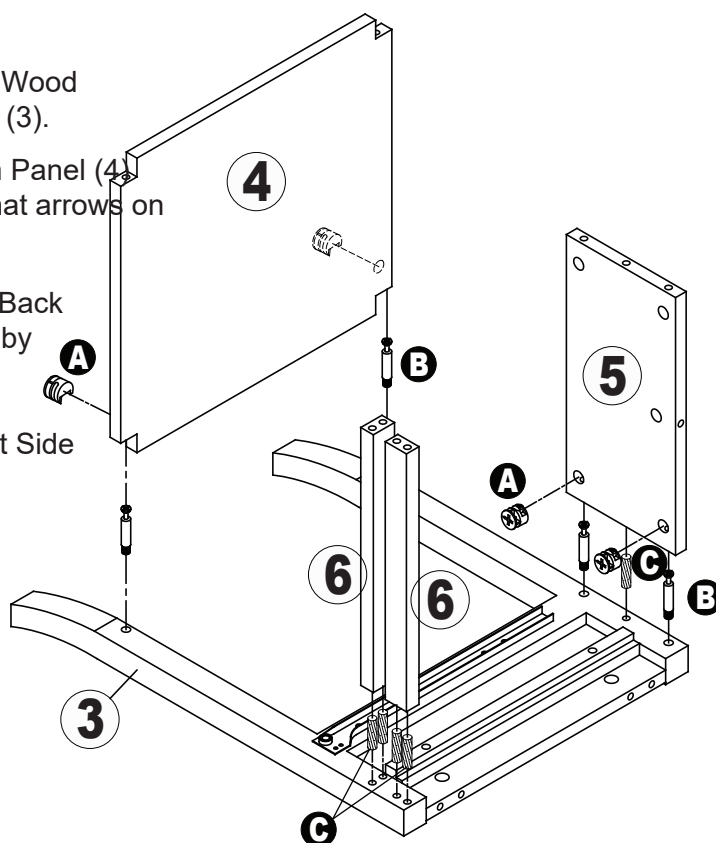


Step2

1.Screw Cambolts (B) into Left Side Panel (2).

2.Insert Wood Dowels (C) into assembly as shown.

3.Connect Left Side Panel (2) to assembly by gently tightening Camlocks in Bottom Panel (4) and Back Panel (5).

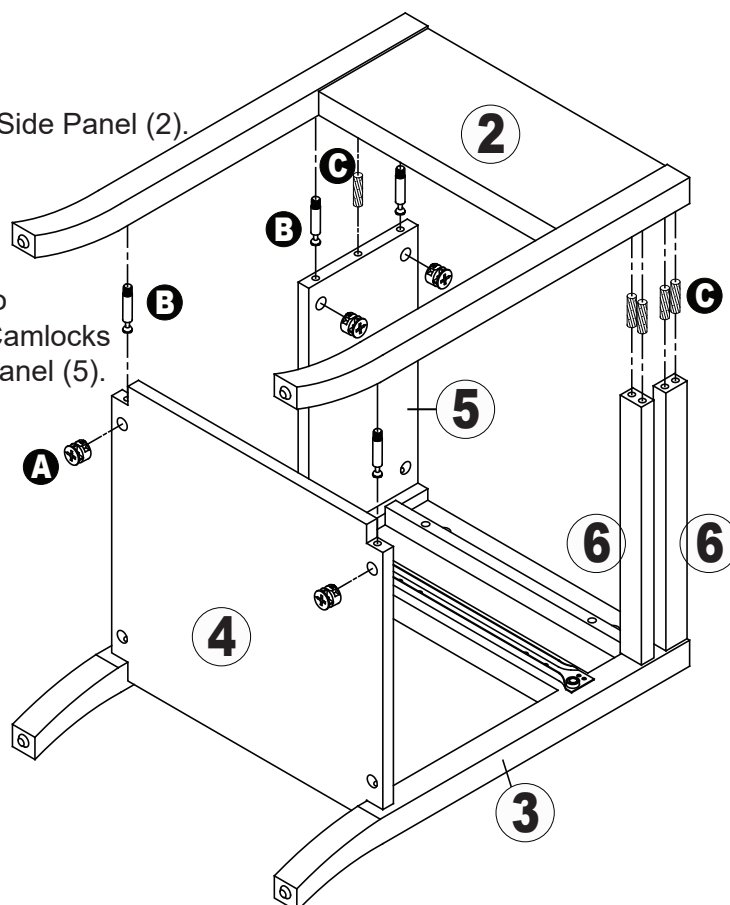


step3

1.Insert Camlocks (A) into Left Side Panel (2) Right Side Panel (3) and Back Panel (5).

2.Insert Wooden Dowels (C) into Left Side Panel (2) and Right Side Panel (3).

3.Screw Cambolts (B) into Top Panel (1).

4.Attach Top Panel (1) to unit by gently tighten Camlocks.

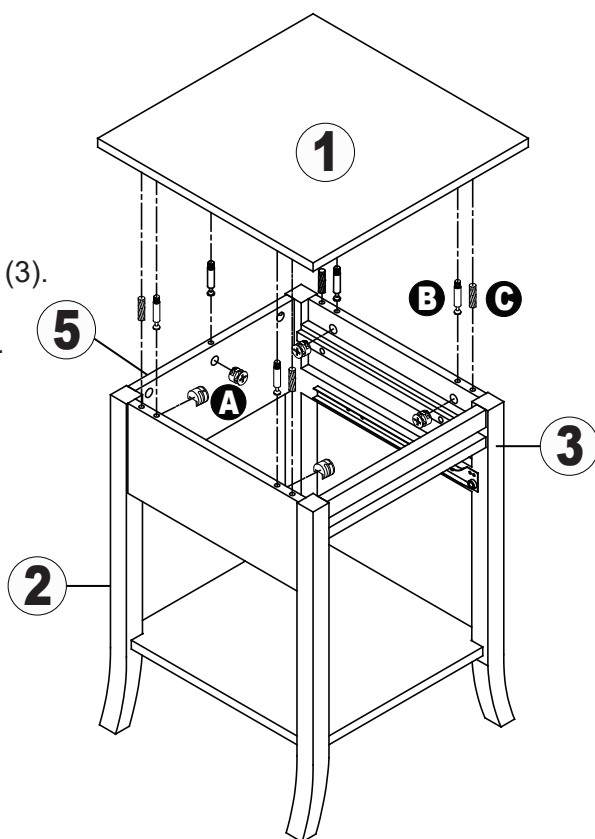


step4

1.Insert Slide-out Tray (7) into open Area between two front rails (6) as shown.

2.Fix Slide out Tray (7) by using Allen screw (D) as shown , This will ensure tray does not slide out .

3.Screw Knob (E) into Slide-out Tray .

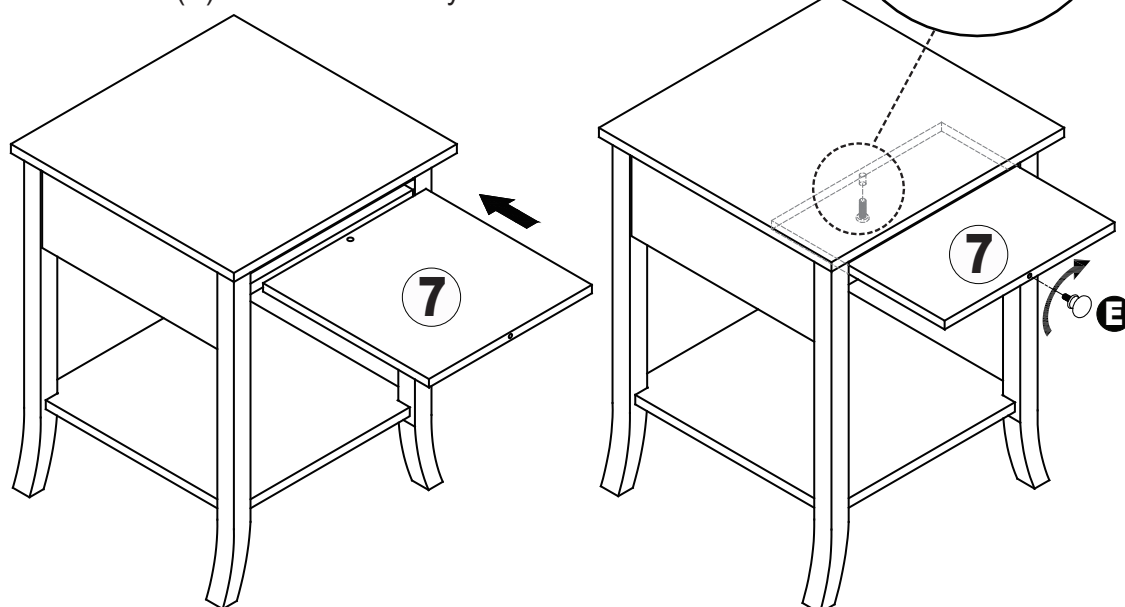

step5

- 1.Screw knob (F) onto drawer (8) by using Knob Screw (G).
- 2.Slide drawer (8) into unit.
- 3.Enjoy.

