




Assembly Instruction

INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING

**MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING
NEED ASSEMBLY ASSISTANCE?
CALL US AT 866-814-8325**

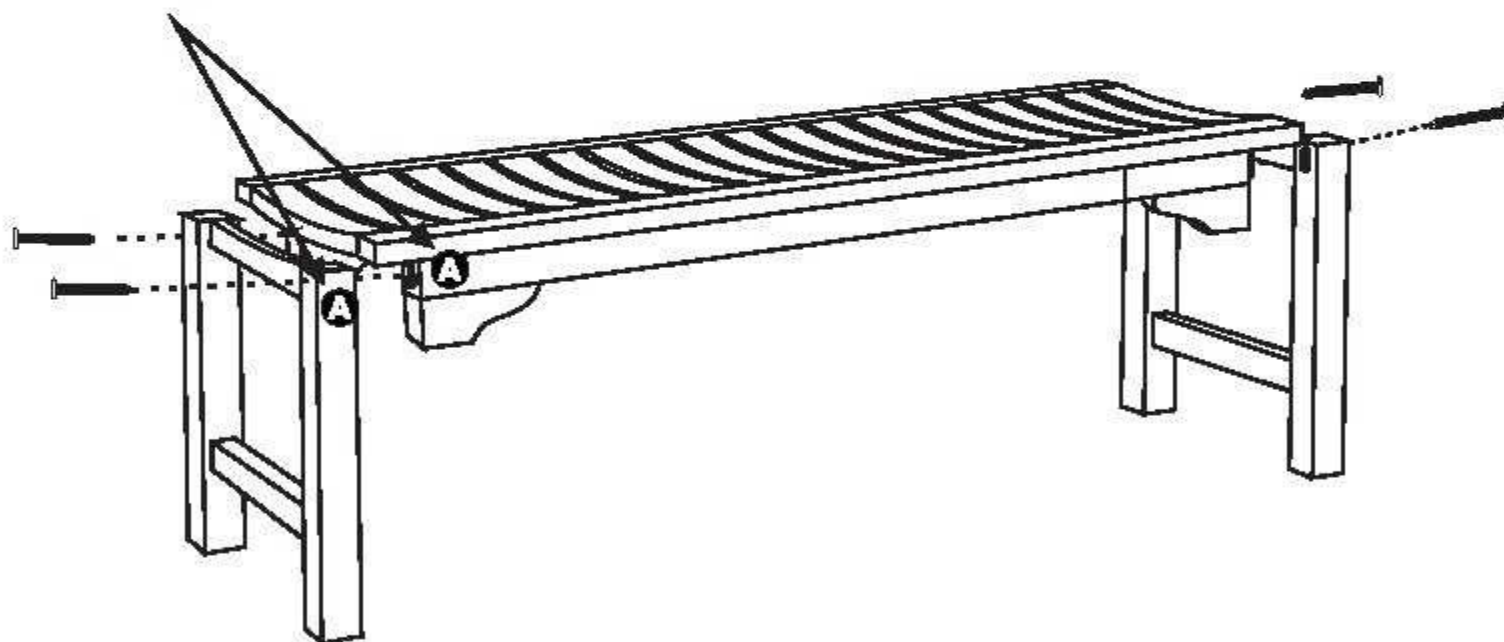

**Make sure to use Gorilla Glue (Not Included)
on all wood joints before assembly**

Code

HJ165

Hardware



F. Bolt (4 Pcs)

Tool



Socket Wrench 4mm Ht

Total Section

3 Section