




Assembly Instructions

Frankfurt Tufted Nailhead Trim Ottoman

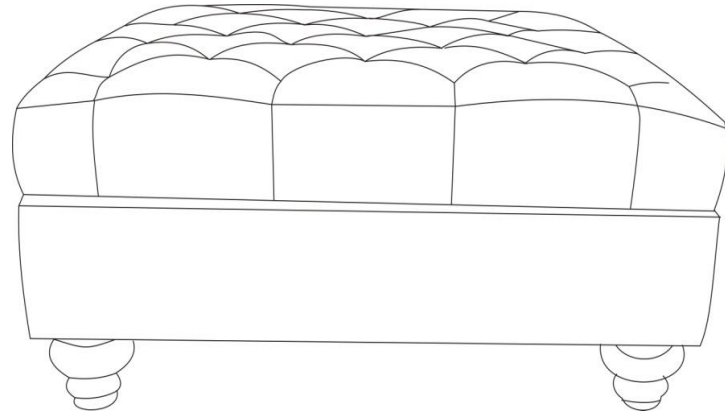

PART LIST

A[1] OTTOMAN BASE


B[4] LEGS

NOTE: The legs are hidden with a zipper in the dustcover.

STEP 1:

1. Put the ottoman base on a flat floor and turn the base upside down. (Note: the floor must be covered with protective material so that the item is not touching the floor)
2. Position the leg over the base as shown in the sketch and tighten the leg into the hardware on the ottoman base.
3. Repeat the procedure with the other legs. Turn the ottoman up to complete.

STEP 1:

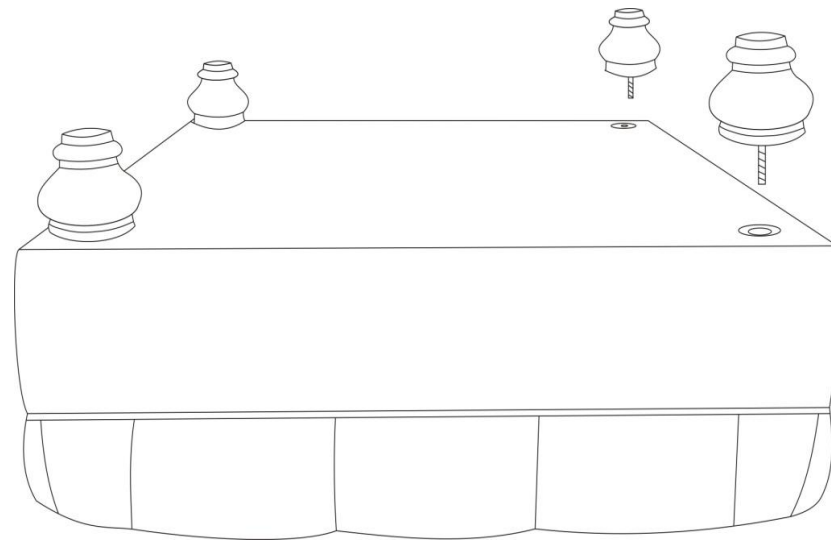

**Questions? Contact ABBYSON LIVING CUSTOMER SERVICE
AT TOLL FREE 1-888-406-0838**