



INSTALLATION MANUAL


Dimensions are $\pm 1/8"$

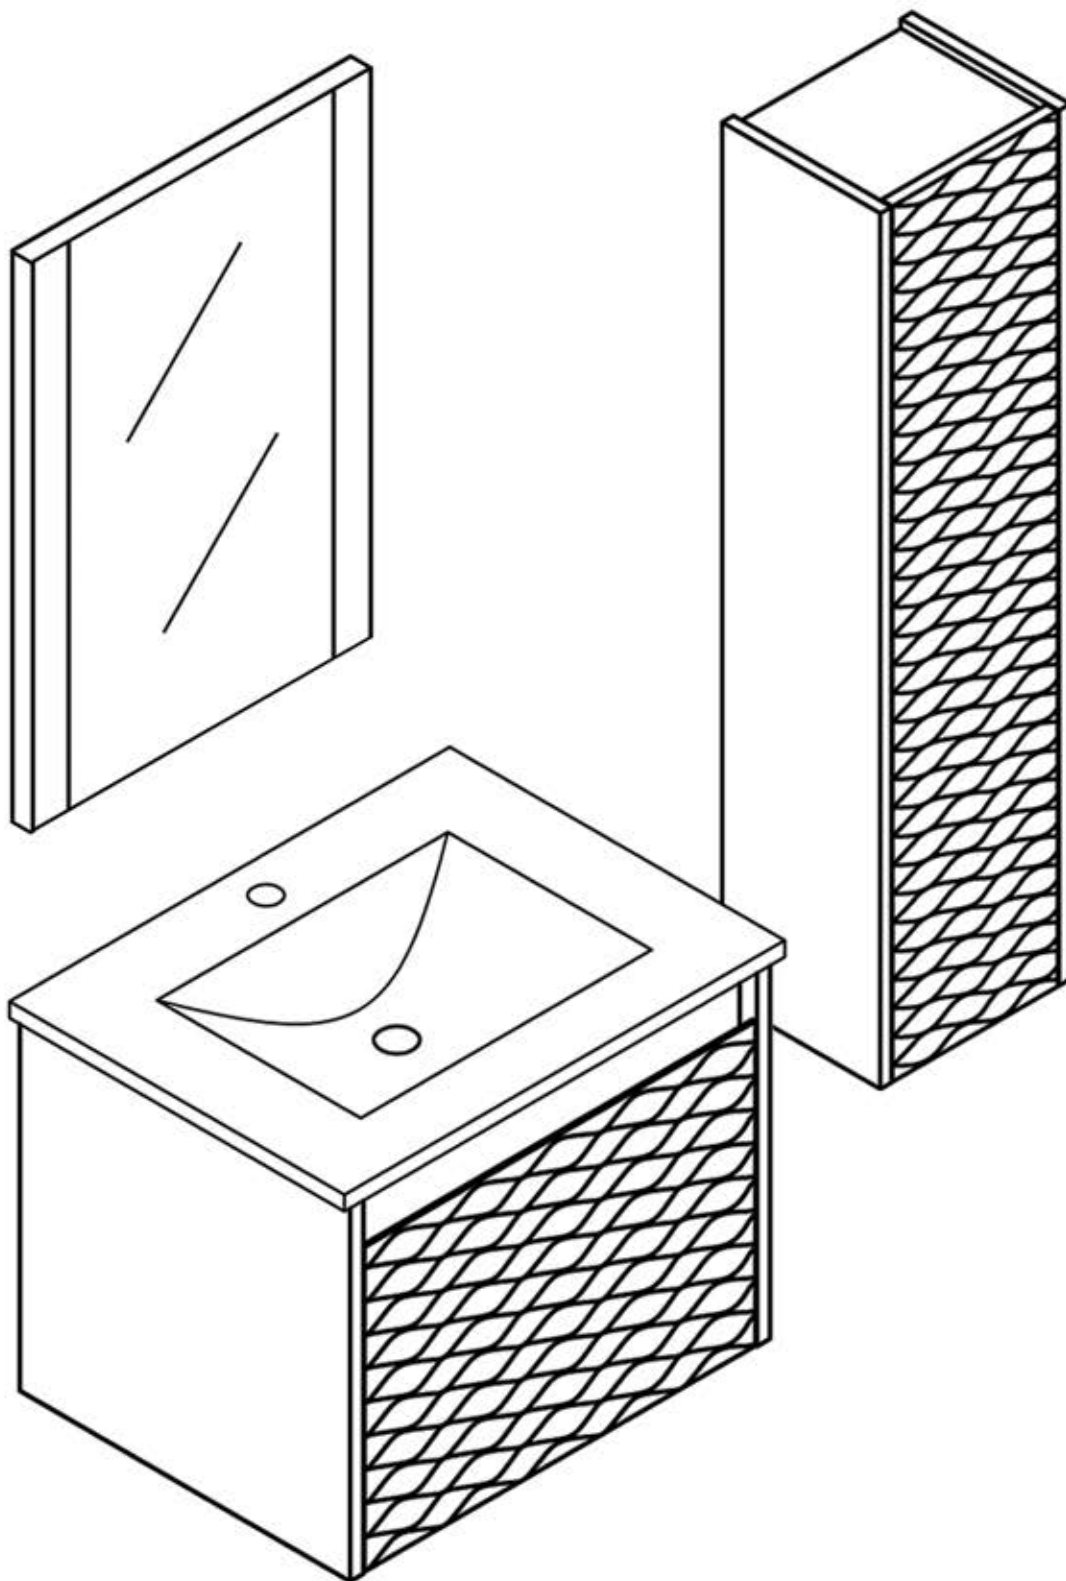


24" VANITY

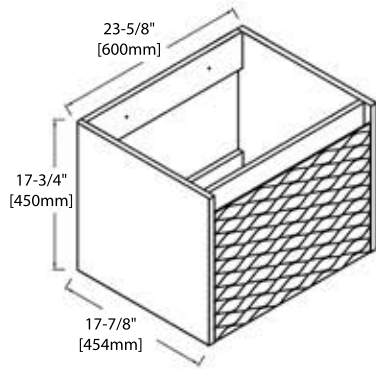

V8008 24 01

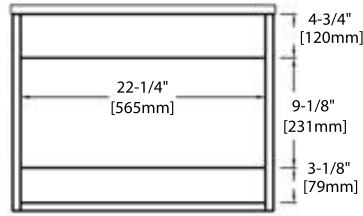


BACK VIEW

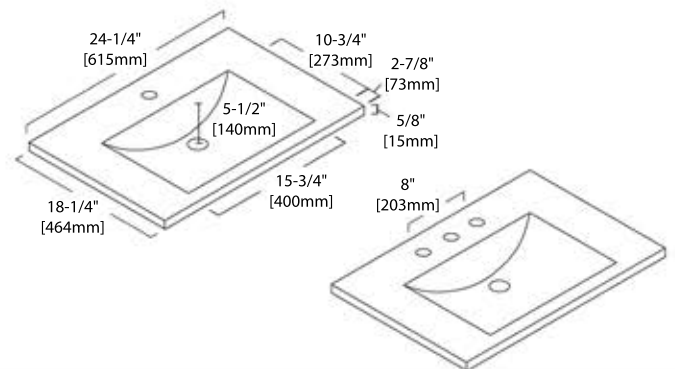


C04 2418

C04 2418 TH


30" VANITY

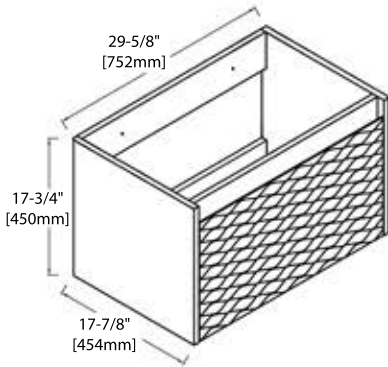

V8008 30 01

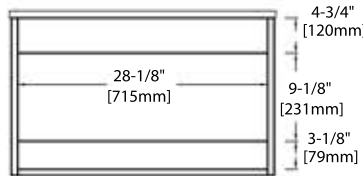


BACK VIEW

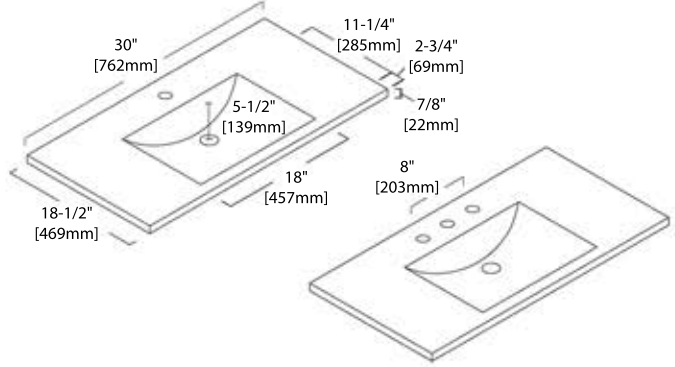


C04 3018

C04 3018 TH


36" VANITY

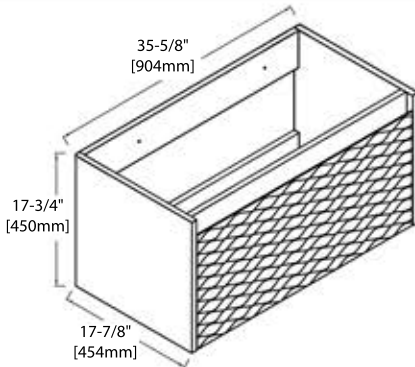

V8008 36 01

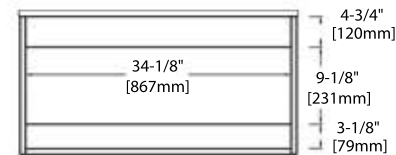


BACK VIEW

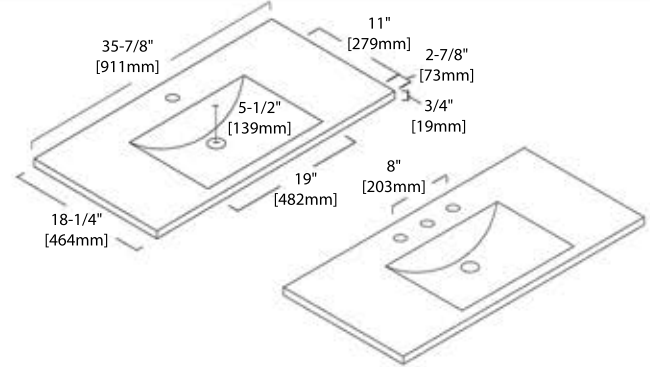


C04 3618

C04 3618 TH


48" VANITY

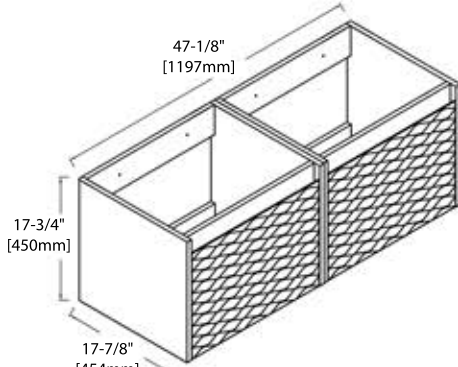

V8008 48 01

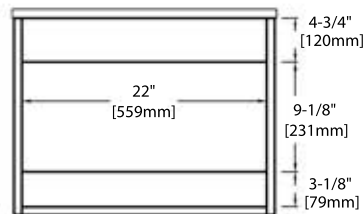


BACK VIEW

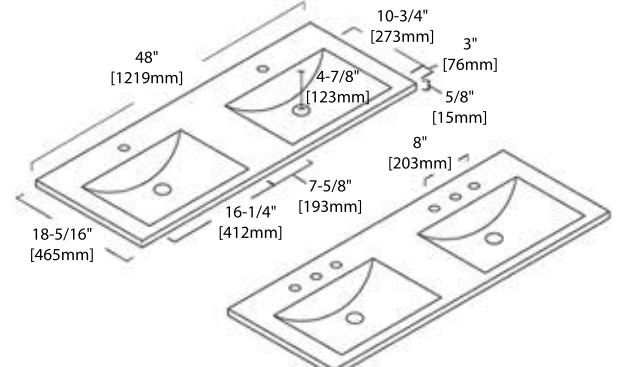


C04 4818

C04 4818 TH

24" MIRROR / MEDICINE CABINET

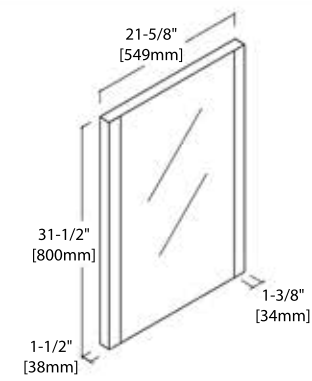


M6001 24

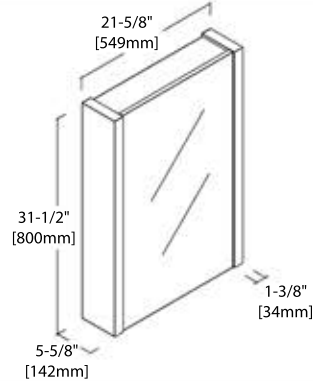


MC7014 24

30" MIRROR / MEDICINE CABINET

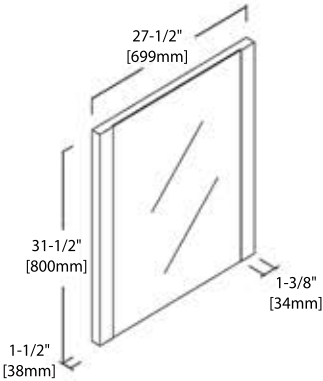


M6001 30

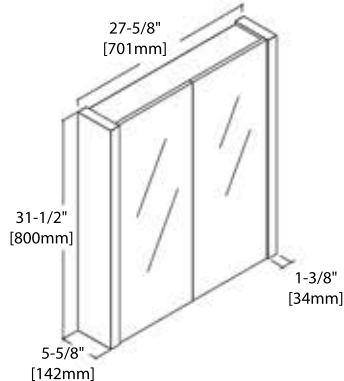


MC7014 30

36" MIRROR

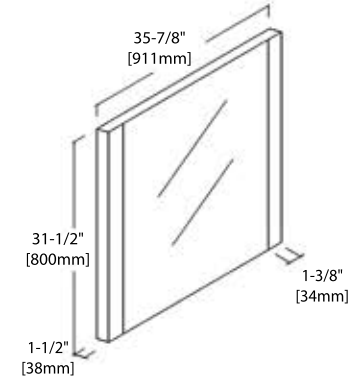

M6001 36

12" SIDE CABINET

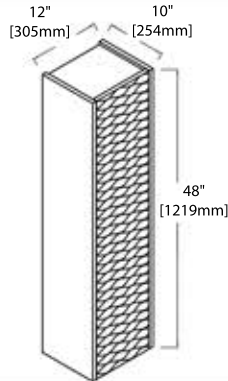

S8008 12 01

INSTALLATION MANUAL

REQUIRED TOOLS



Tape Measure



Pencil



Electric Drill



Drill Bit (6mm)



Silicone



Screwdriver



Spirit Lever

Paris 24" / 30" / 36"



4A



10B



6C



2D

PARTS INCLUDED

Paris 48"



8A




20B




12C



4D

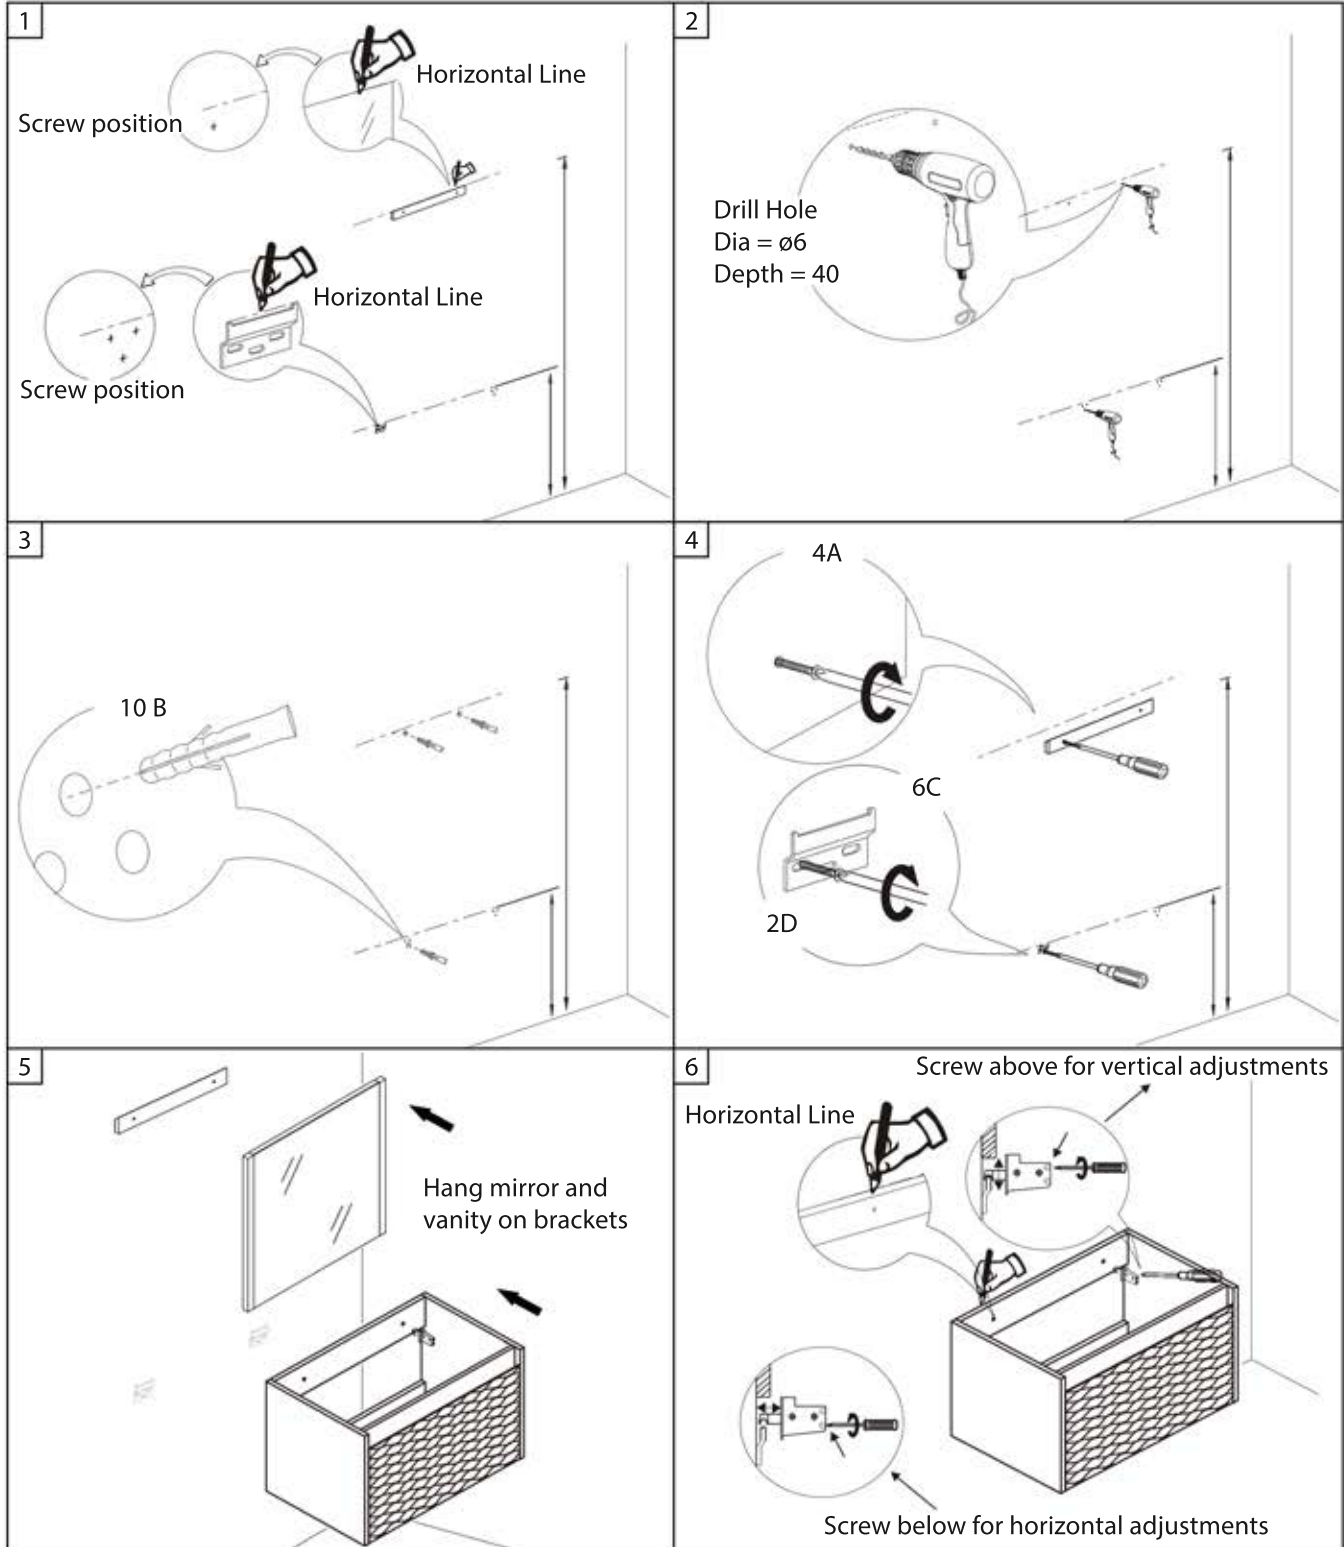

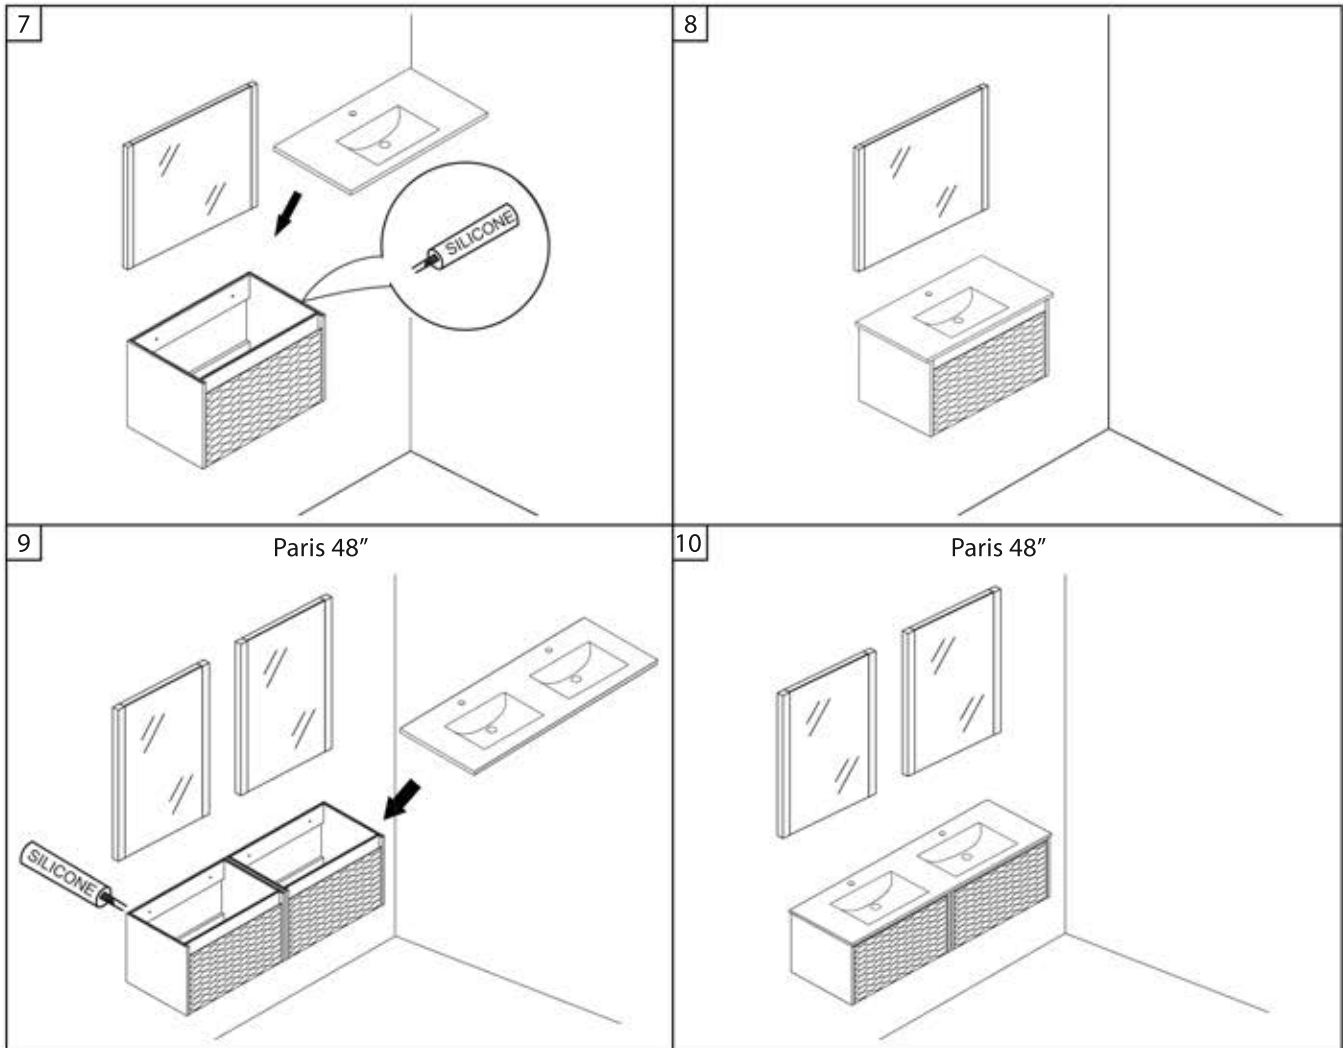

PARTS INCLUDED

