


American Standard

INSTALLATION INSTRUCTIONS

TOWN SQUARE® S DECK-MOUNT BATH FILLER

T455900
T455901

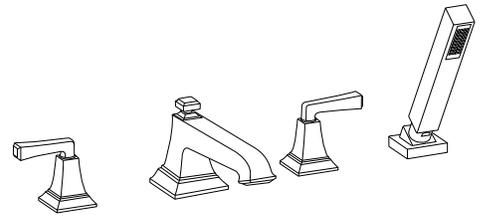

Thank you for selecting American Standard...
the benchmark of fine quality for over 140 years.

To ensure that your installation proceeds smoothly-please read these instructions carefully before you begin.

Certified to comply with ANSI A112.18.1M

RECOMMENDED TOOLS



Phillips Screwdriver



Channel Locks



Adjustable Wrench




Flat Blade Screwdriver



Hex Wrench (supplied)


ROUGHING-IN DIMENSIONS

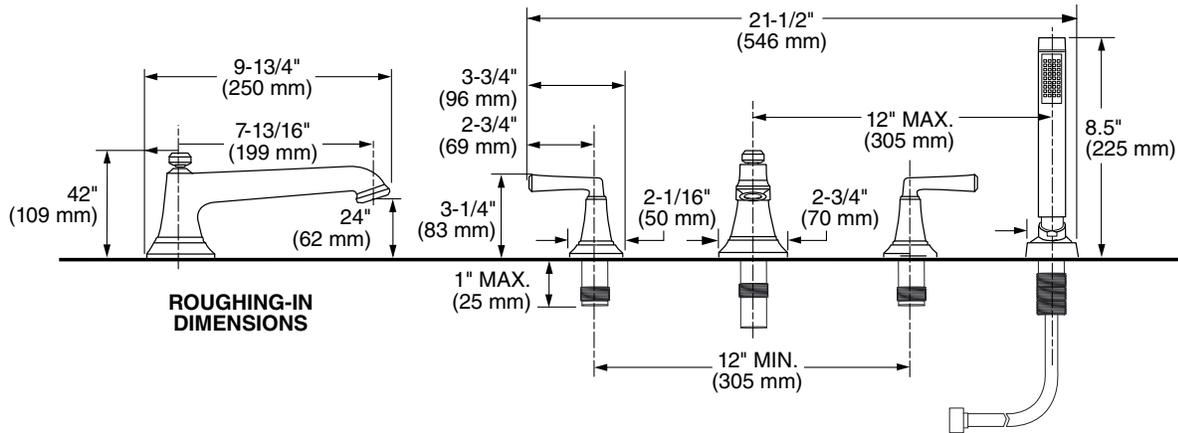

1 INSTALL SPOUT


CAUTION Turn off hot and cold water supplies before beginning.

- Thread DIVERTER INSERT (5) carefully it touches the installation surface, be sure the RUBBER RING (4) is properly seated in it's RECESS at the base of the SPOUT (1).
- Thread SET SCREW (3) using 5 mm hex wrench supplied. Make certain SET SCREW (3) is properly aligned and tight so that SPOUT (1) is locked in place.
- Install PLUG BUTTON (2).

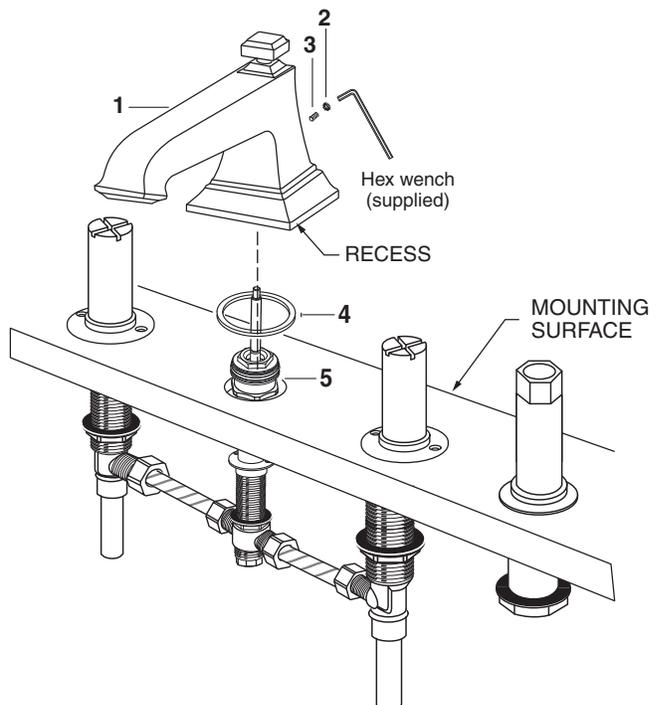


2 VALVE ASSEMBLY

- Remove PLASTER GUARDS.
- Thread INSERT (1) into SIDE VALVE (2) until it touches the installation surface.
- Thread INSERT (3) into SIDE VALVE (4) until it touches the installation surface.
- Tighten COUPLING (5) into TEE (6) for products without hand shower.

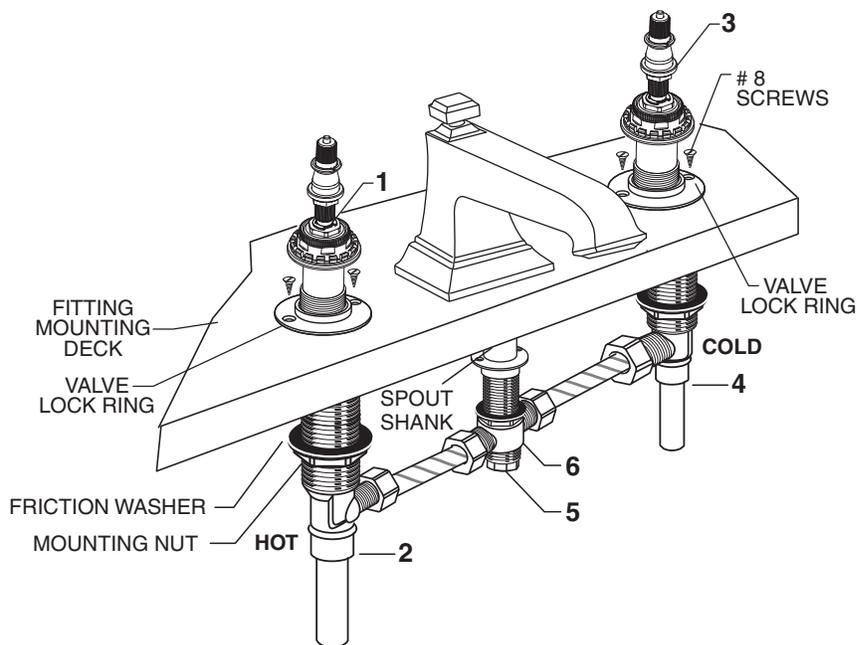

3 INSTALL HANDLES


- Turn VALVE to OFF position.
- Push ADAPTER (1) on VALVE STEM (2), so that the hole of the ADAPTER (1) without a spline is facing up. **Fig. A.** Tighten STEM SCREW (3) to secure ADAPTER (1).
- Align DECK ADAPTER (5) to LEVER HANDLE ASSEMBLY (4). Push LEVER HANDLE ASSEMBLY (4) onto DECK ADAPTER (5) firmly to flush against mounting surface.

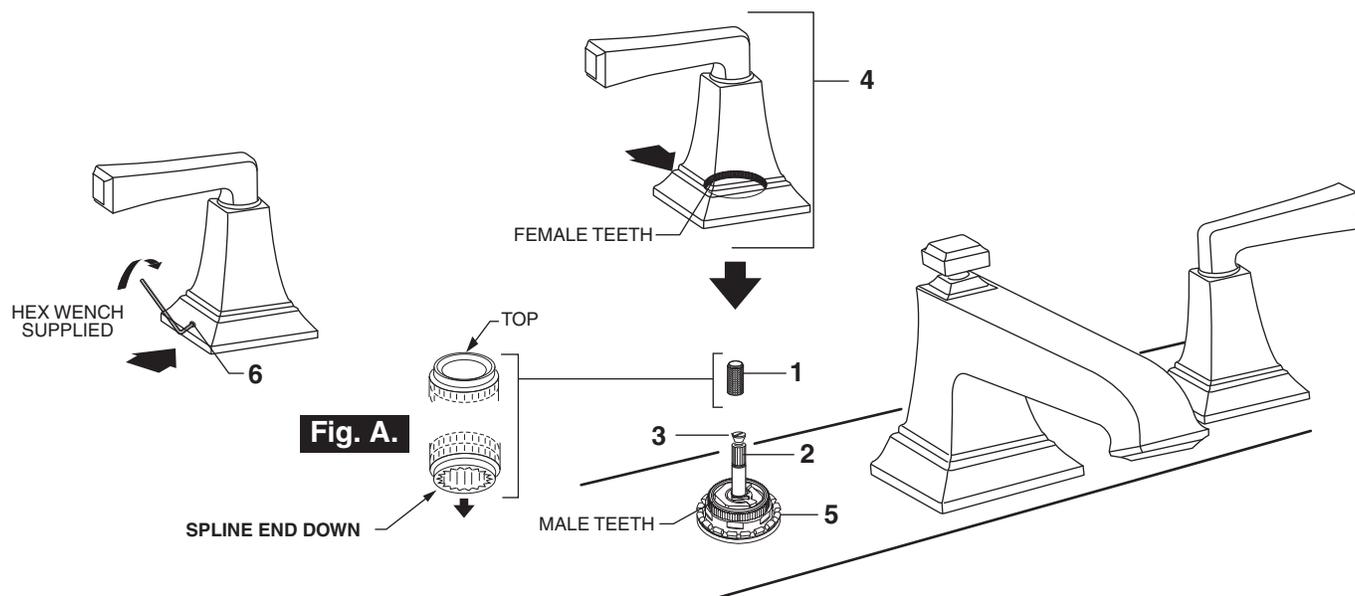

4 HANDSHOWER INSTALLATION (Model T455.901 series only)


- Drop SPRAY ESCUTCHEON (1) through the fourth hole of the tub ledge (12" max from SPOUT center) with SPRAY ESCUTCHEON (1) directed towards tub center. Be sure RUBBER RING (2) is properly seated in ESCUTCHEON (1). Install RUBBER WASHER (3) BRASS WASHER (4) and LOCKNUT from underside of ledge.
- Secure SPRAY ESCUTCHEON (1) by tightening LOCKNUT.
- Add SEAL WASHER (5) and connect HOSE (10) to outlet nipple at the bottom of COUPLING (7). Tighten firmly.
- Slip SHOWER HOSE (8) with COUPLING NUT through SPRAY ESCUTCHEON (1). Install SEAL (9) and connect both HOSES (8) and (10), Connect HAND SHOWER (11) to SPRAY HOSE (8).

NOTE: When not in use, HANDSHOWER should be seated in the HOLDER.

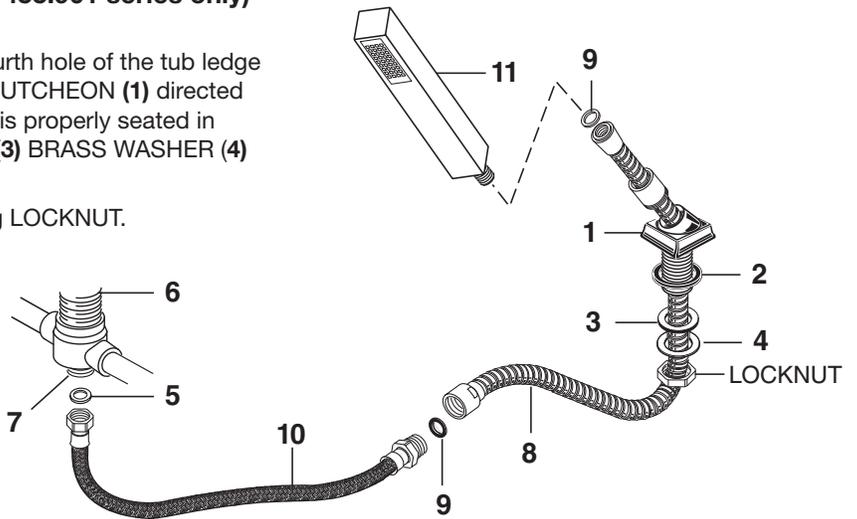

5 SERVICE

- To change direction of handle rotation, proceed as follows:
 - Turn valve to OFF position.
 - Loosen SET SCREW (1) and pull off HANDLE ASSEMBLY (2).
 - Loosen HANDLE SCREW (3) and pull off HANDLE ADAPTER (4).
 - Remove SPRING CLIP (5).
 - Lift STOP WASHER (6), turn 90° and replace.
 - Replace SPRING CLIP (5).
 - Refer to step four for HANDLE ASSEMBLY (2) instructions.
- If spout drips, operate handles several times from OFF to ON position. Do not force handles turn only 90°.

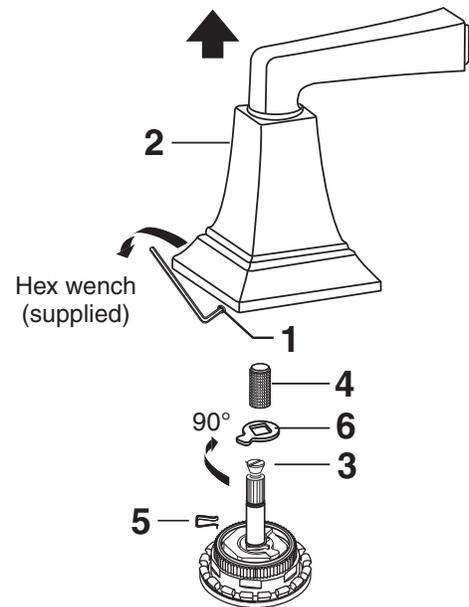

6 CARE INSTRUCTIONS:

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.

DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.



American Standard

TOWN SQUARE® S DECK MOUNT TUB FILLER MODEL NUMBER

T455900 / T455901

Replace the "YYY" with appropriate finish code

POLISHED CHROME	002
POLISH NICKEL	013
LEGACY BRONZE	278
BRUSHED NICKEL	295

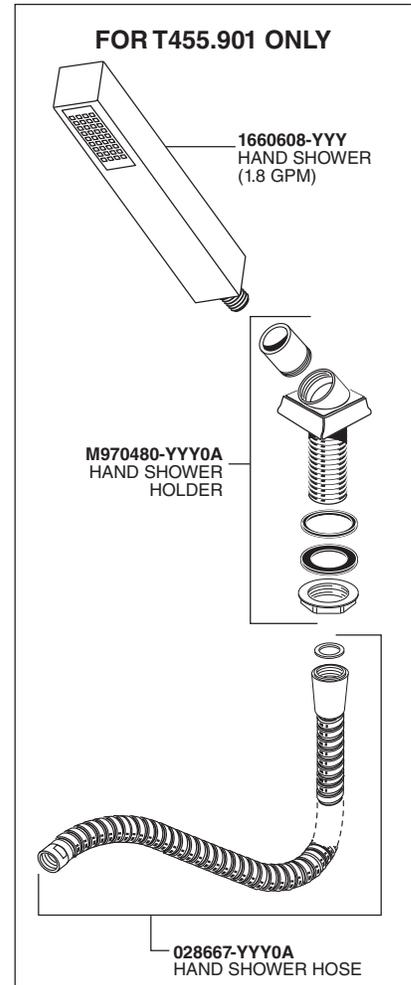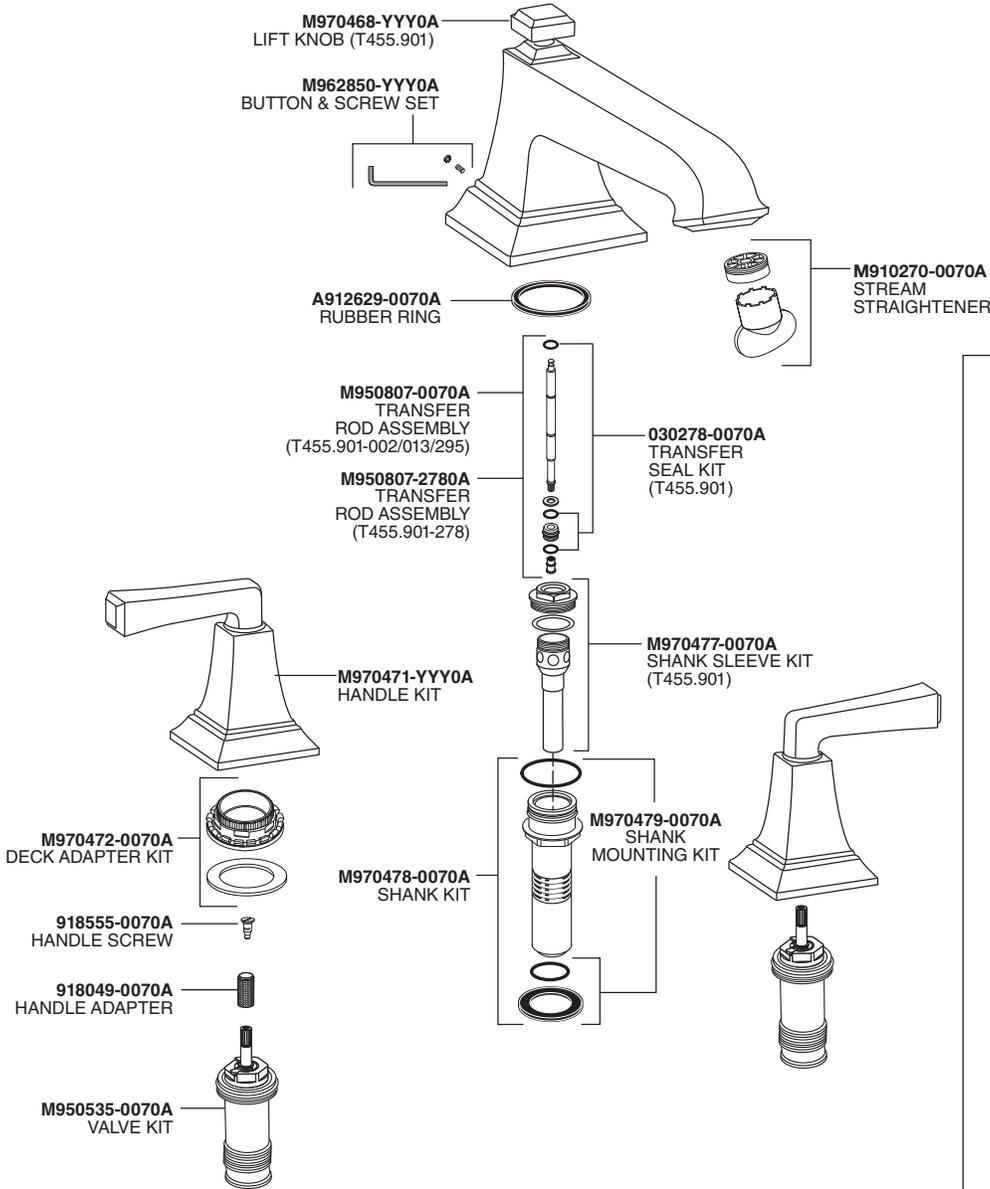

PART OF LIXIL

HOT LINE FOR HELP

For toll-free information and answers to your questions, call:
1 (800) 442-1902

Mon. - Fri. 8:00 a.m. to 8:00 p.m. EST
Saturday 10:00 a.m. to 4:00 p.m. EST

IN CANADA 1-800-387-0369
(TORONTO 1-905-306-1093)

Weekdays 8:00 a.m. to 7:00 p.m. EST

IN MEXICO 01-800-839-1200

