

ASSEMBLY INSTRUCTION FOR ACME FURNITURE


Model #DN02274









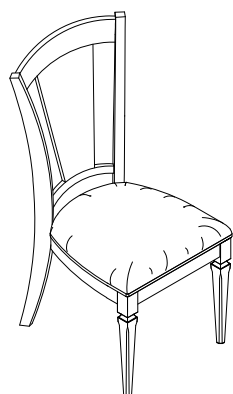

DESCRIPTION: SPLAT BACK SIDE CHAIR

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

**** Do not fully tighten screws until fully assembled ****


PART LIST:




①		②		⑤			
				HARDWARE LIST			
				NO.	Drawing	Description	Q'ty
BACK FRAME: 1PC		CUSHION SEAT: 1PC		A		Bolt (Φ5/16"x3")	4pcs
				B		Bolt (Φ5/16"x2-1/4")	4pcs
③		④		C		Bolt (Φ5/16"x1-3/4")	1pc
				D		Flat washer(Ø5/16"x19mm)	9pcs
				E		Spring washer (Ø5/16")	9pcs
FRONT LEFT LEG: 1PC		FRONT RIGHT LEG: 1PC		F		Ø5/16" Wrench(12mm)	1pc

STEP 1

STEP 1.2

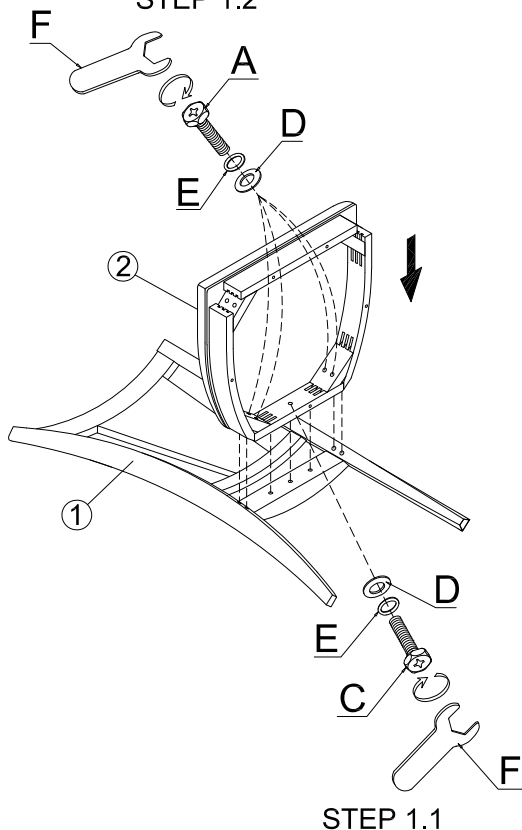

STEP 2

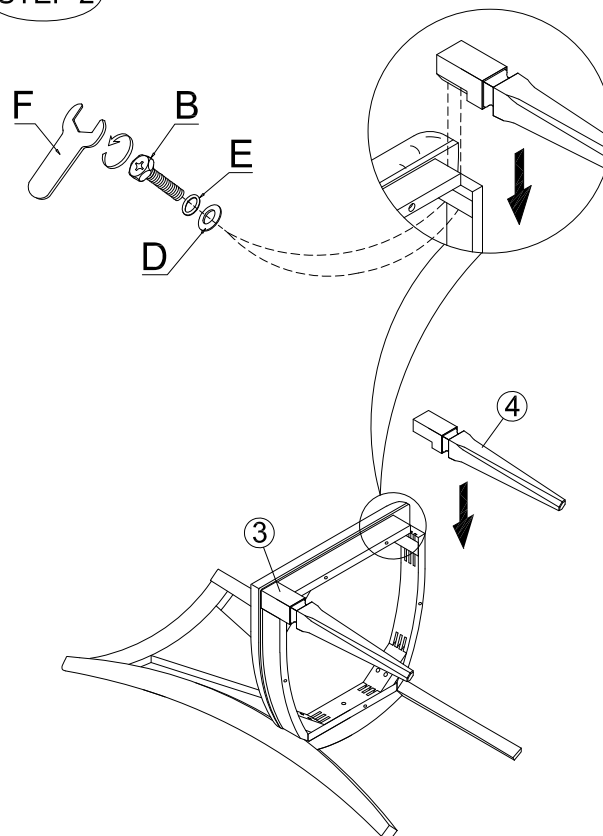

CLEANING INSTRUCTION

Clean the surface of the Splat Back Side Chair with furniture polish and a soft cloth.
Attention

*** Some number parts listed on the instruction sheet may not be in parts bag as they may be assembled. Carefully check parts and packing materials prior to ordering replacements.***