

# Instruction Sheet for Modular Group

1. Ensure a suitable location has been selected for your modular before beginning assembly.
2. Wooden legs and U Clips are located inside the black dust cover at the bottom of pieces. Unzip to remove the legs and clips.
3. Attach the wooden legs to the corresponding pre-drilled holes by hand turning in a clockwise direction until tight(see Figure 1).
4. If required, plastic U Clips are included for connecting pieces together to prevent movement. The U clips are installed into the base and hold pieces in place(see Figure 2). It is need 3 step to complete. First, please use U Clips to connect RAF sectional. Second, please use U Clips to connect LAF sectional. Third, please use block to raise the corner and sectional pieces (See Figure 3), then you can use U Clips to connect the corner with sectional pieces by your hand. The block size is 10 \* 3 \* 2 inch. Don't use the wood that more than this size.
5. The Ottoman does not include U Clis to enable it to be easily repositioned.
6. Your modular is now ready to use.

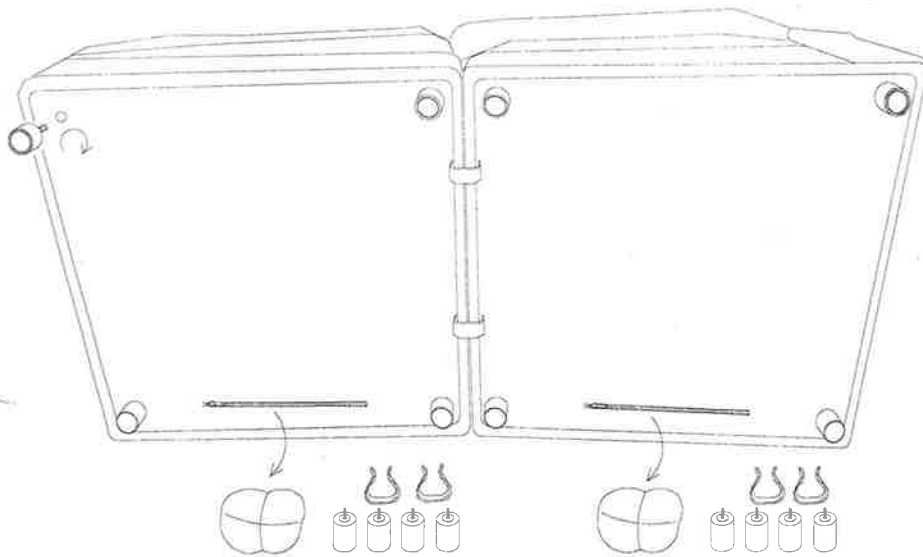


Figure 1


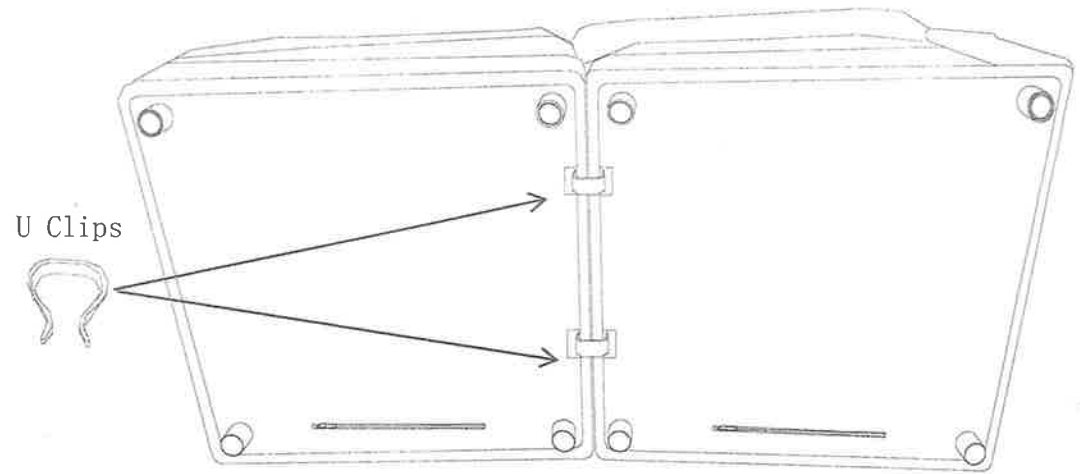


Figure 2

Turn the page over to see the remaining instructions


Step 1

RAF Sectional

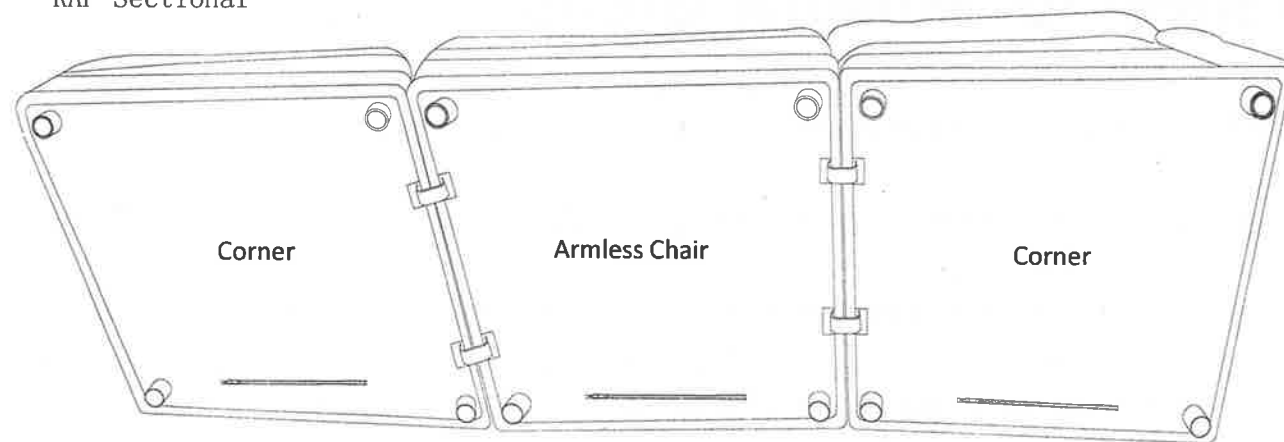

Step 2

LAF Sectional

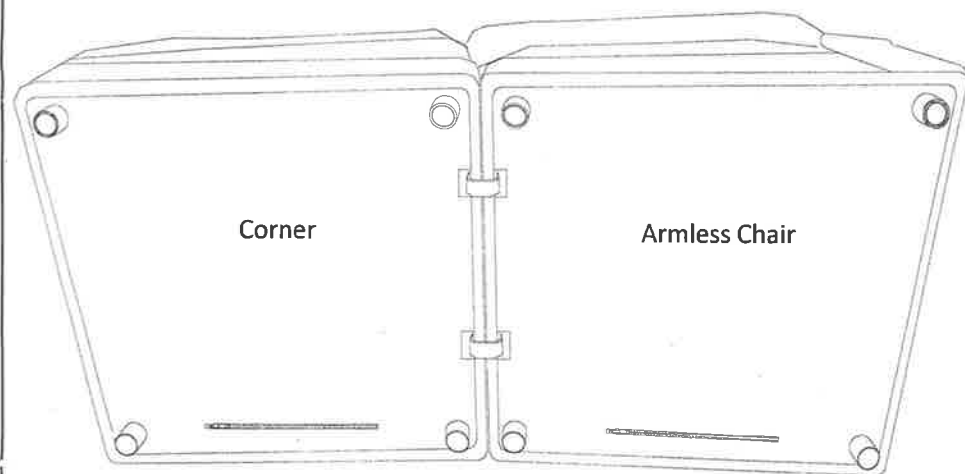

Step 3

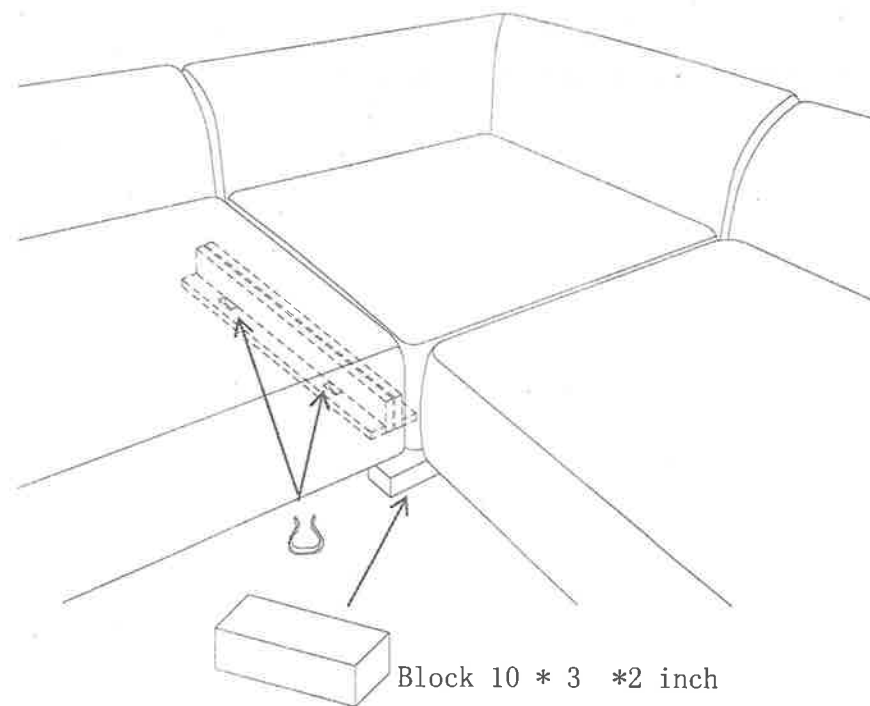


Figure 3