







ASSEMBLY INSTRUCTION FOR ACME FURNITURE




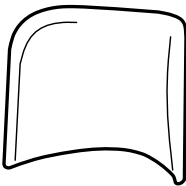


MODEL#DN02367

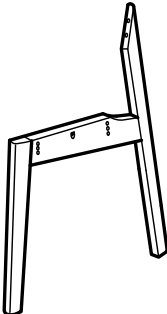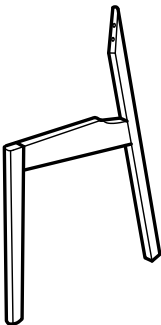
Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

*** Do not fully tighten screws until fully assembled ***

	COMPONENT PARTS	
DESCRIPTION	PART NAME	QTY (PCS)
①	CHAIR BACK 	2
②	FRONT RAIL 	2
③	BACK RAIL 	2
④	LEFT SIDE LEG 	2
⑤	RIGHT SIDE LEG 	2
⑥	CHAIR SEAT 	2

HARDWARE REQUIRED

Ⓐ		BOLT	M6 x35mm (BLACK)	4 PCS
Ⓑ		BOLT	M6 x50mm (BLACK)	20 PCS
Ⓒ		SPRING WASHER	5/16" (BLACK)	16 PCS
Ⓓ		DOWEL	M8 x 30mm	8 PCS
Ⓔ		CHIPBOARD SCREW	M4 x 32mm	8 PCS
Ⓕ		ALLEN KEY	M4 x 100mm	1 PC

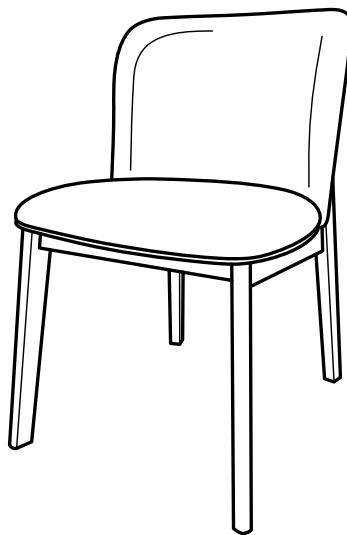


Attention

*** Some number parts listed on the instruction sheet may not to be in parts bag as they already be assembled. Carefully check parts and packing materials prior to ordering replacements.


How to assemble :

STEP 1

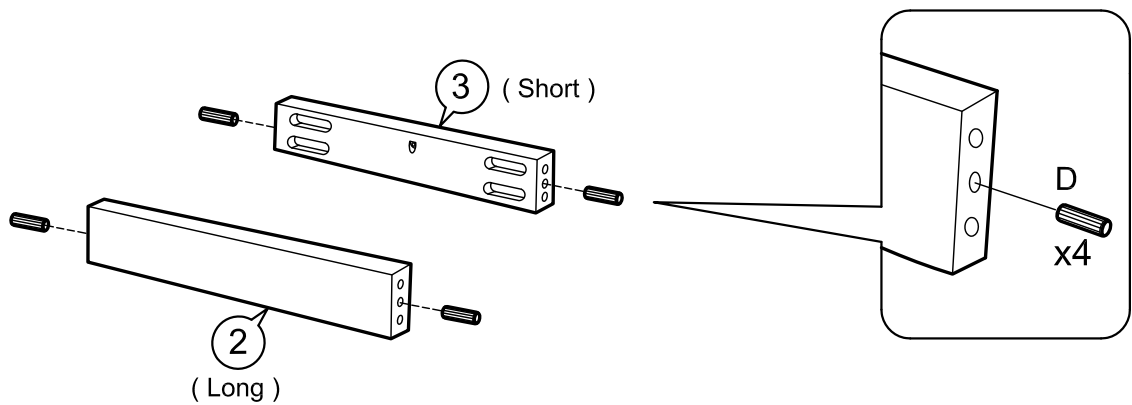


(X2)

STEP 2

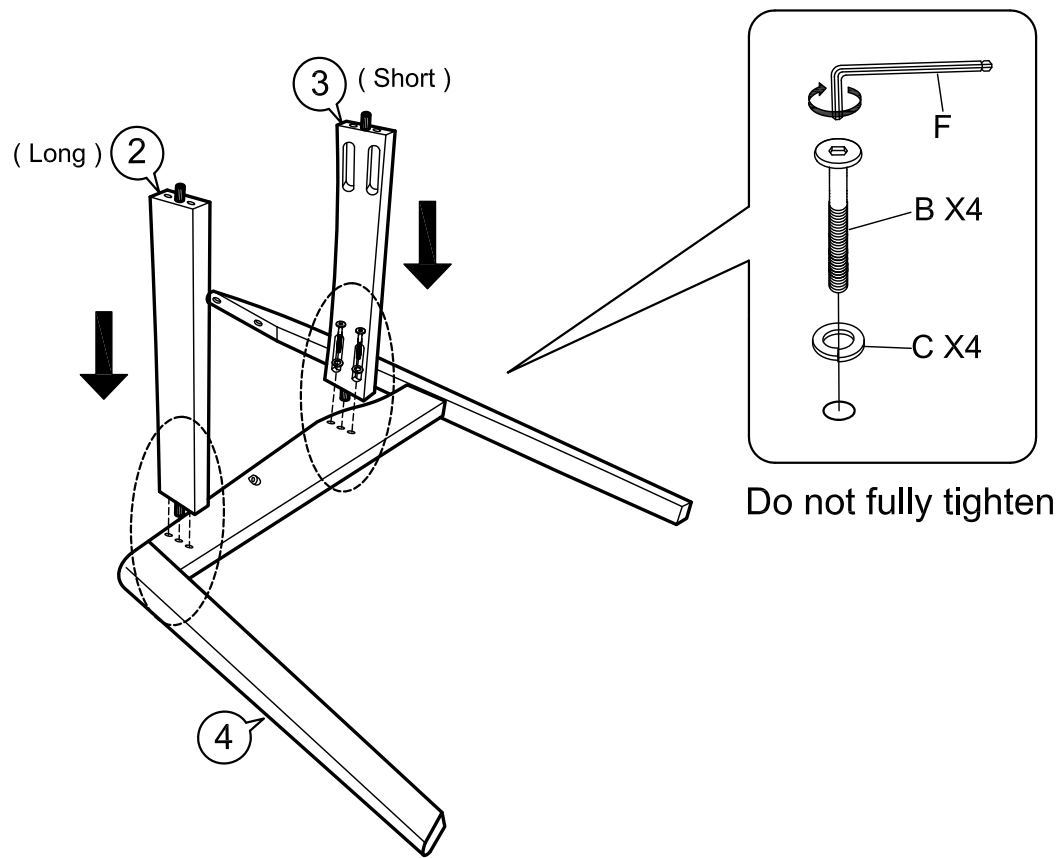


(X2)

STEP 3

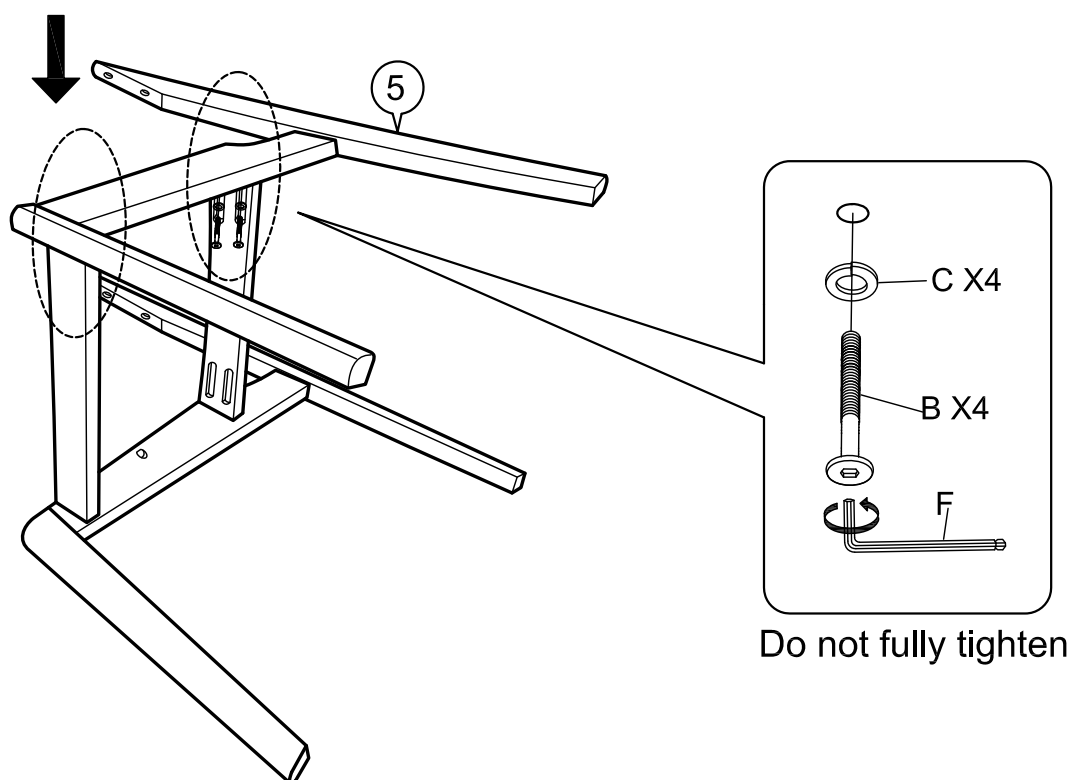


(X2)

STEP 4

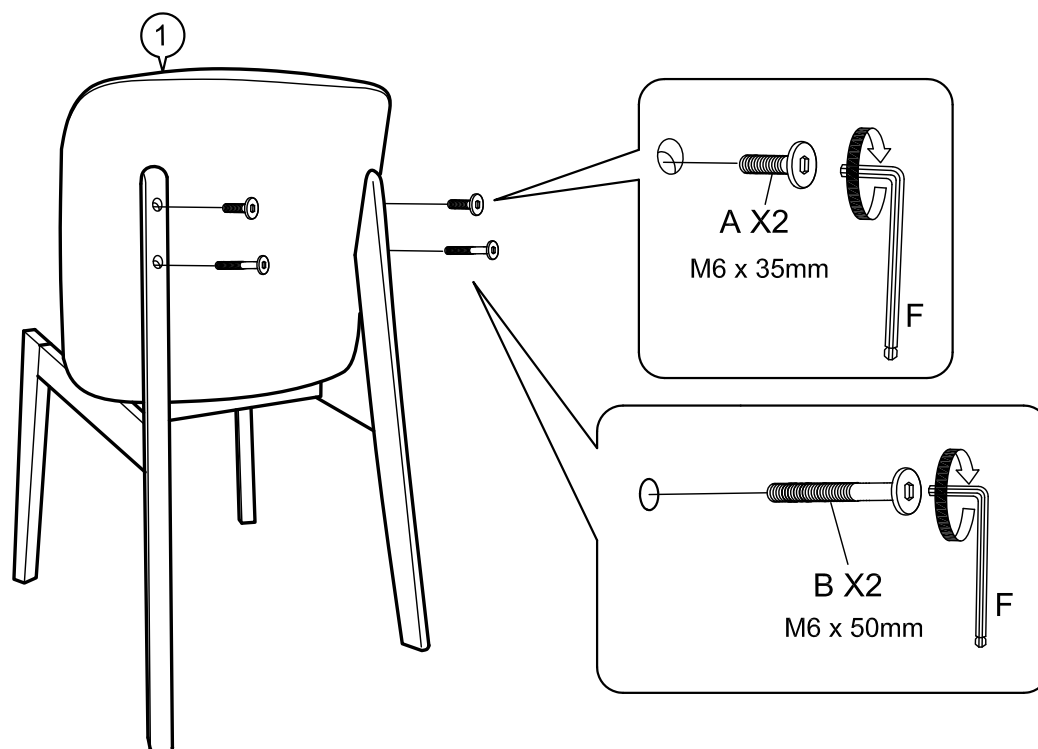


(X2)

STEP 5

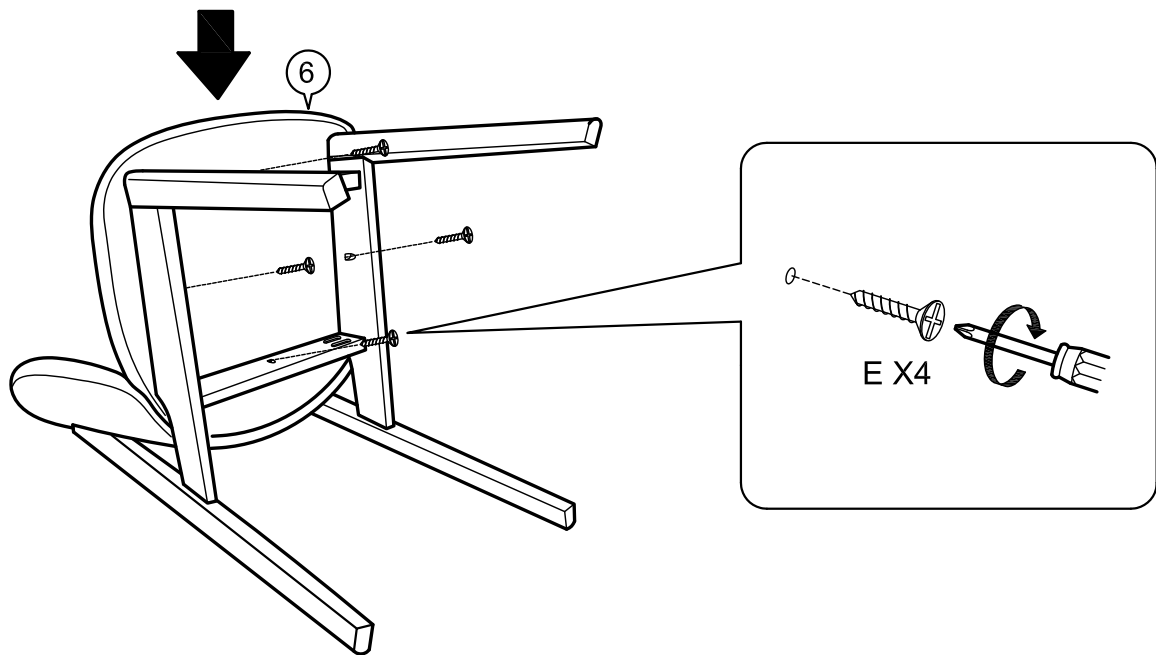

(X2)

STEP 6

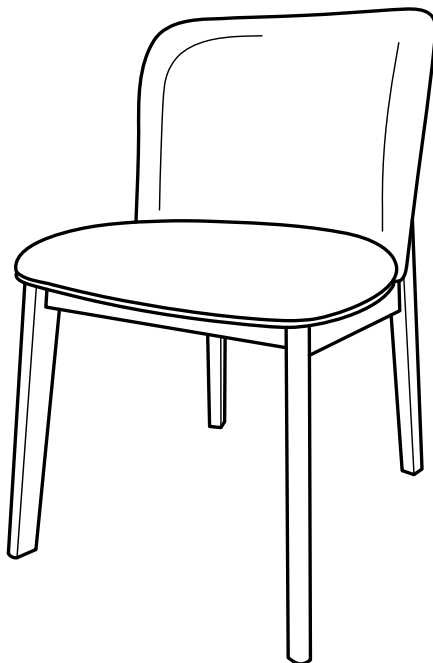

Place on a flat surface to make sure the product is level and then tighten all the bolts.

(X2)