

## WYNDHAM COLLECTION

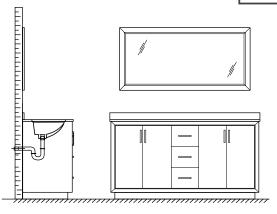



- Prior to installation please check received items against the "Packing List".
  Please report any missing items to your retailer immediately.
- Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.
- Professional installation recommended.
- Please install on a level surface. If minor door and drawer alignment is required, please follow the easy directions below.
- Backsplash comes in two pieces.

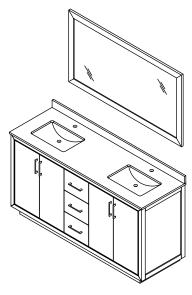

#### PACKING LIST

(Not all components may be included, depending upon your purchase)

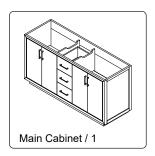

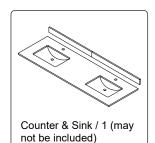








### HOW TO ADJUST HINGES (if required)











#### REQUIRED TOOLS NOT IN BOX







Spirit Level



Phillips Screwdriver



Tape measure




Pencil




Electric Drill

# WYNDHAM COLLECTION


#### INSTALLATION INSTRUCTIONS

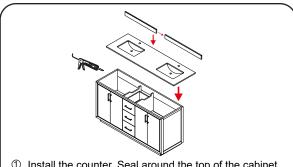


① Install the counter. Seal around the top of the cabinet with clear silicone sealant. Do not over apply. Allow to dry 24 hours for proper curing.

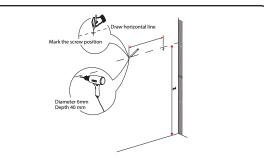

② Install the mirror: use a pencil to mark the placement of the screw holes on the wall, drill the holes and insert the plastic wall anchors.

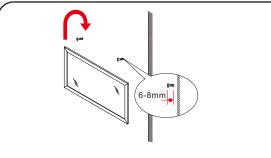


③ Install the screws into the wall anchors, leaving enough of the screw exposed to hang the mirror - approx 1/4" -1/2".

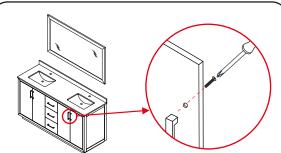


 Remove the handles from inside the cabinet doors and drawers and reinstall on the outside. Do not over tighten when reattaching.

### HOW TO ADJUST DRAWER SLIDES (if required)

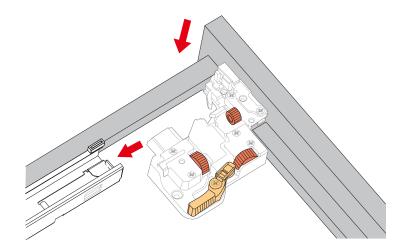


Up and Down Adjustment

# WYNDHAM COLLECTION

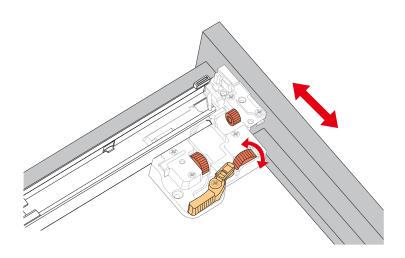

Side Adjustment

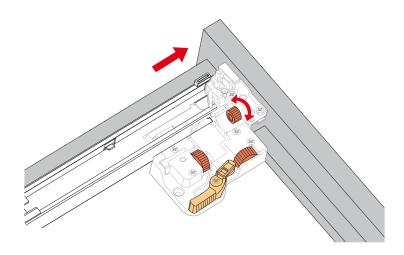


Depth Adjustment



Scan the QR code with your phone to watch detailed video instructions or visit www.wyndhamcollection.com/3dslides



### **Backboard Cutouts**

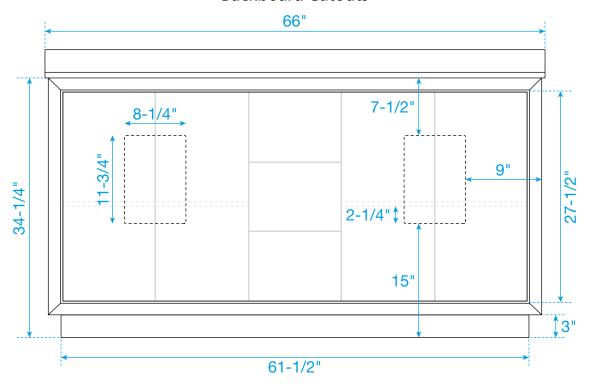

\*Note: All measurements are ± 1/4".

## **Electrical Outlets with Charging Hub**

