



ASSEMBLY INSTRUCTION

ITEM NO.:CHAF0238




Ax1

Back

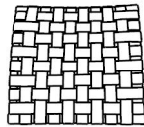


Bx1

Seat

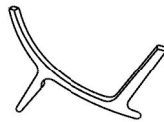


Cx1

Left side frame

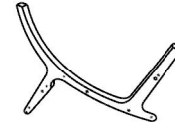

Dx1

Right side frame

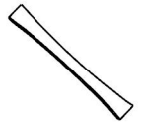

Ex1

Front stretcher



Fx2

Dowel screw



Gx2

Cam nut



Hx10

Dowel



Ix8

Bolt




Jx1

Allen wrench

①




Be sure to check all packing materials for small parts which may come loose inside the carton during shipment.

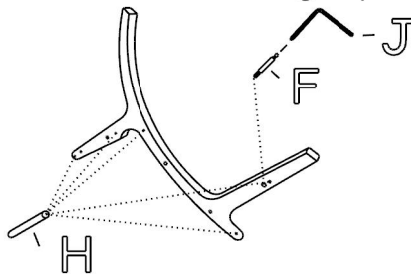


Insert dowel to left side frame C and right side frame D, Fasten dowel screw F on inside of front leg.

②

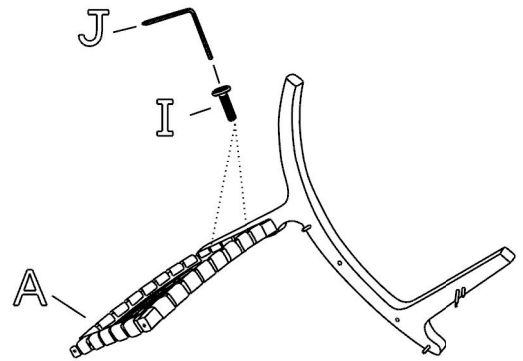


Use bolt I, allen wrench J to attach back A to right side frame D, don't fasten any bolt until step 5.

③

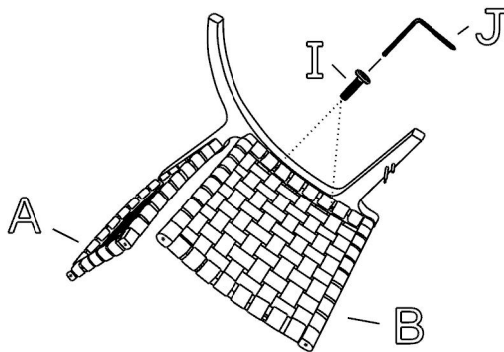


Use bolt I, allen wrench J to attach seat B to right side frame D, don't fasten any bolt until step 5.

④

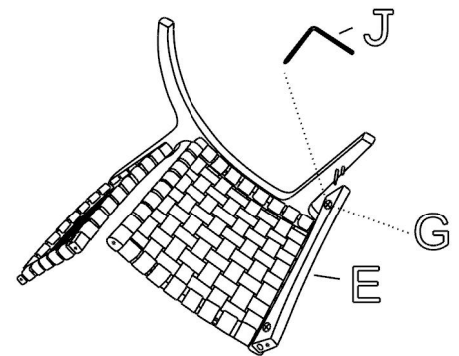


Insert dowel screw through end hole of front stretcher, use allen wrench J to fasten cam nut G from backside of the stretcher.

⑤

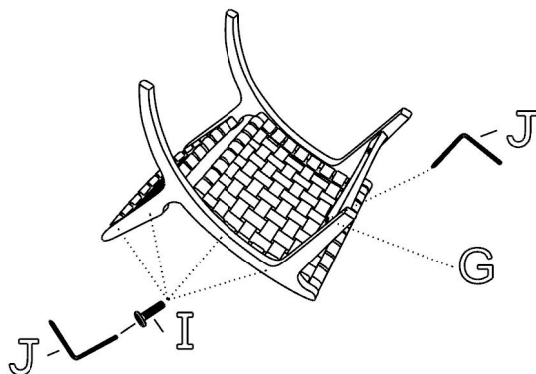

Repeat step 2,3,4 to attach back A, seat B, front stretcher E to left side frame C, make sure all parts align then fasten all bolts to secure.

⑥

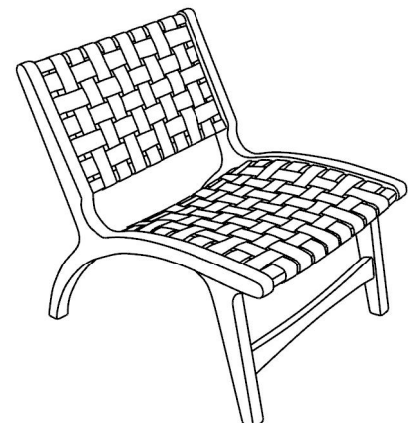

Assembly completed.