


HULALA

H O M E

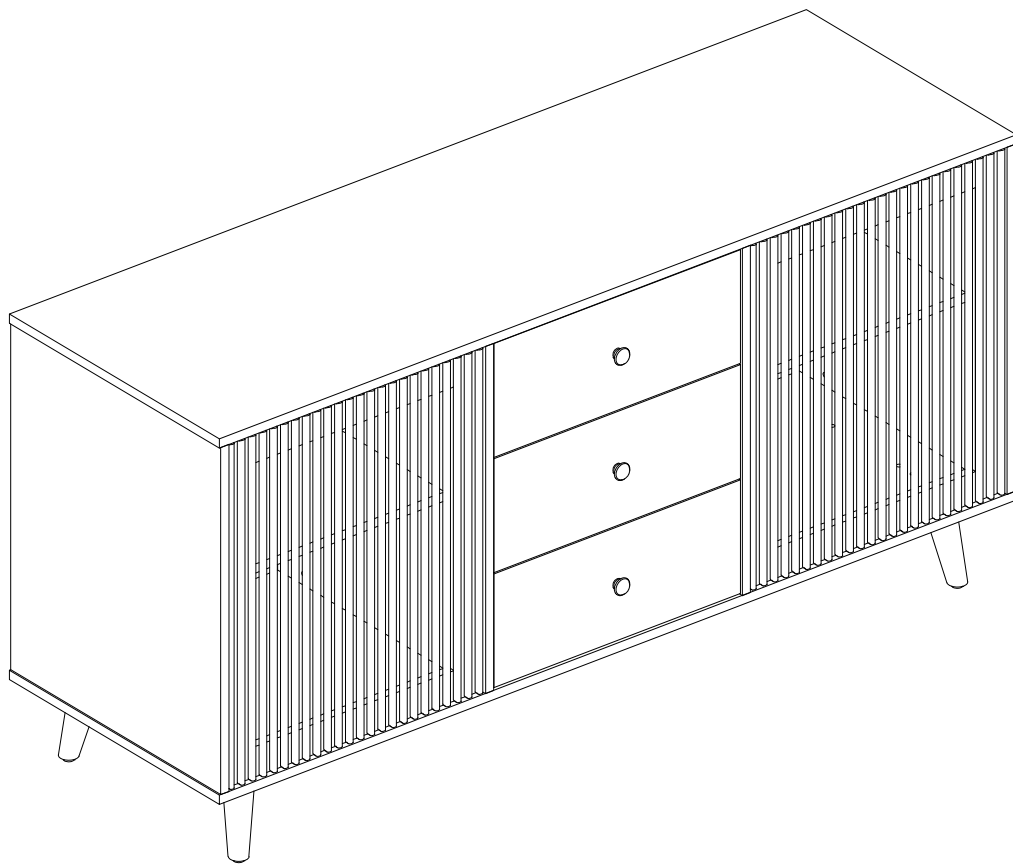

ITEM NO.TVYJ0746



NOTE:

This brochure contains IMPORTANT safety info. Please read and keep for future reference.

















MAINTAINANCE AND WARNING

- 1.Keep furniture away from heat sources.
- 2.Do not clean furniture with harsh cleaner or polishes.Do not use detergents,solvents,abrasives,spray packs or leather cleaner.
Use non-color mild soap with warm water to clean spills(Mix 1:10 soap to water).
- 3.Do not place furniture under direct sunlight,material will possibly fade over time.
- 4.Do not use on site dry cleaning machine.Children should not climb or jump on the furniture.
- 5.Do not write on furniture that is not protectedby a padded barrier.
- 6.Not for commercial use,only for residential use.



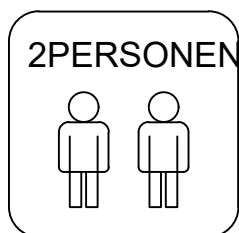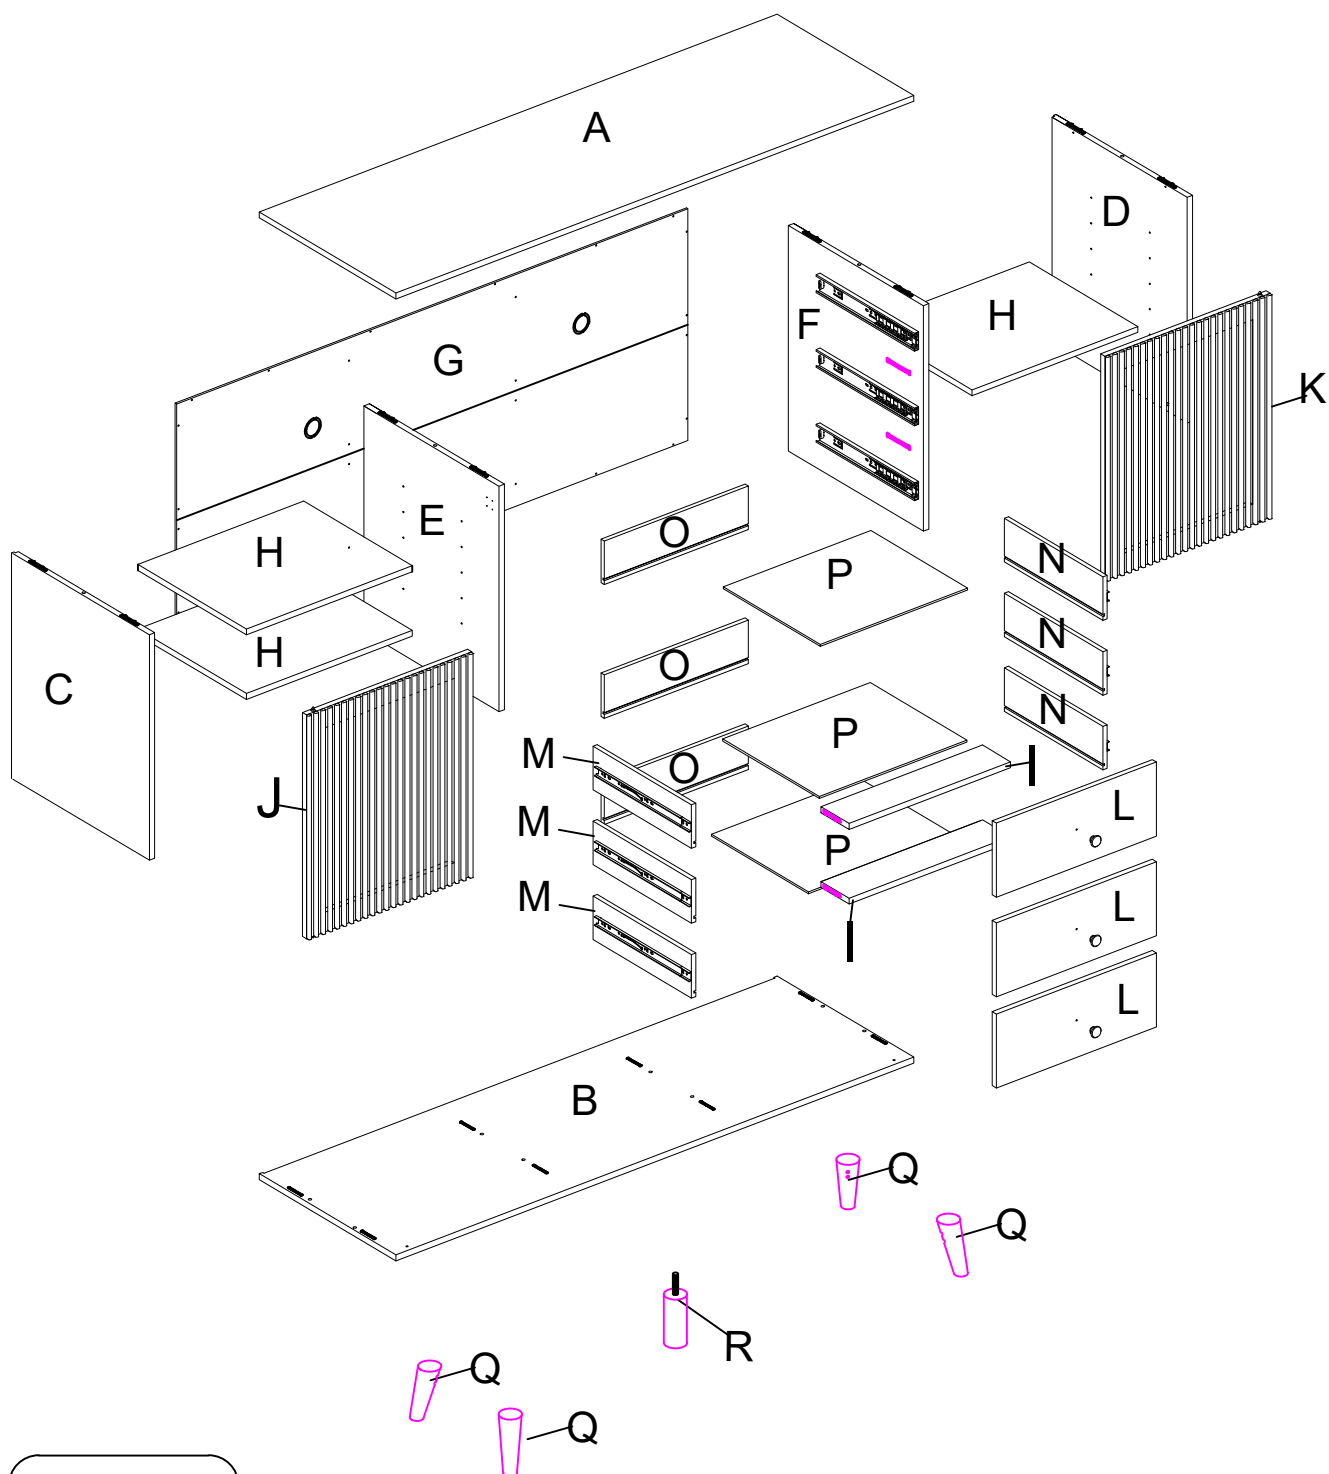



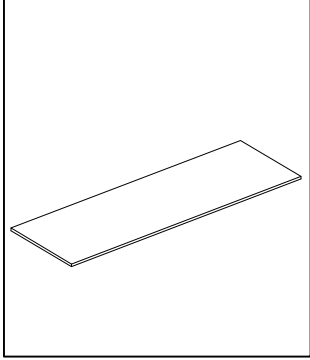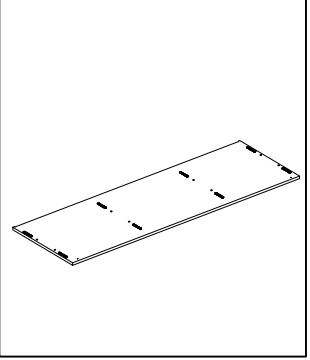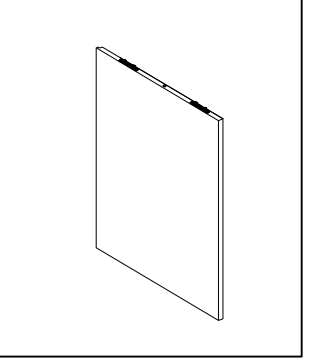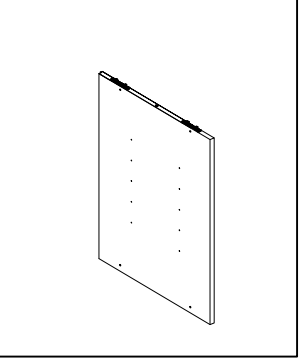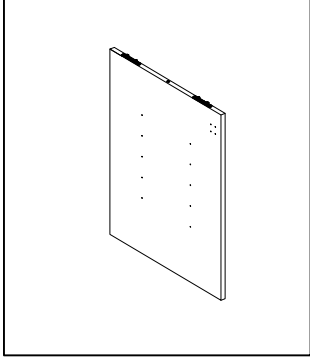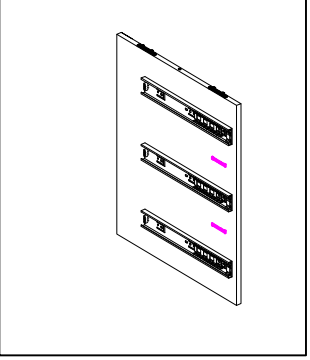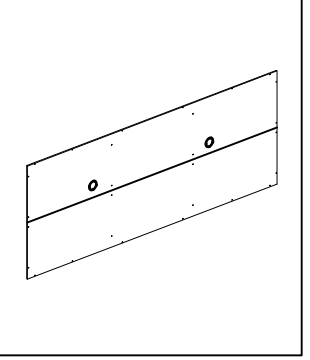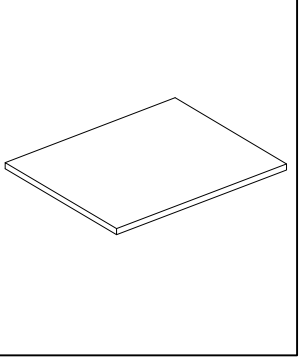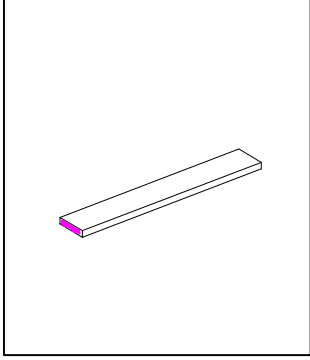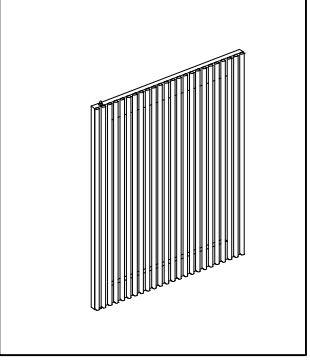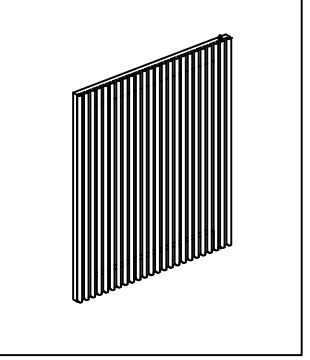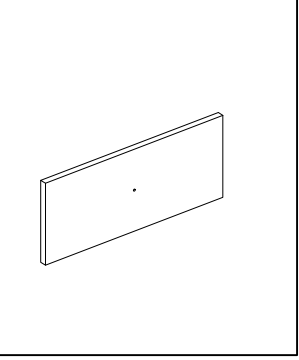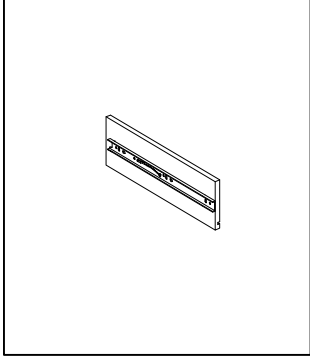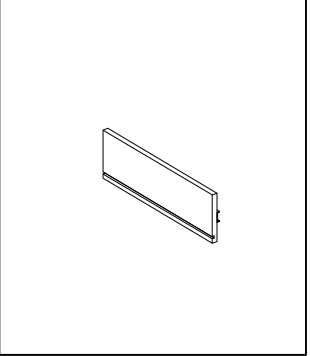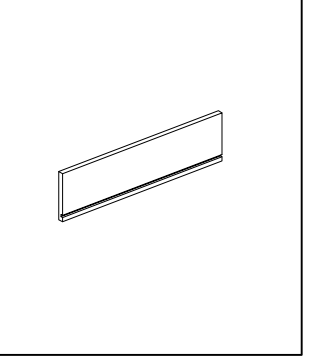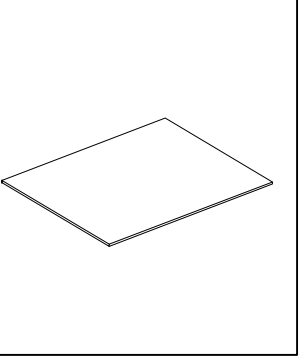














PARTS LIST

<div>A</div> <div>x1</div> <div></div>	<div>B</div> <div>x1</div> <div></div>	<div>C</div> <div>x1</div> <div></div>	<div>D</div> <div>x1</div> <div></div>
<div>E</div> <div>x1</div> <div></div>	<div>F</div> <div>x1</div> <div></div>	<div>G</div> <div>x1</div> <div></div>	<div>H</div> <div>x3</div> <div></div>
<div>I</div> <div>x2</div> <div></div>	<div>J</div> <div>x1</div> <div></div>	<div>K</div> <div>x1</div> <div></div>	<div>L</div> <div>x3</div> <div></div>
<div>M</div> <div>x3</div> <div></div>	<div>N</div> <div>x3</div> <div></div>	<div>O</div> <div>x3</div> <div></div>	<div>P</div> <div>x3</div> <div></div>



PARTS LIST

Q	x4	R	x1
			






HARDWARE LIST



#1	x24	#2	x8	#3	x3	#4	x4	#5	x4	#6	x28
											
Ø4*25m*		Ø5*3*12		Ø4*22		Ø4*39mm		Ø4*20mm		Ø1/4	
#7	x8	#8	x12	#9	x2	#10	x3	#11	x4	#12	x2
											
6mm*45		Ø1/4									
#13	x4	#14	x8	#15	x8						
											

TOOL LIST

#16	x1	#17	x1
			
M6		M5	

HARDWARE SPARE LIST

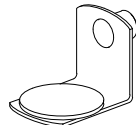
#1	x2	#8	x1	#14	x1	#15	x1	#6	x2
									
Ø4*25m*		Ø4*25m*						Ø1/4	




#14	x1	#15	x1
			

ASSEMBLY INSTRUCTIONS

STEP-1

1.picture shows.Use bolt #2 to attach rebound device #9 to side panel F&E, tighten bolts with screwdriver #17.

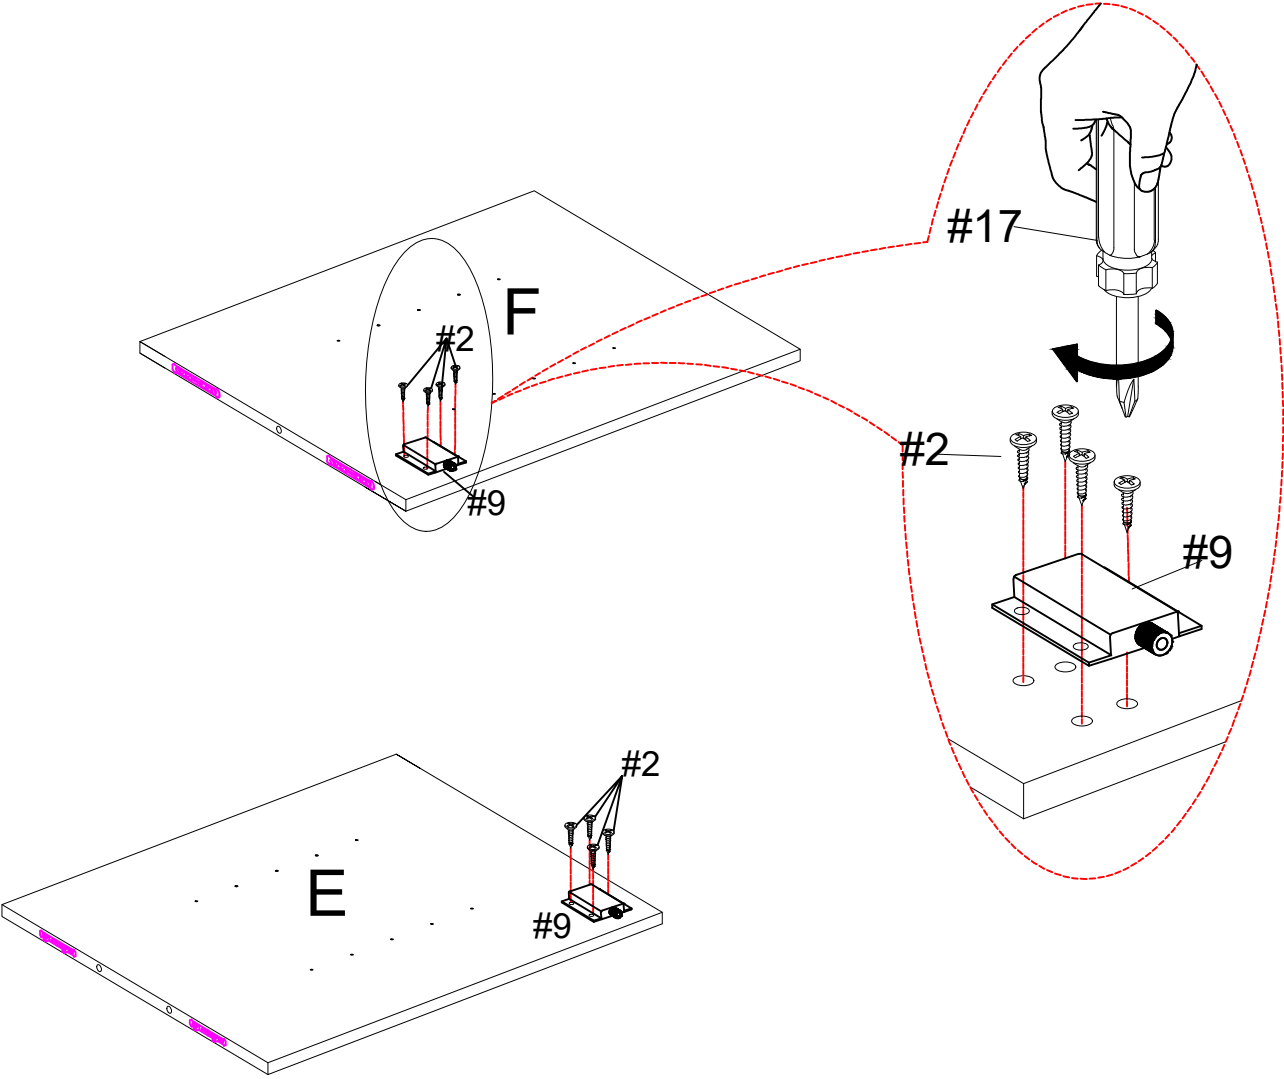






#2	x8	#9	x2	#17	x1
					
ø5*3*12				M5	

ASSEMBLY INSTRUCTIONS

STEP-2

1. Insert gasket #15 and #14 in sequence into screw #7, install leg Q on of bottom panel B, ensure the corresponding holes are aligned and fix with screw #7, then tighten the screw with an Allen key #16.
2. Rotate the middle leg R clockwise and fix it on the bottom panel B.

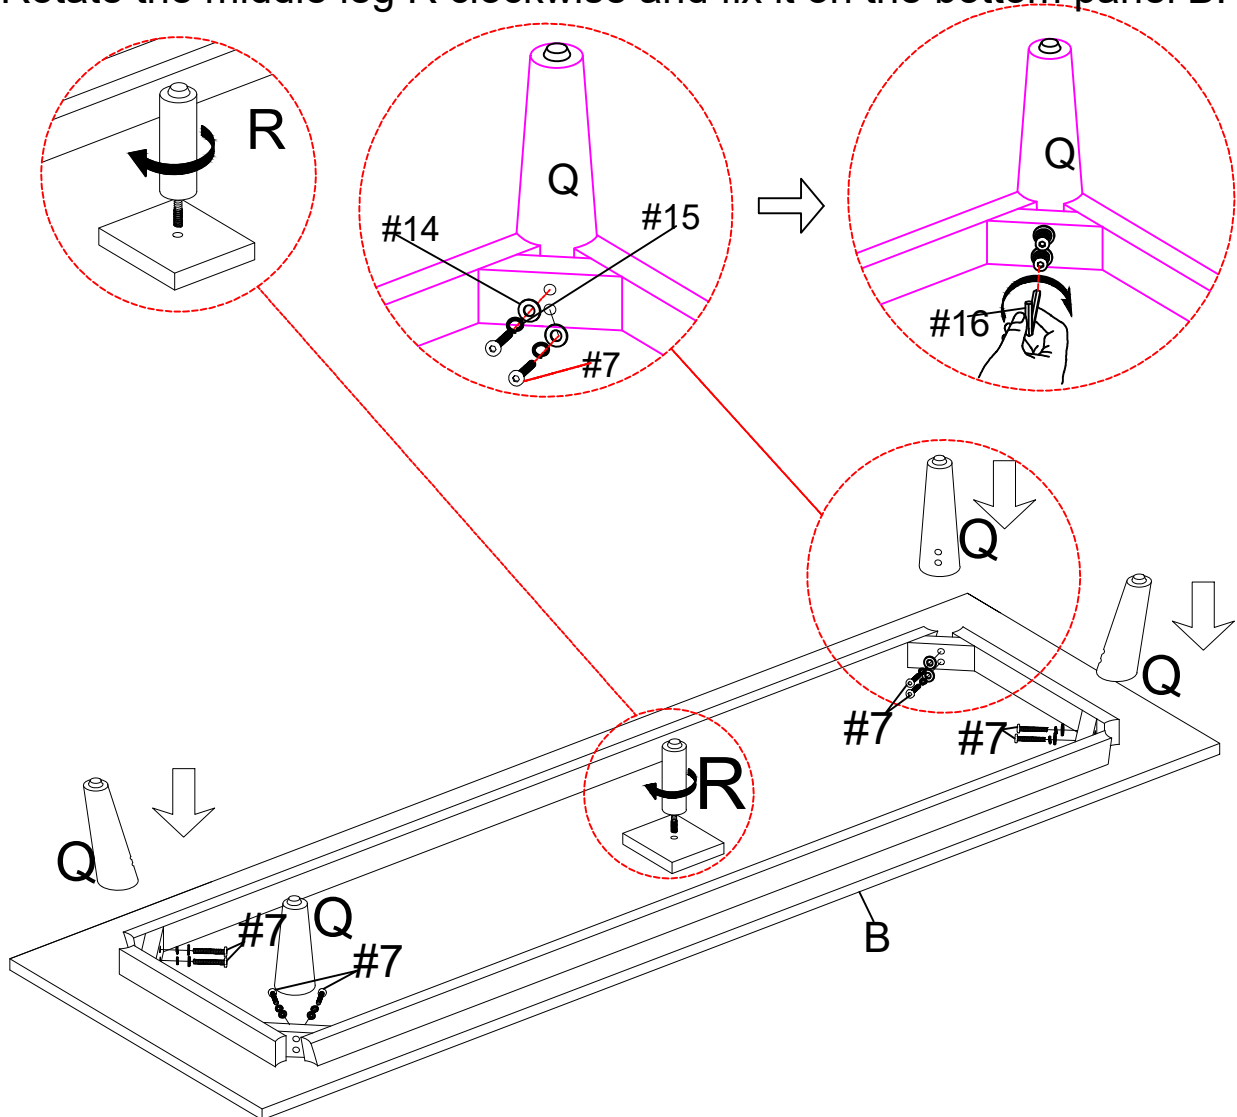



#15	x8	#14	x8	#7	x8	#16	x1
							
						M6	

ASSEMBLY INSTRUCTIONS

STEP-3

Insert side panel (I) into panel (E&F), make sure all holes aligned and then tighten it with allen key #16 as picture show.

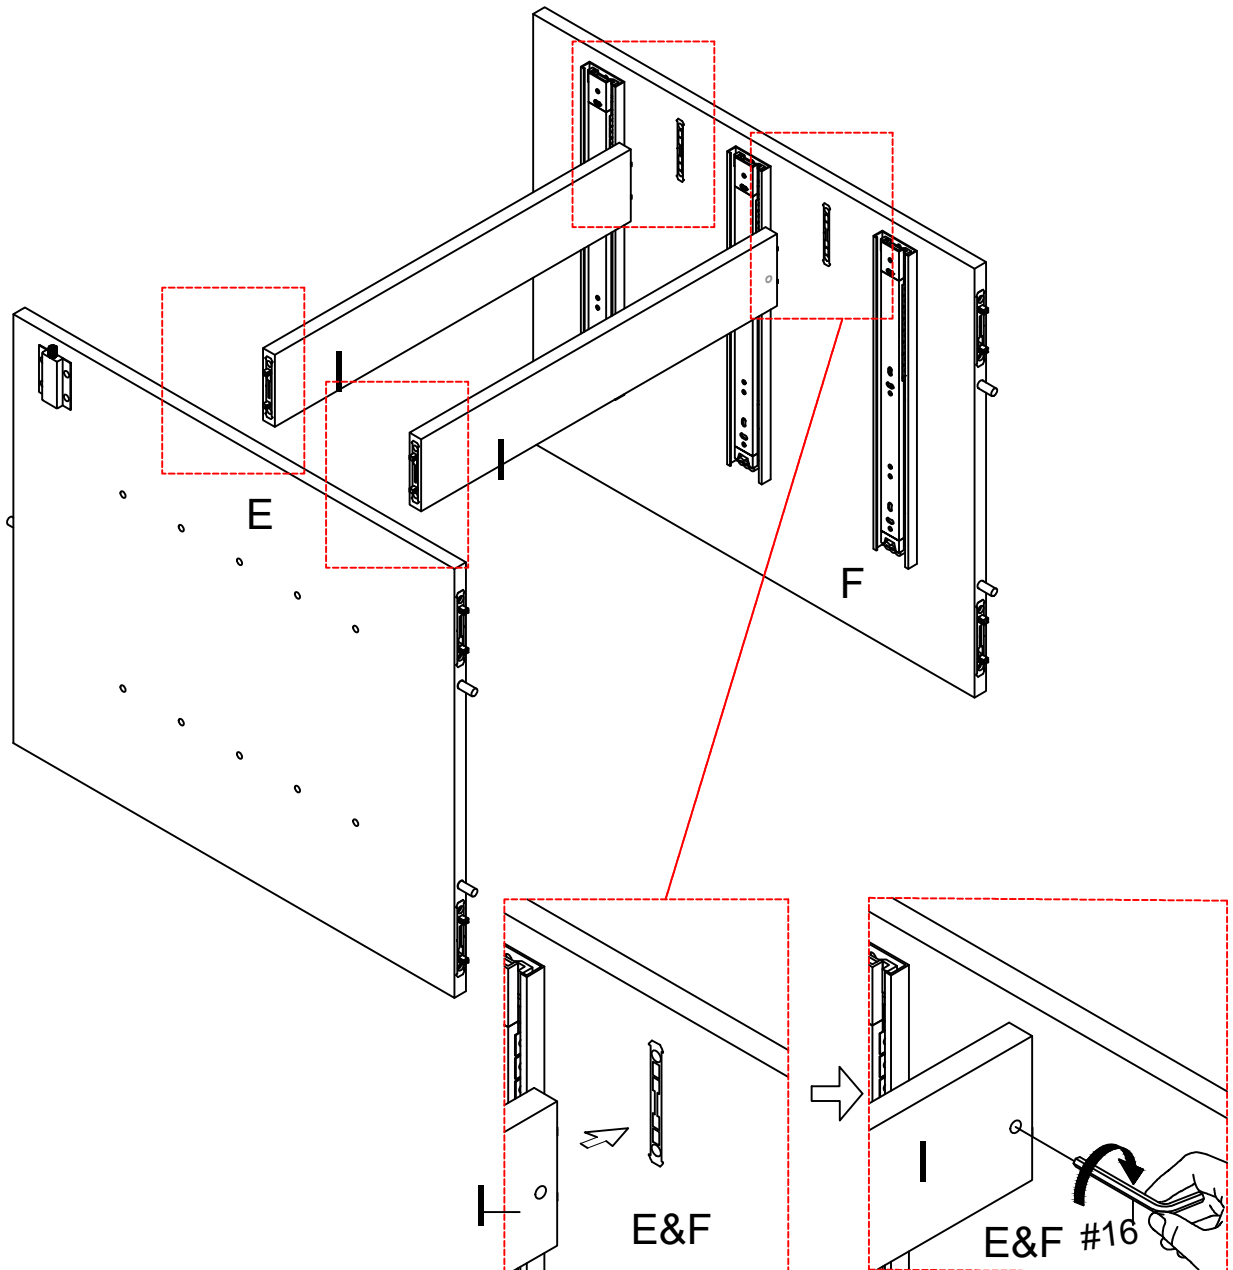



#16	x1
	
M6	

ASSEMBLY INSTRUCTIONS

STEP-4

1.Insert side panel (E&F) into bottom panel (B),make sure all holes aligned and then tighten it with allen key #16 as picture show.

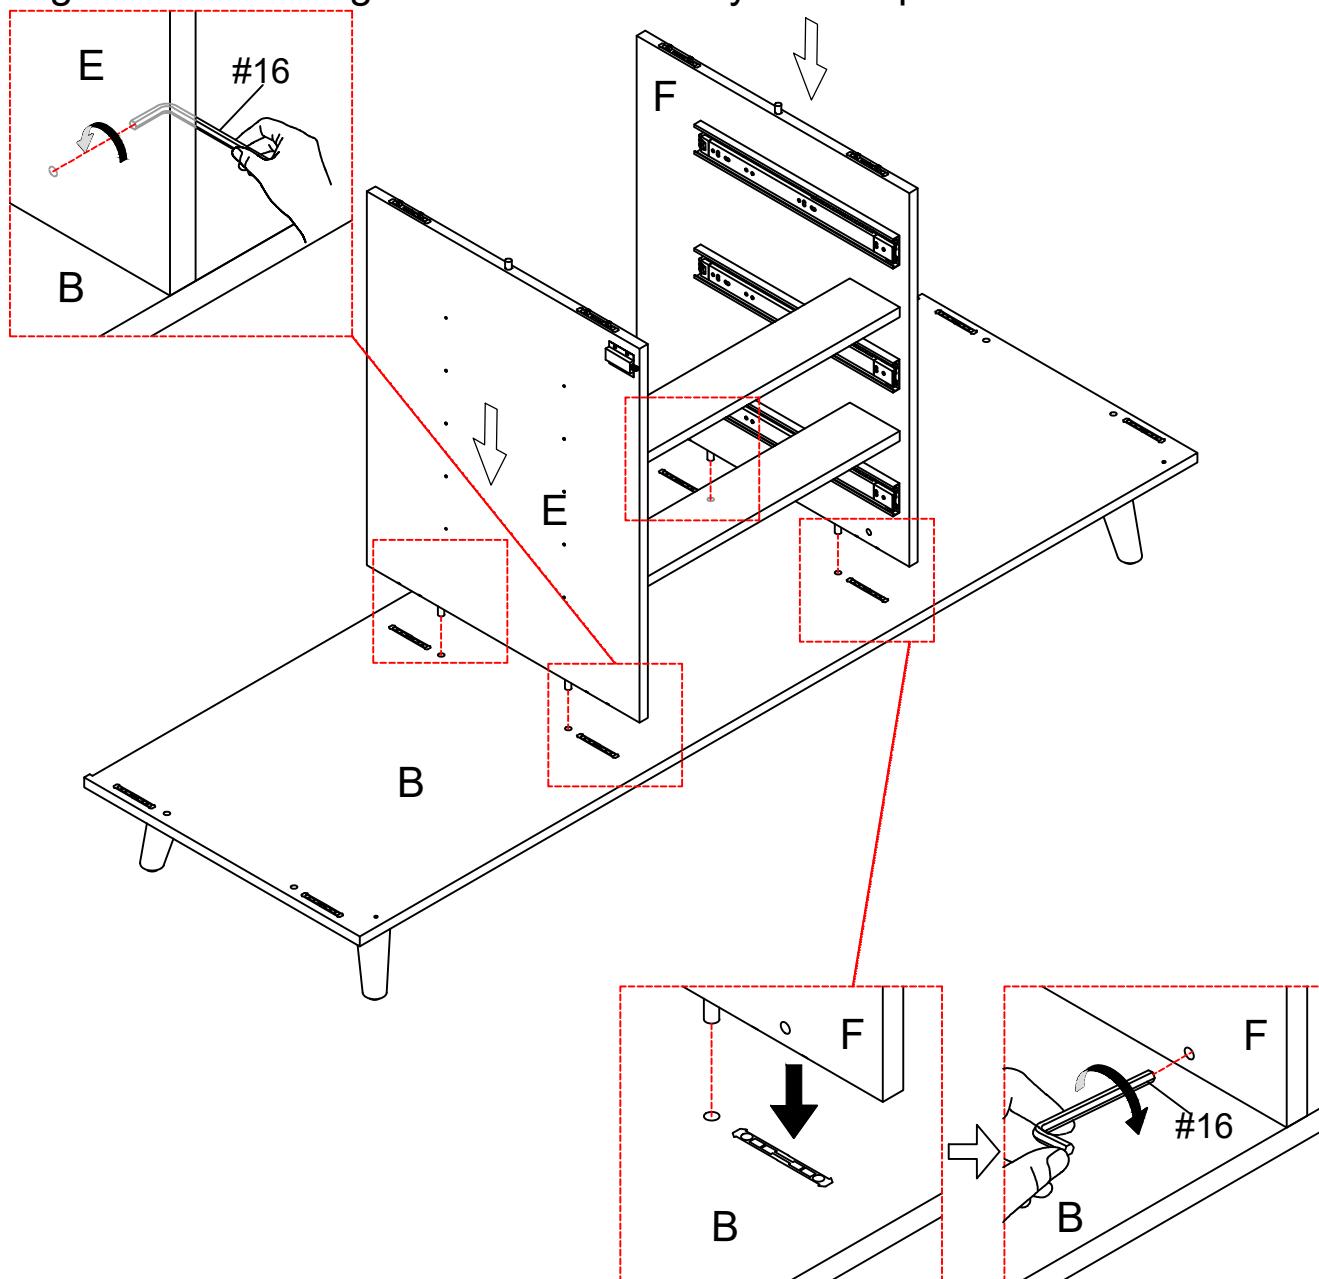



#16	x1
	
M6	

ASSEMBLY INSTRUCTIONS

STEP-5

1.Insert side panel (C&D) into bottom panel (B),make sure all holes aligned and then tighten it with allen key #16 as picture show.

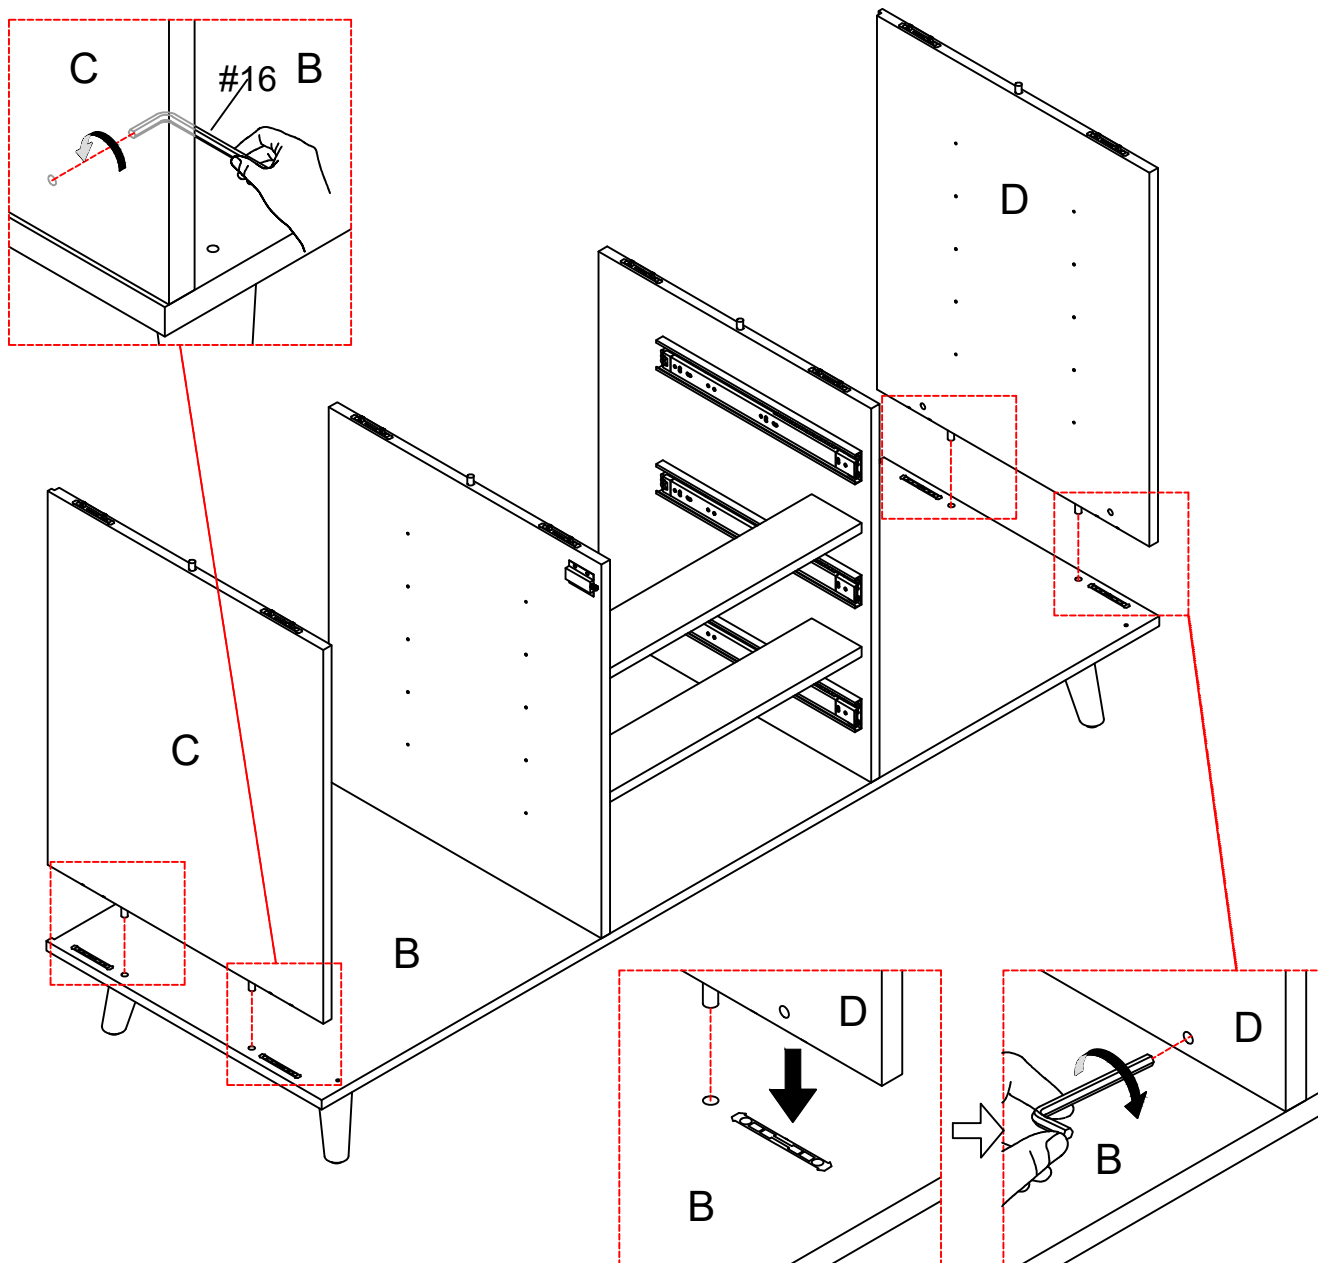



#16	x1
	
M6	

ASSEMBLY INSTRUCTIONS

STEP-6

1. Insert top panel (A) into the corresponding hole of preassembled step 5, make sure all holes aligned and use allen key #16 to tighten it as picture show.

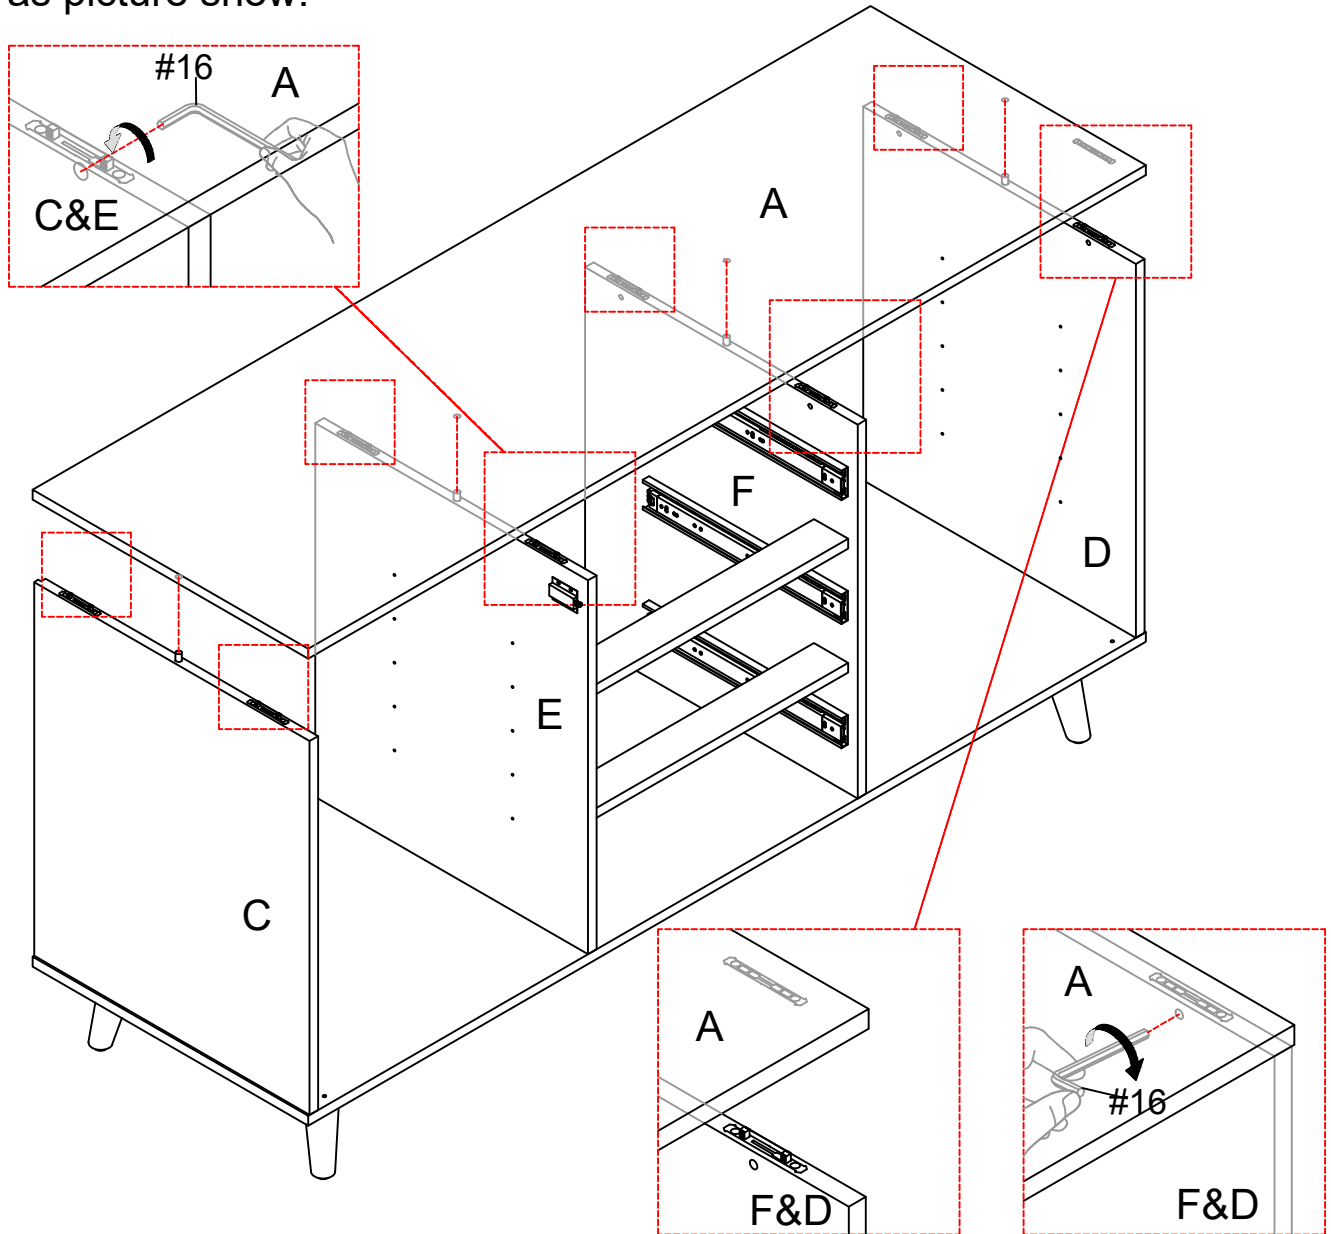




#16	x1
	
M6	

ASSEMBLY INSTRUCTIONS

STEP-7


1. Open the back panel (G), insert back panel (G) into the groove of preassembled step 6, make sure all holes aligned and use screw #6 to attach them, tighten screw #6 with screwdriver #17.

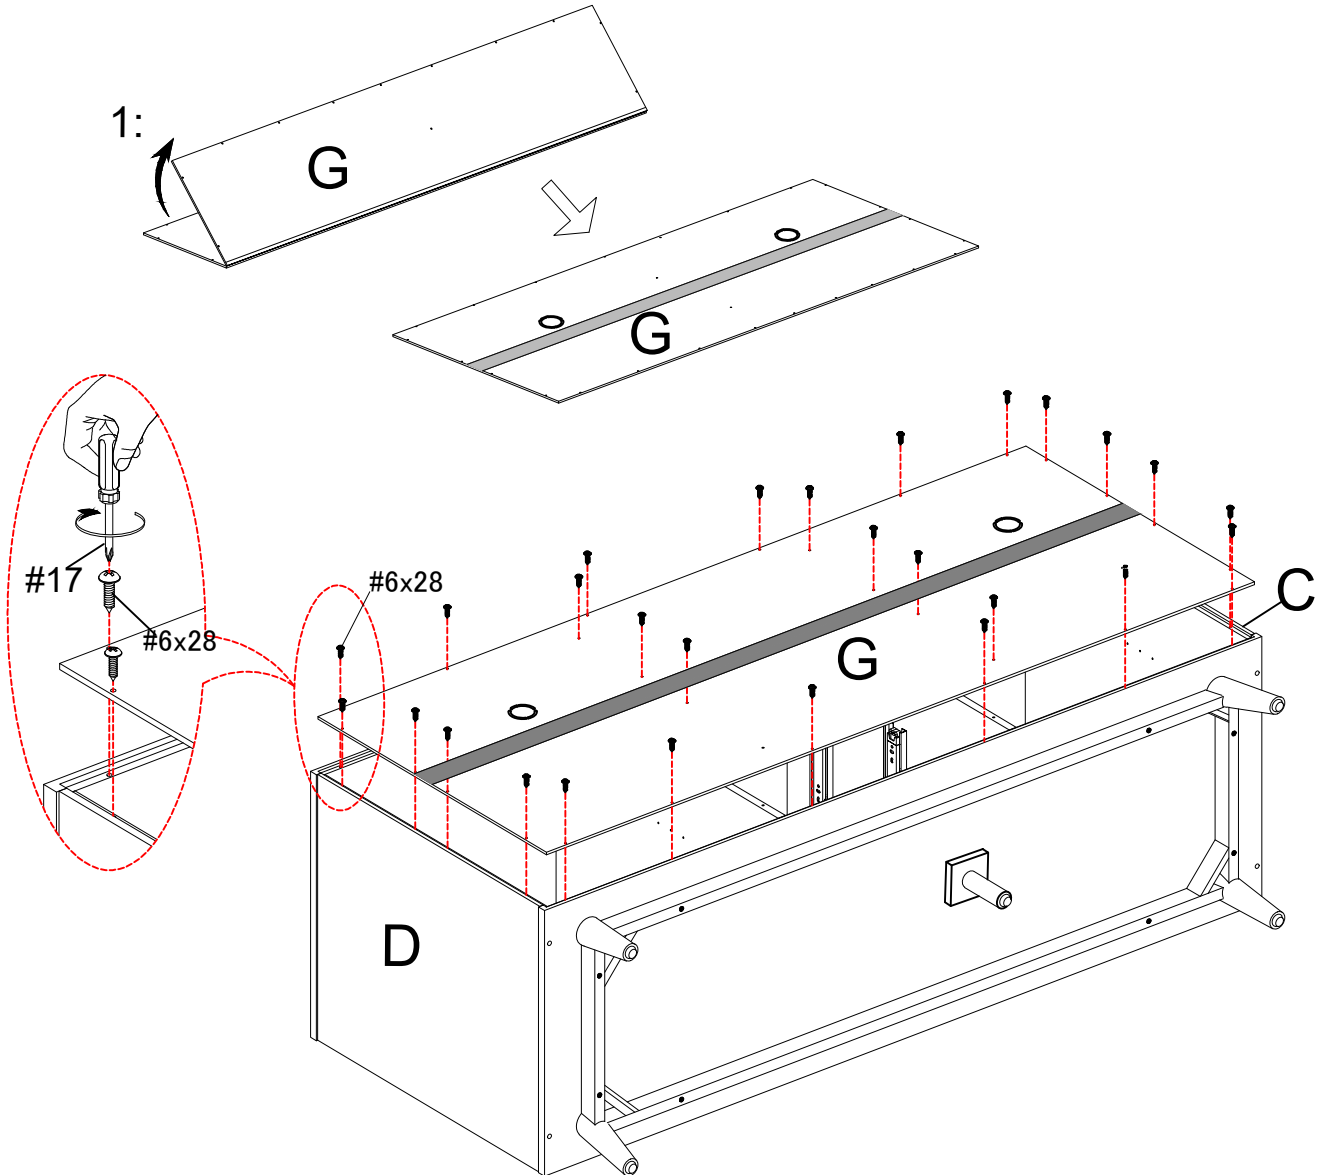





#6	x28	#17	x1
			

ASSEMBLY INSTRUCTIONS

STEP-8

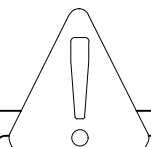


Attention:
After installation, adjust the
adjustable leveler to keep
the cabinet balanced .

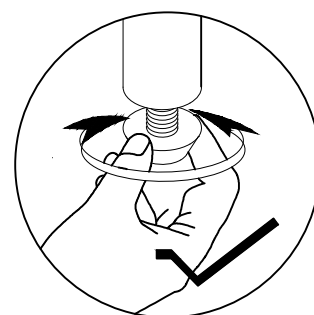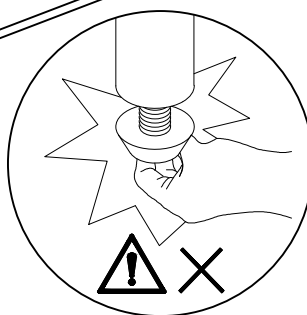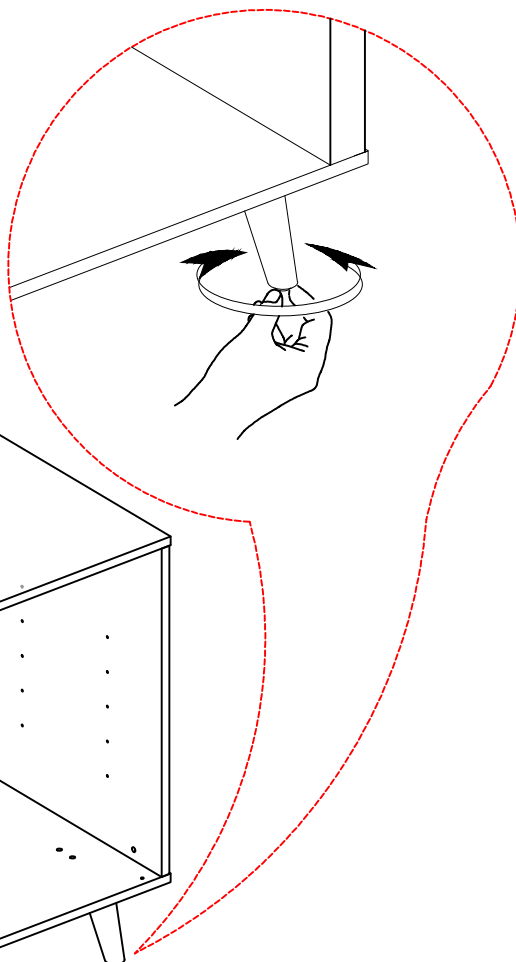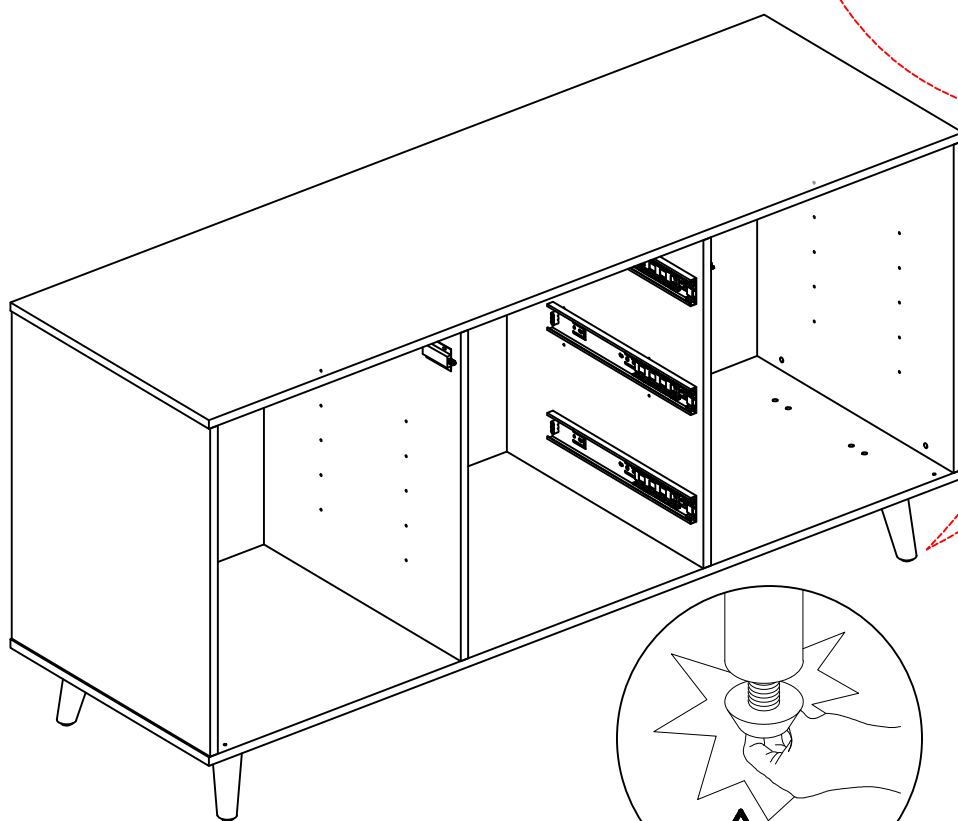


ASSEMBLY INSTRUCTIONS

STEP-9

1. Insert shelf holder #8 into the corresponding hole of panel (C)&(D)&(E)&(F) and then attach panel (H) to it.

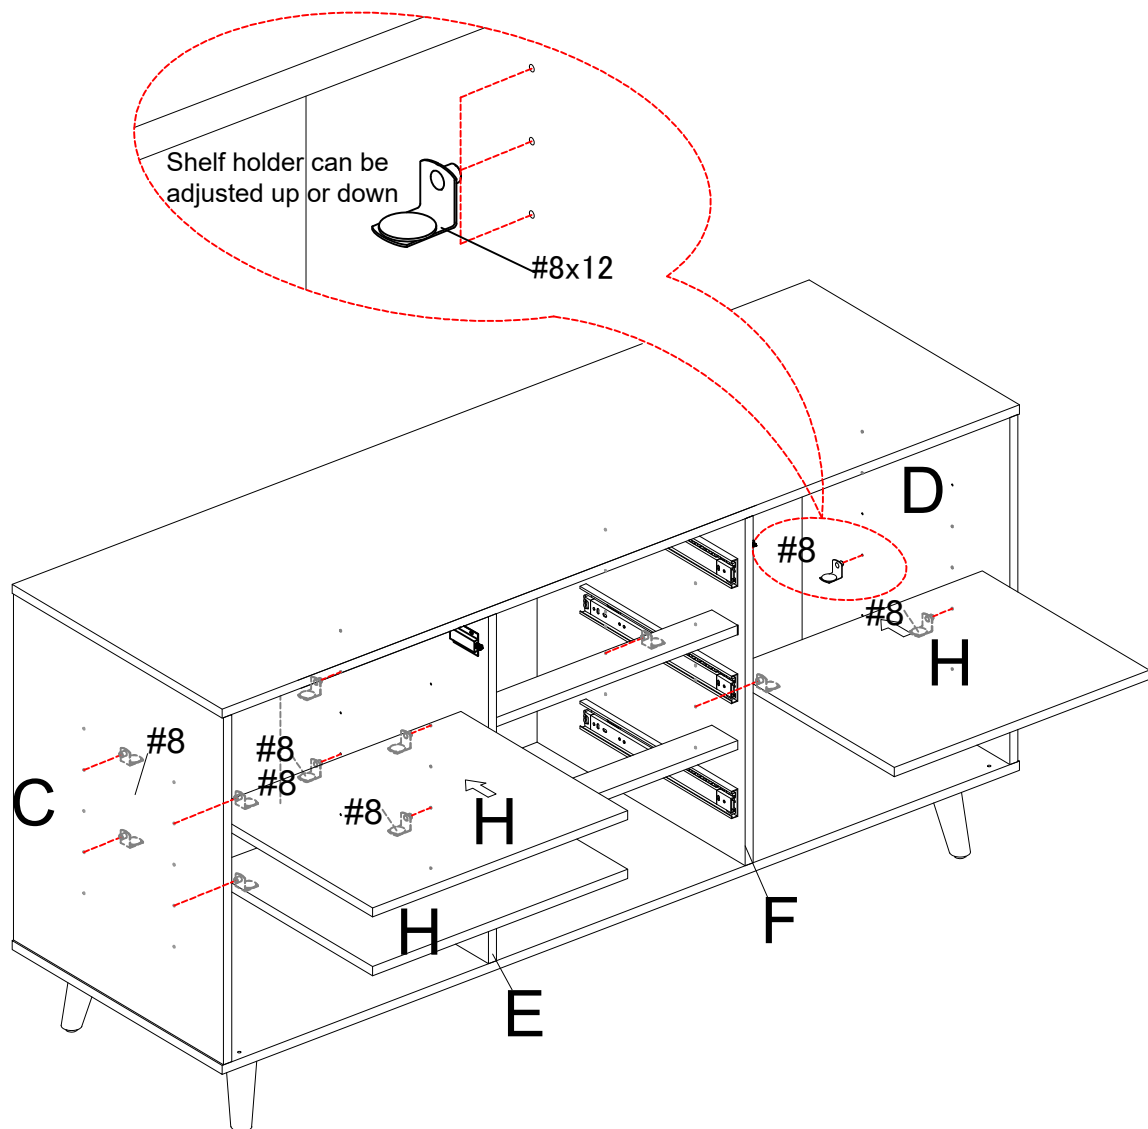


#8	x12
	
Ø1/4	

ASSEMBLY INSTRUCTIONS


STEP-10


1.Connect part (N&M) to part O using screw #1 and tighten it with screwdriver #17.Slide in the part (P) into the groove in part (N&M). make sure they are also in groove in part (O).

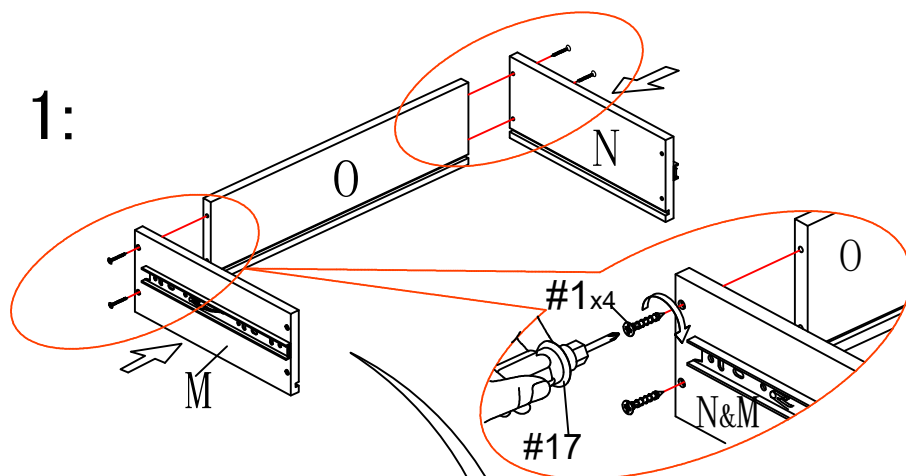


x3

2:

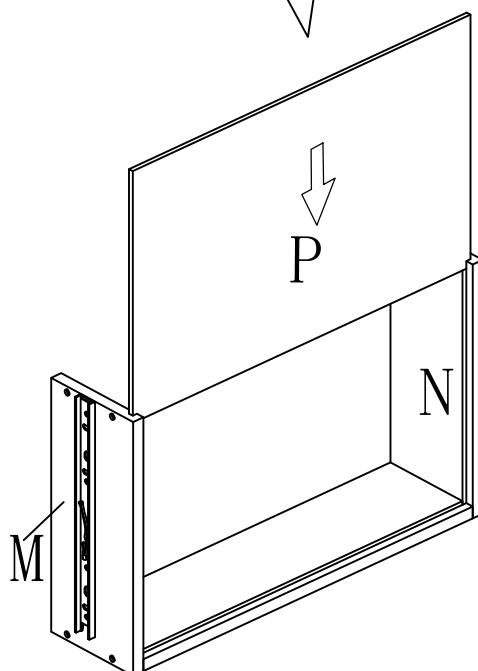


#1	x12
	



#17	x1
	

ASSEMBLY INSTRUCTIONS

STEP-11

1. Connect the (L) connection (N&M) using screw #1 , and tighten it with screwdriver #17.

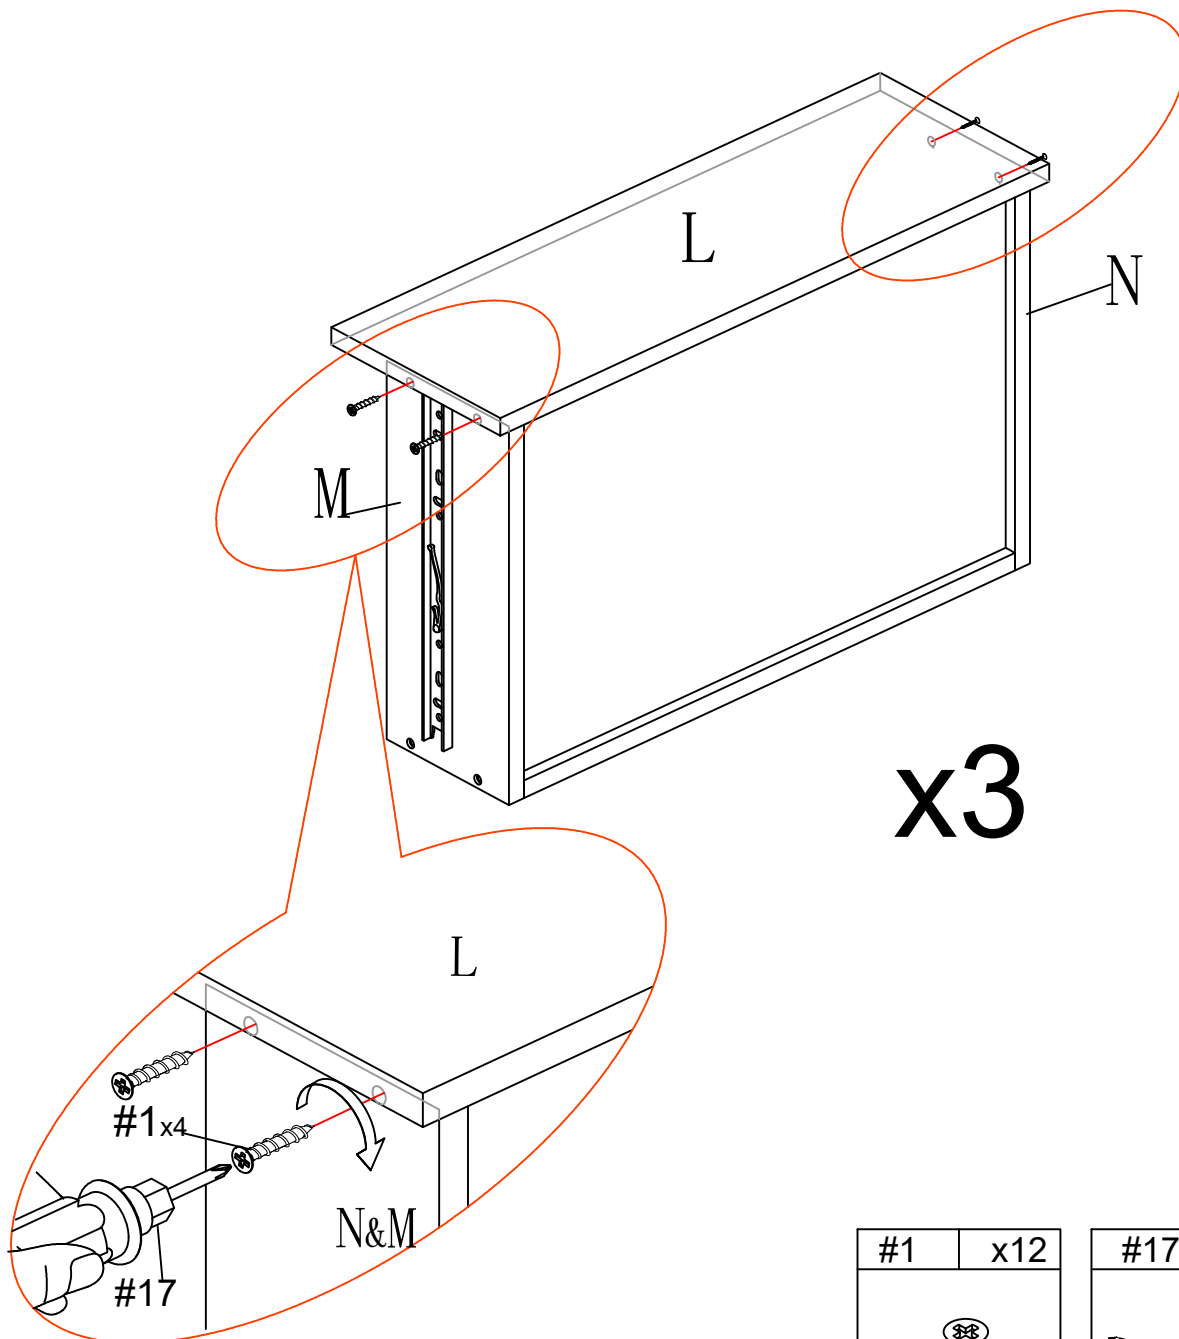





#1	x12	#17	x1
			

ASSEMBLY INSTRUCTIONS

STEP-12



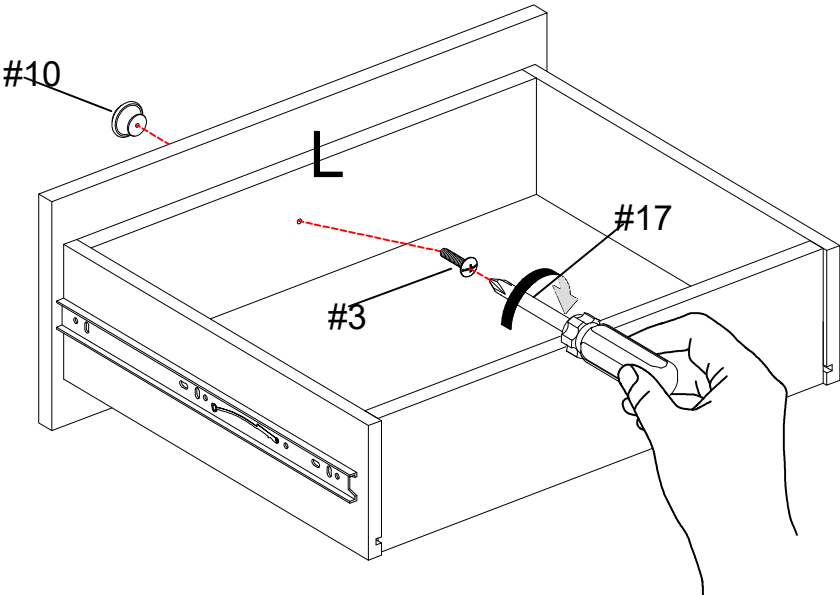
Use bolt #3 to attach handle #10 to panel (L), tighten bolts #3 with screwdriver #17.




#3	x3	#10	x3	#17	x1
					

ASSEMBLY INSTRUCTIONS

STEP-13

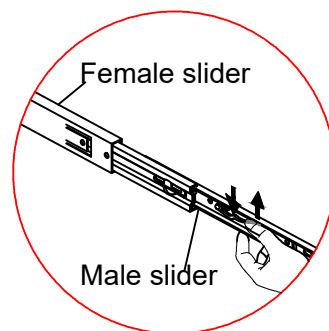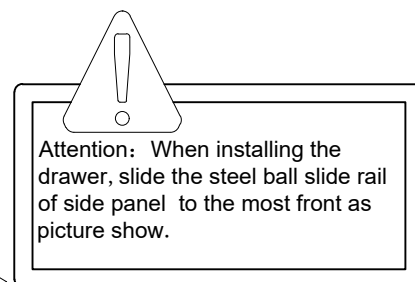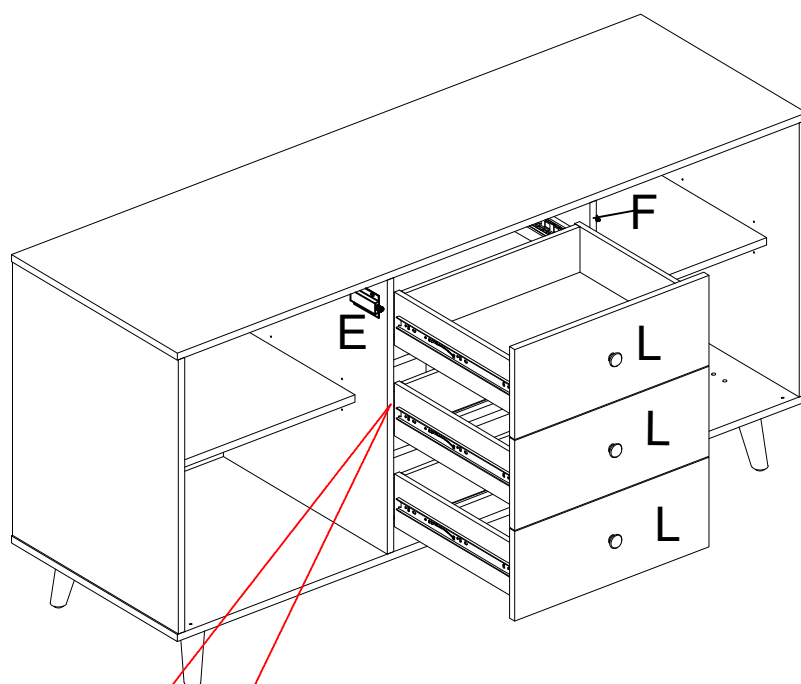


Schematic diagram of slide rail disassembly

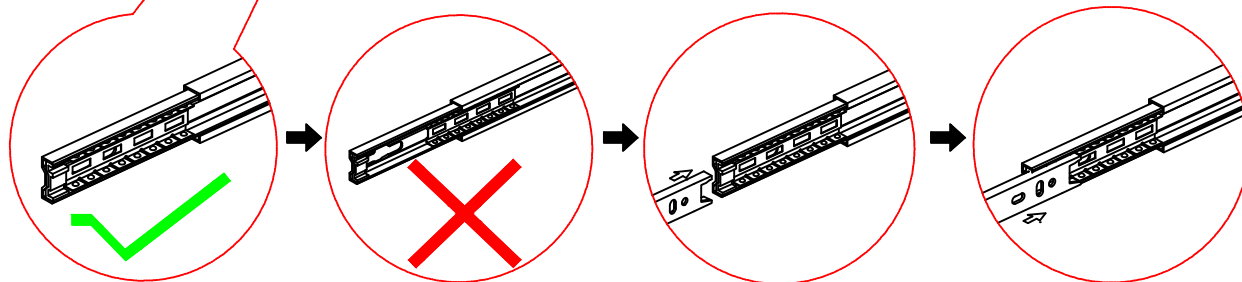

ASSEMBLY INSTRUCTIONS

STEP-14


1.First, align the salient point of the lower end door spindle (J)&(K) with the corresponding hole of bottom panel(B),and then press the upper end salient point of door spindle (J)&(K) with hand, finally push it forward to the corresponding hole of top panel (A).

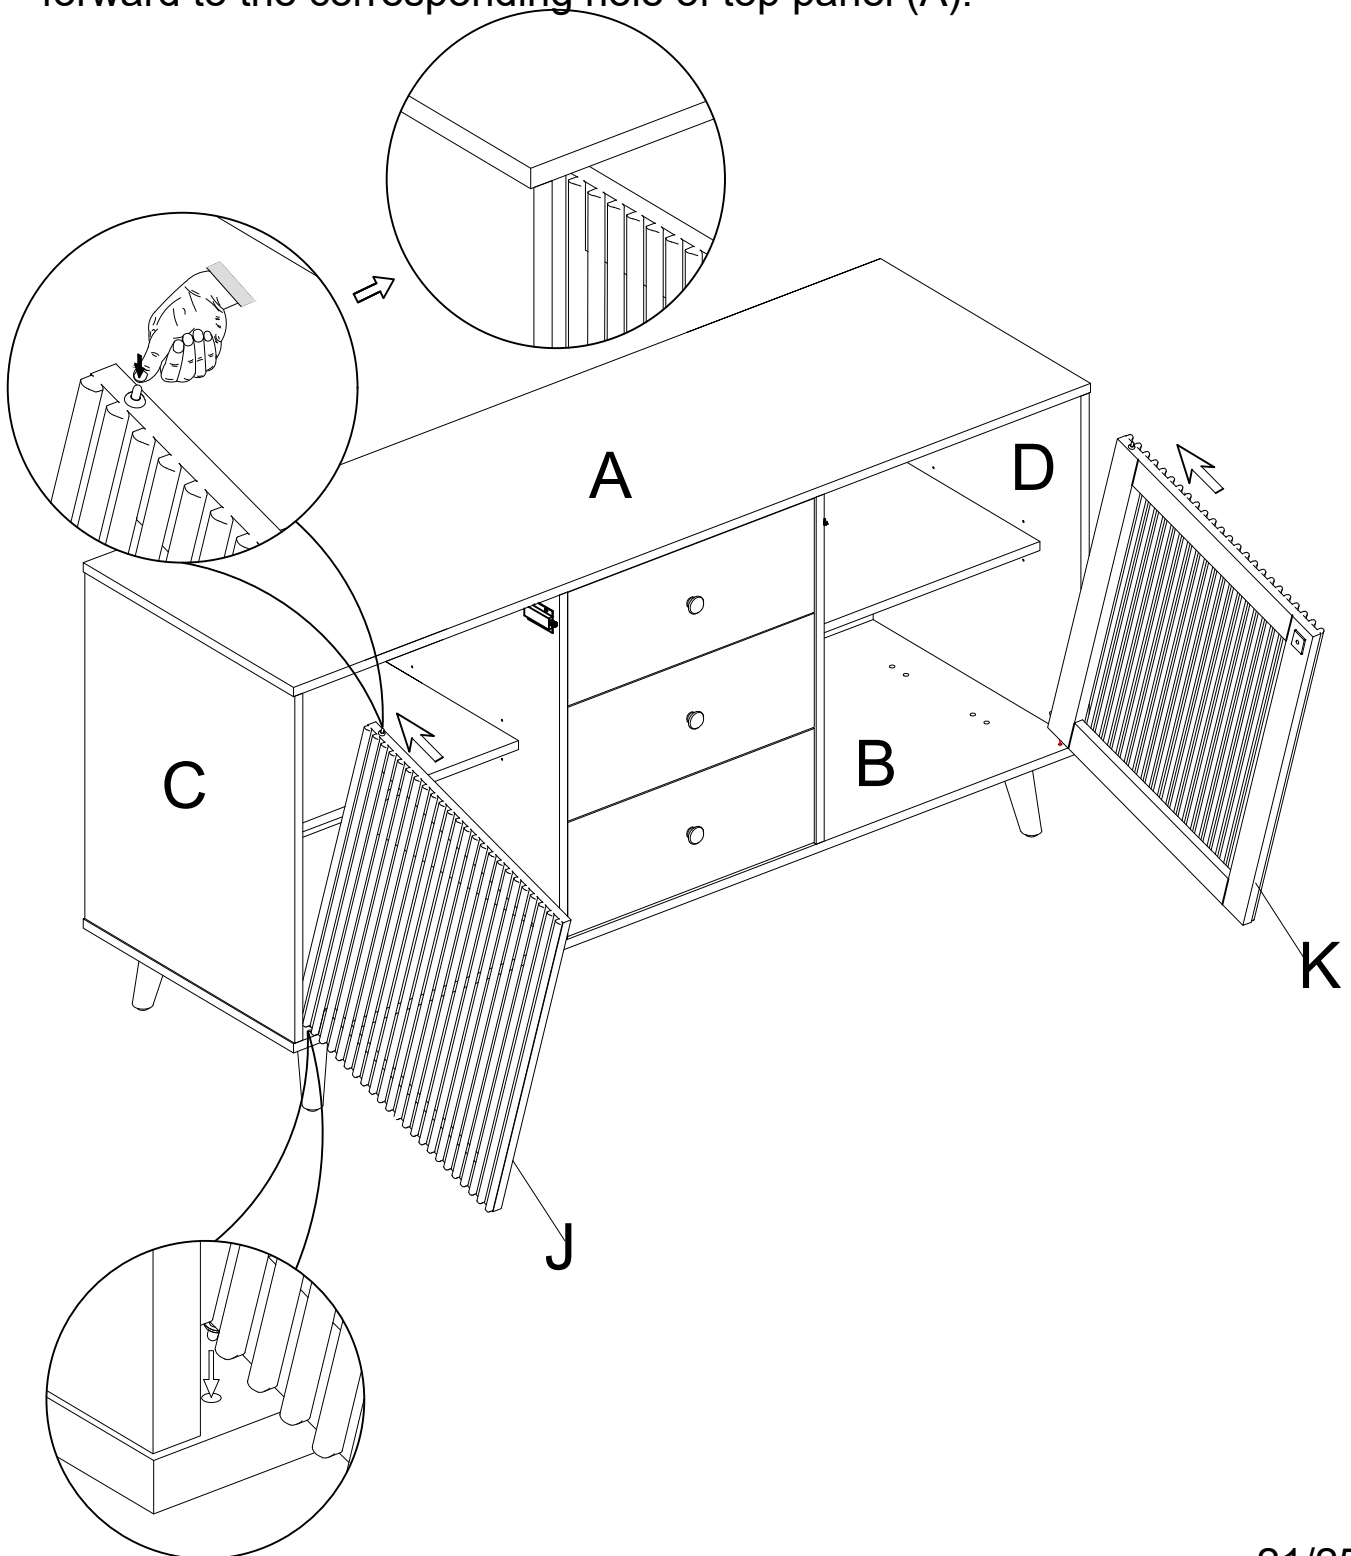




ASSEMBLY INSTRUCTIONS





STEP-15

1. Use screw #5 to attach part #13 to back panel (G), tighten screw #5 with screwdriver #17.

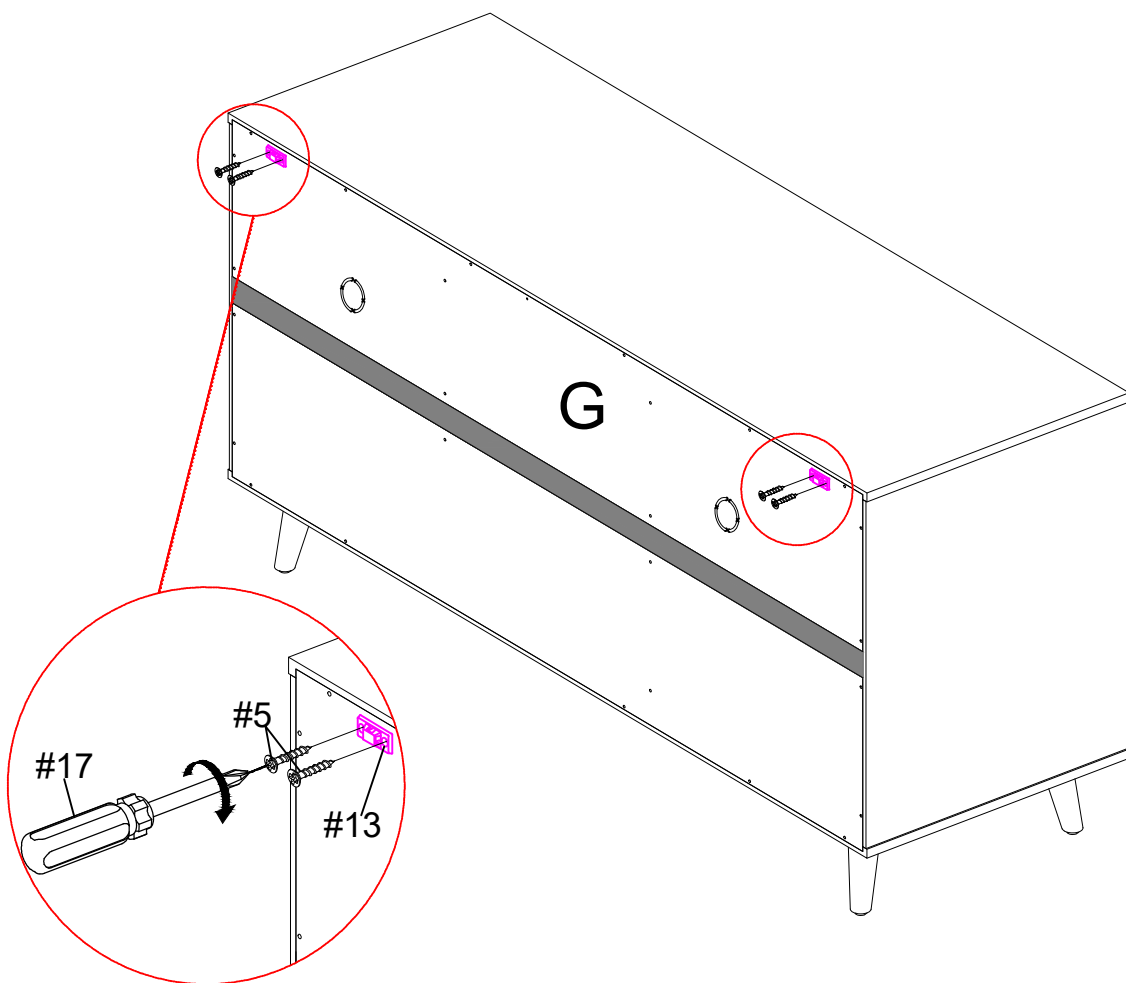


#5	x4	#13	x2	#17	x1
					
				M5	

ASSEMBLY INSTRUCTIONS

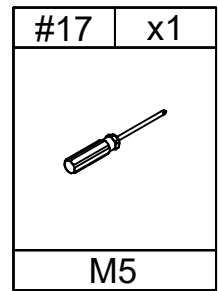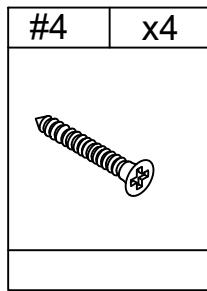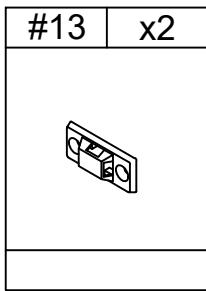
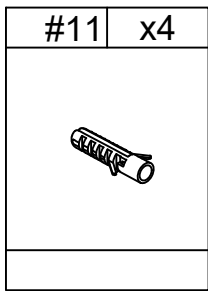


STEP-16


1. Install the anti-collapse device.
2. Mark the position on the wall, that corresponds to the location of part #13 on the back of panel (G); Drill and insert the expandable screw #11 by hammer.
3. Assemble the part #13 to the wall. Align the hole in the part #13 with the expandable screw #11, use screw #4 to attach it and tighten by screwdriver #17.

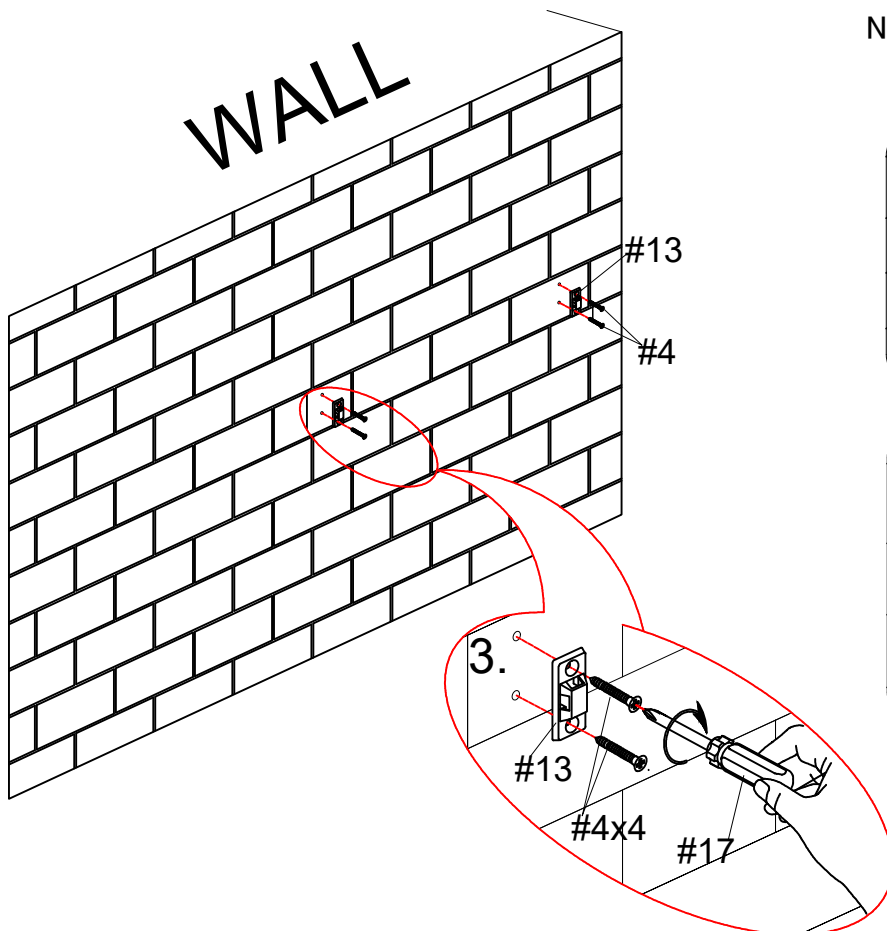

NOT PROVIDED

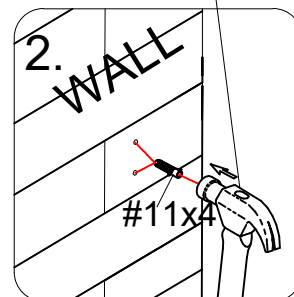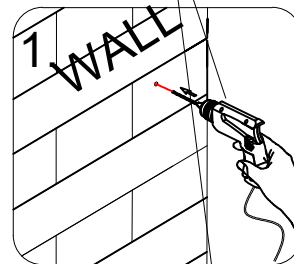


ASSEMBLY INSTRUCTIONS

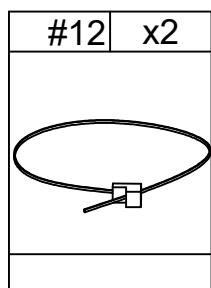

STEP-17

Let the plastic belt #12 pass through the both part #13 and pull tightly.

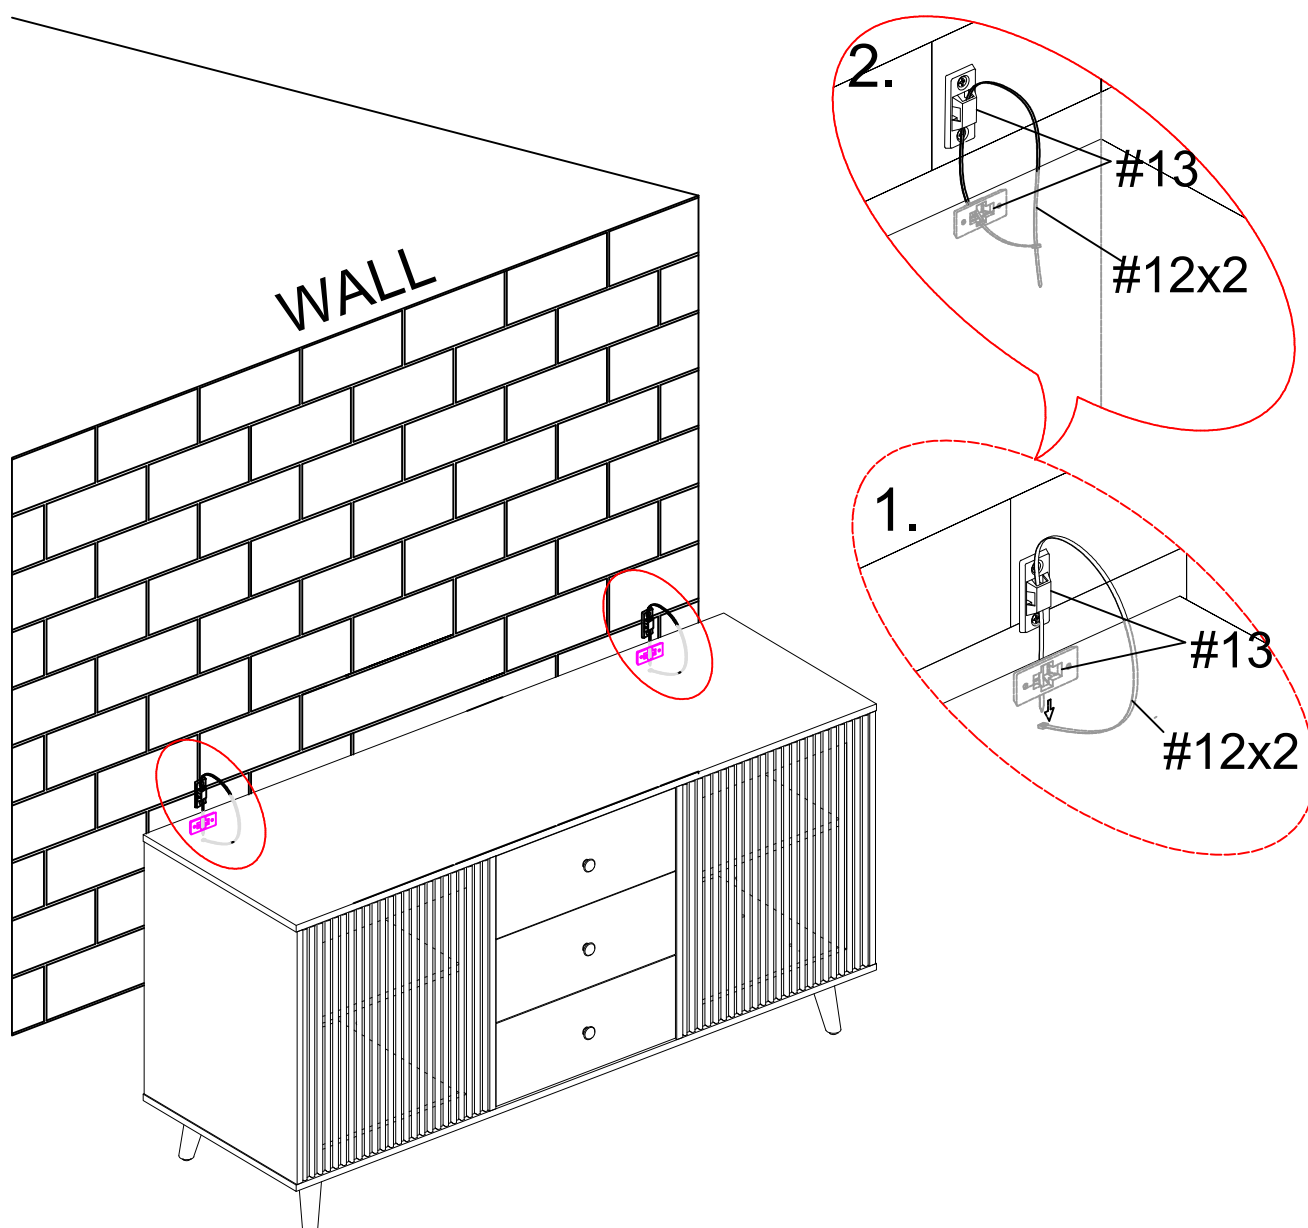

WARRANTY

1. We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed.
2. We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive.
3. Replacement parts by purchasing them with our company if they are available.

Are you having difficulty
With assembly? Missing parts?
Please send email with your order No to
customerservice@hulalahome.com
For return, please check the return policy with
the retailer or market place you bought from.

Appreciate your purchasing from us.
Pop up your life by our furniture piece!