
















 168*2.5*31	 168*2.5*31	 110*53	 80*53	 42.5*34*5.2	 46.5*9*5.5
A 1 PC	B 1 PC	C 1 PC	D 1 PC	E 1 PC	F 1 PC
 50*9*3.5	 50*9*2	 50*Ø2.5	 Ø 14*5MM	 Ø 14*6MM	 Ø 12*0.7MM
G 3 PCS	H 2 PCS	I 1 PC	J 2 PCS	K 39 PCS	L 39 PCS
 M6x15	 M6x20	 M6x40	 M6x45	 M6x50	
M 22 PCS	N 4 PCS	O 10 PCS	P 1 PC	Q 2 PCS	R 1 PC
					
					

Step 1: Fold the sponge in half and stuff it into the cover

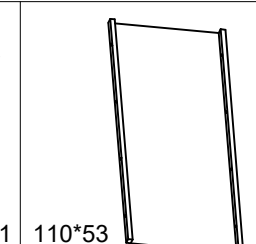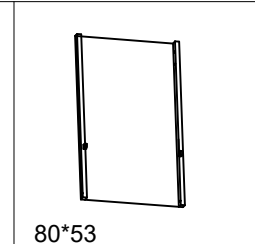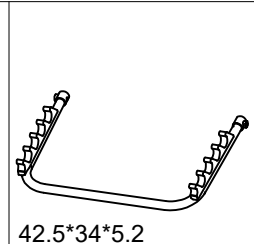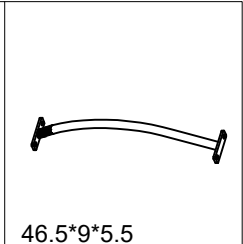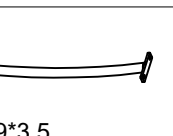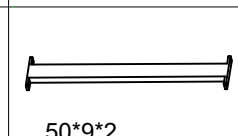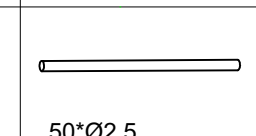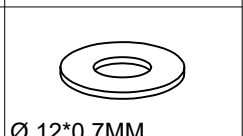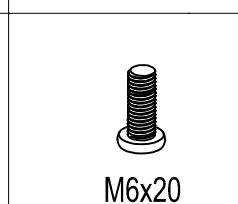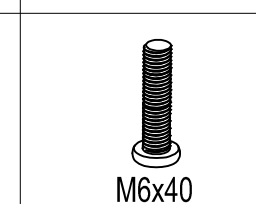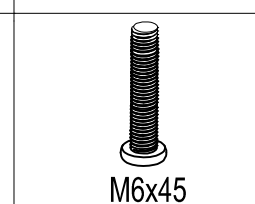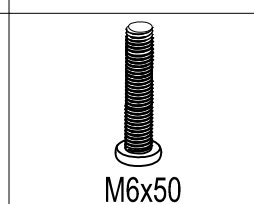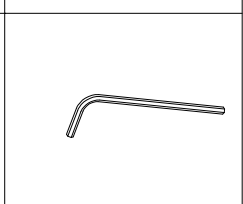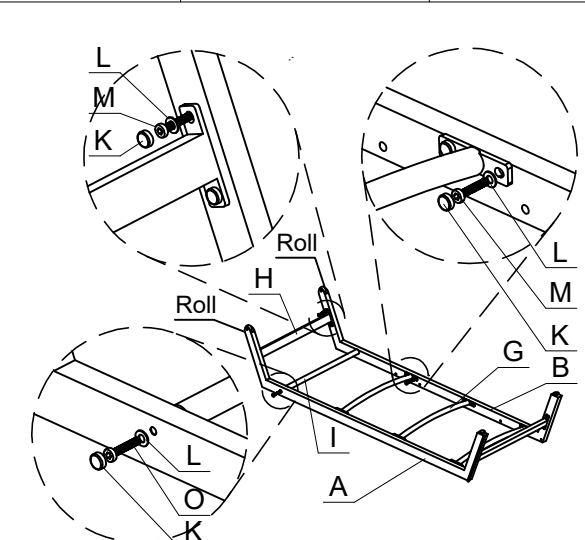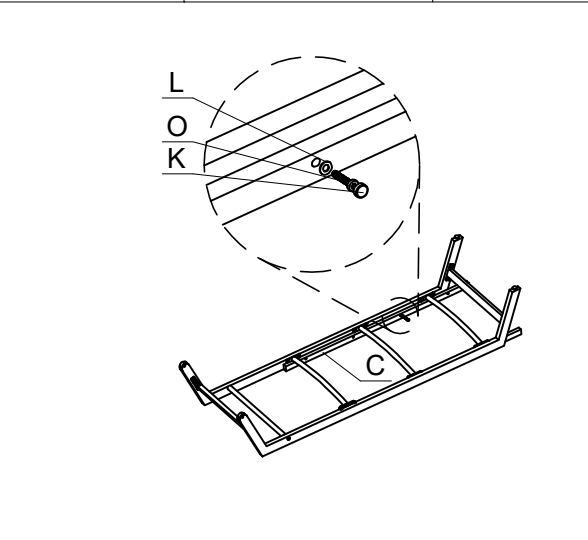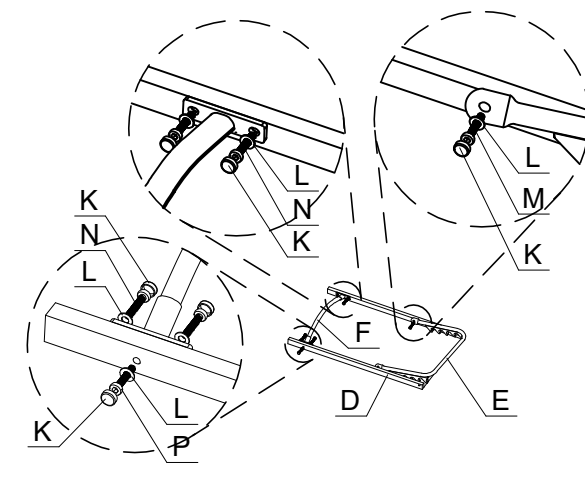

Step 2: Tuck in half way to flatten each corner

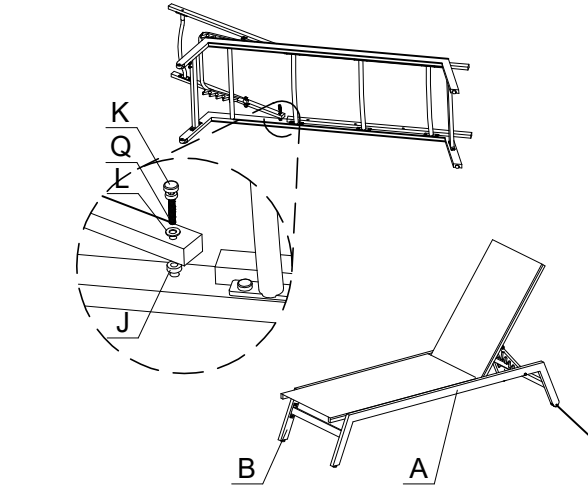

Step 3: to flatten the sponge and zip it up

