

ASSEMBLY INSTRUCTIONS

INSTRUCTIONS D'ASSEMBLAGE


ITEM NO.: 9514 SVE/DGY- 3 Sofa

Page : 1 of 3

△ It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.

Il est recommandé de placer des coussins protecteurs sous tous les pieds et toutes les bases des meubles pour éviter d'endommager ou d'égratigner les planchers en bois ou autres surfaces dures, et pour limiter l'empreinte et empêcher la décoloration quand les meubles reposent sur la moquette.

PARTS LIST/ LISTE DE PIECES

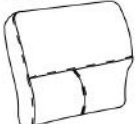NO	DRAWING	QTY	DESCRIPTION
A		1	SEAT
B		1	LSF BACK REST
C		1	RSF BACK REST
D		1	LSF BACK CUSHION
E		1	BACK CUSHION CENTER
F		1	RSF BACK CUSHION
G		4	METAL LEG
H		1	CENTER SUPPORT LEG

HARDWARE LIST/ LISTE DE QUINCAILLERIE

No	Sketch	Qty	Description
1		8 Pcs	JCBC Screw M6 x 25mm
2		8 Pcs	Flat Washer 5/16"
3		4 Pcs	CSK Screw M4 x 25mm
4		1 Pc	M4 Allen Key


ASSEMBLY INSTRUCTIONS

INSTRUCTIONS D'ASSEMBLAGE


ITEM NO.: 9514 SVE/DGY- 3 Sofa

Page : 2 of 3


(Step 1)

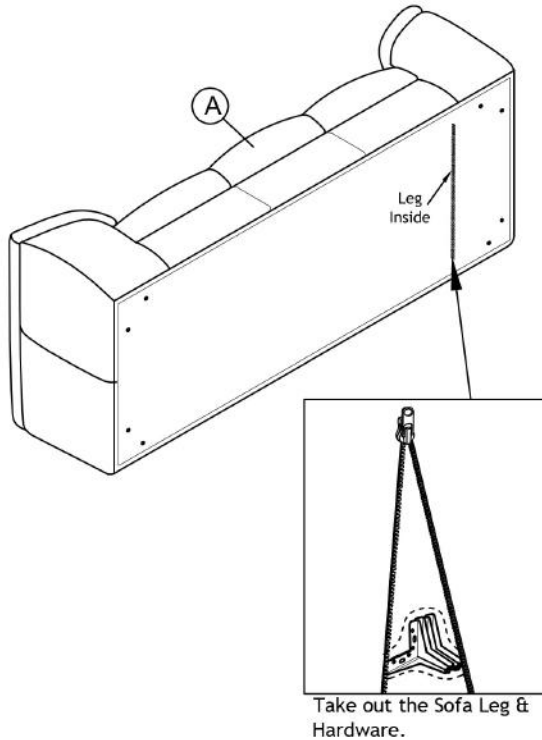


(Step 2)

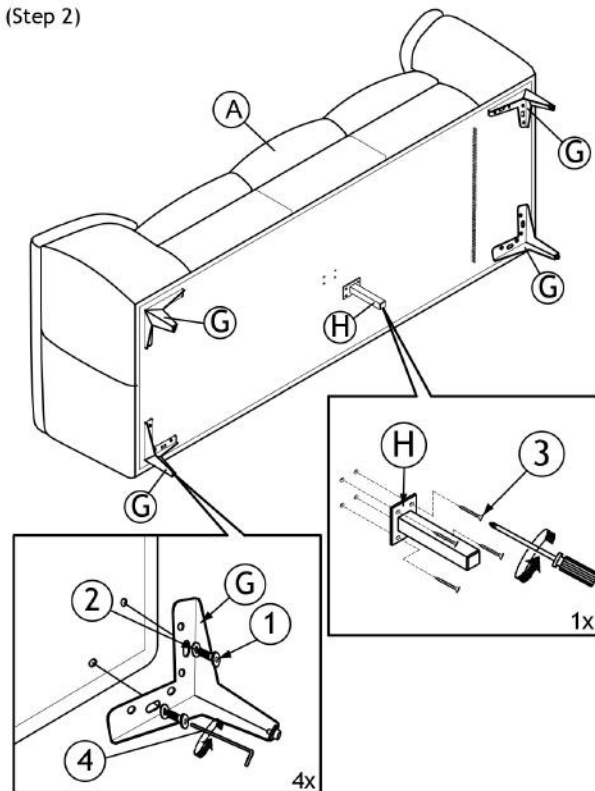

(Step 3)

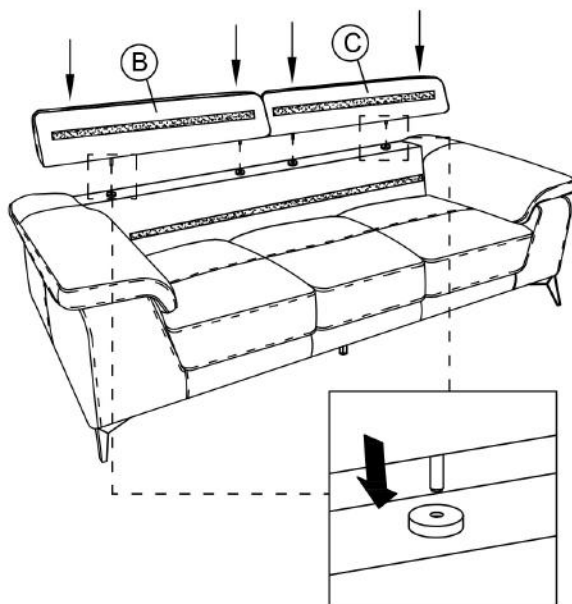

(Step 4)

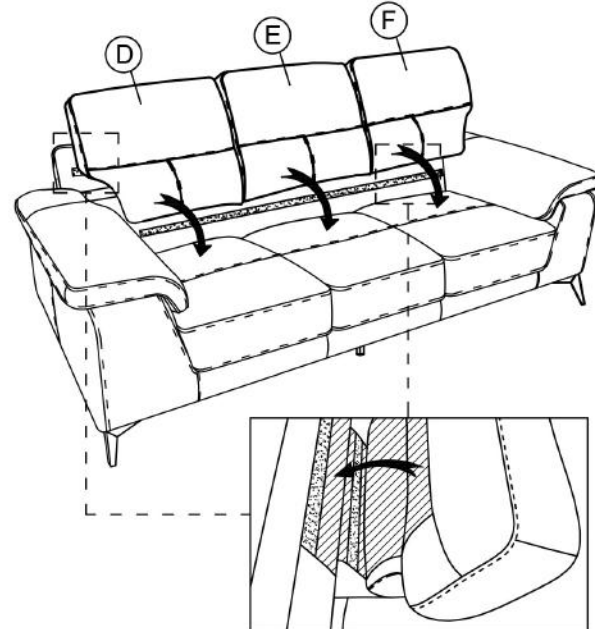


ASSEMBLY INSTRUCTIONS

INSTRUCTIONS D'ASSEMBLAGE


ITEM NO.: 9514 SVE/DGY- 3 Sofa

Page : 3 of 3


(Step 5) ASSEMBLY COMPLETED

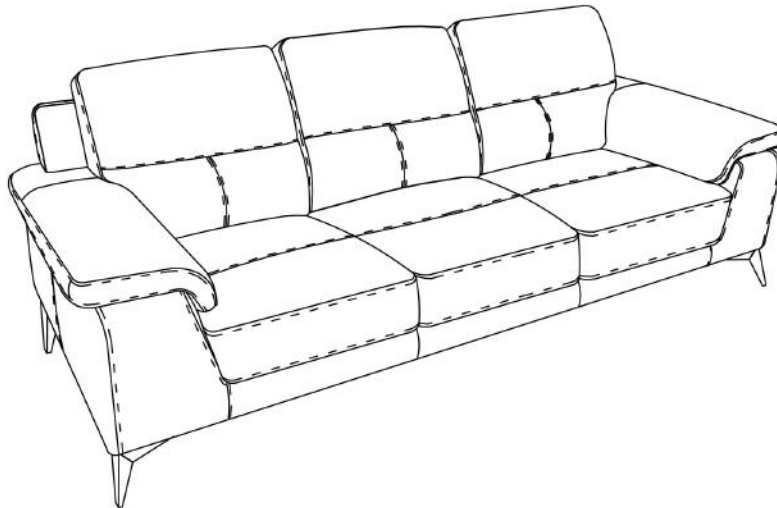

Upholstery Cushion Care

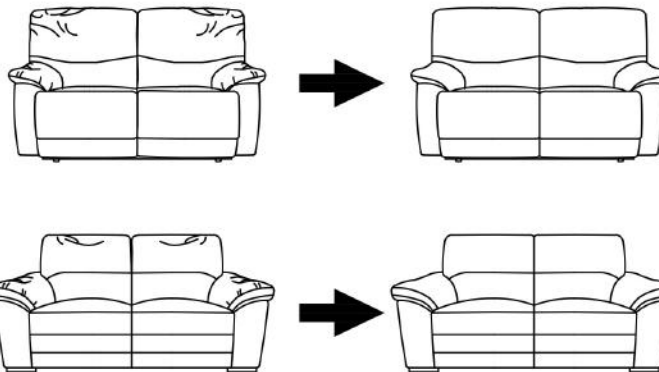

Regular fluffing and flipping to maintain the shape of the product.
Use soft brush to remove dust.

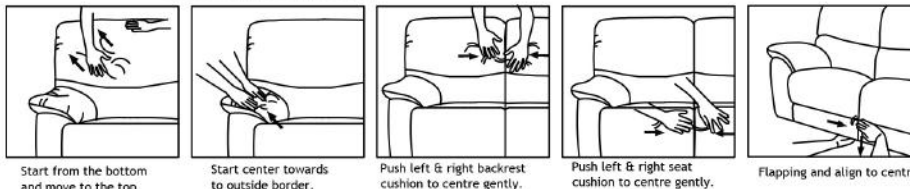

TOP GRAIN LEATHER MATCH PVC CARE INSTRUCTION.

INSTRUCTIONS POUR LES SOINS DU CUIR ET PVC:

In order to maintain the original appearance of your fabric furniture, please follow below care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and / or exposure to heating and air conditioning outlets will fade/damage fabric. Do not place your upholstered furniture too close to windows, radiators, vents and be sure to use window treatments to block the sun's rays.
- Wipe with a soft brush to remove dust.