

ARTERIORES HOME
CHANDELIER INSTALLATION INSTRUCTIONS
89989,89991 Zanadoo 12L Iron Chandelier Large Version

These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning installation of this chandelier. **We strongly suggest that all hard wired fixtures be installed by a professional electrician.**

Parts Included:

1. Mounting Plate (A)
2. Canopy (B)
3. Rods (C1,C2,C3)
4. Main Body (D)

Hardware Enclosed:

1. (2) Mounting screws (a)
2. (2) Plastic wire connectors (b)
3. (1) Green ground screw (c)
4. (4) Canopy screws(d)
5. (3) Hexangular screw(e)
6. (1)Allen wrench(f)

To Install You Will Need:


1. 2 people recommended
2. Phillips Screwdriver
3. Electrical tape
4. Wire cutters

To Assemble:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
2. Carefully unpack all fixture parts and hardware and lay them out on a clear workspace.
3. Gently pull wiring down from ceiling junction box and allow it to hang.
4. Remove the mounting plate (A) from the canopy (B) by loosening Canopy screws (d) with screwdriver.
5. Screw the Canopy(B) onto the top of Top Rod (C1)until tight.
6. Connect the Middle Rod (C2) onto Rod (C1) and repeat same operation for the bottom Rod (C3). For above operations 5 and 6, PLS be sure tighten the hexangular screws(e)with allen wrench(f)
7. Screw the rods on the top of Main Body(D) until tight.
8. Carefully inspect the pendant's fixture wires. The NEUTRAL FIXTURE WIRE has very fine ridges molded into its plastic covering. The HOT FIXTURE WIRE has a smooth covering. The bare silver wire is the GROUND WIRE.
9. Attach the GROUND WIRE from the fixture to the GROUND JUNCTION BOX WIRE from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (b) and wrap the connection with electrical tape. If your outlet box DOES NOT have a GROUND WIRE, insert the green ground screw (c) into the mounting plate (A) facing DOWN, and wrap the fixture's bare ground wire around the ground screw. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
10. Connect the NEUTRAL FIXTURE WIRE to the NEUTRAL JUNCTION BOX WIRE (usually white). Fasten each together with a wire connector (b) and wrap the connection with electrical tape. Be sure no strands are exposed.
11. Connect the HOT FIXTURE WIRE to the HOT JUNCTION BOX WIRE (usually black). Fasten each together with a plastic wire connector (b) and wrap the connection with electrical tape. Be sure no wire strands are exposed. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
12. Gently tuck the wire connections neatly into the ceiling junction box.
13. Attach the mounting plate (A) with nipple to the ceiling outlet box using the enclosed mounting screws (a) and tighten screws with a screwdriver.
14. Push canopy (B) up over the mounting plate (A) until it is flush with the ceiling and fix the canopy by using 4pcs Canopy screws (d).
15. Leave the Main Body(D) hang freely . Insert Twelve TYPE B 40W bulb (not included) into the socket . **DO NOT EXCEED SPECIFIED WATTAGE.**
16. Restore power to junction box and test fixture.

Care Instructions:

- Wipe clean using a soft, dry cloth or static duster.
- Always avoid the use of harsh chemicals and abrasives to clean fixture as they may damage the finish.

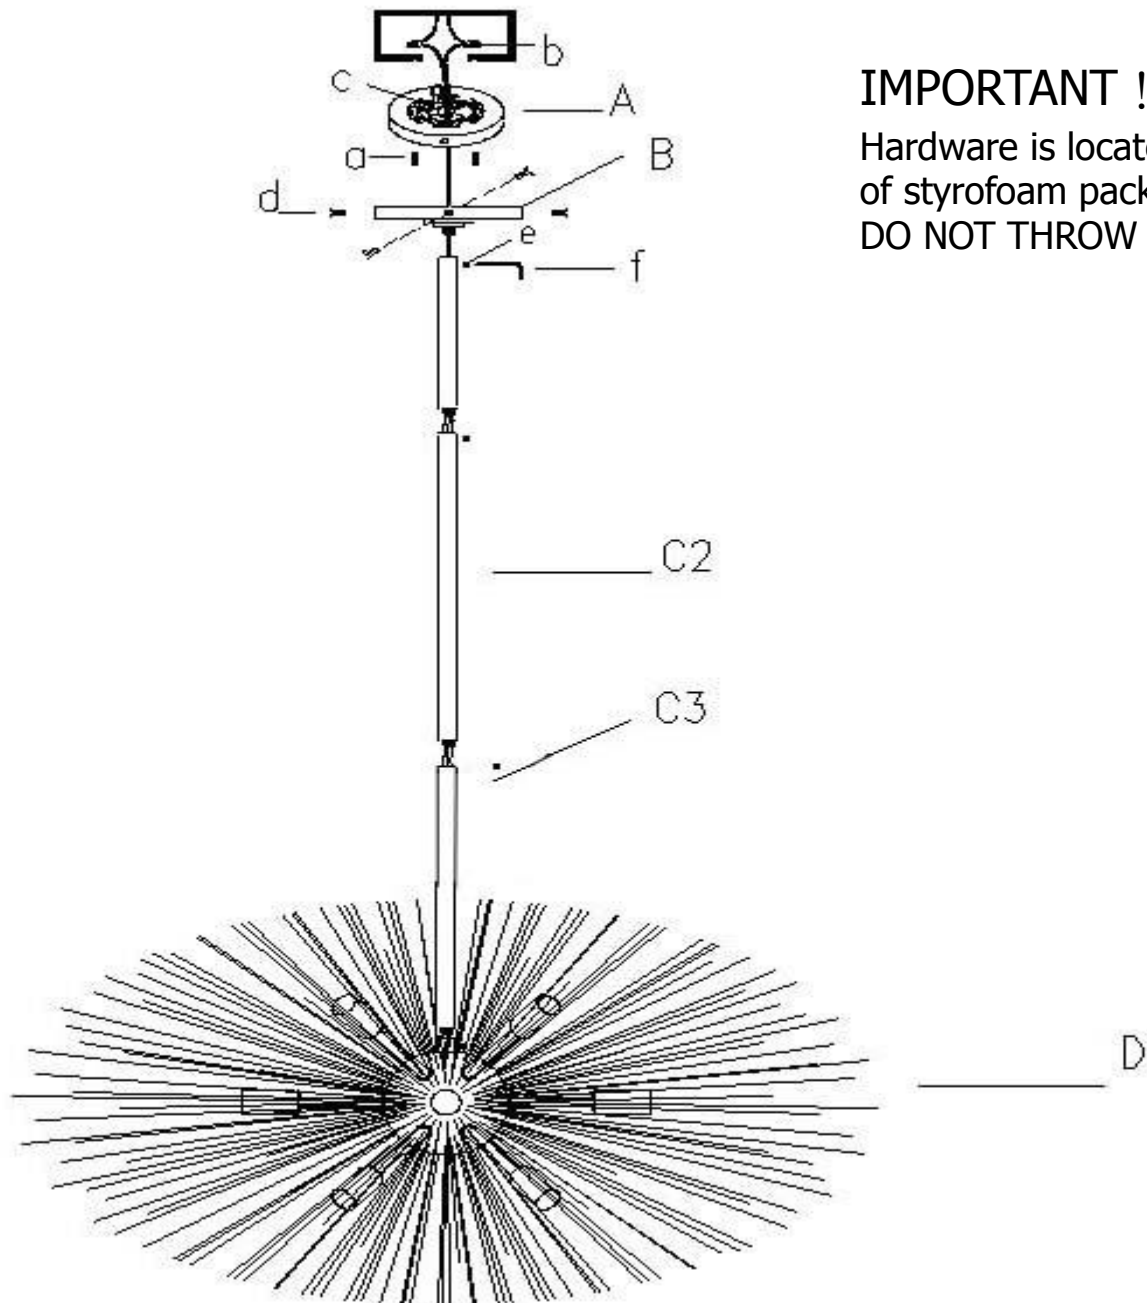

IMPORTANT !

Hardware is located in lower half of styrofoam packing.
DO NOT THROW AWAY!