


Customer Service : (702)361-4345, (800)525-2655, customer.service@kalco.com

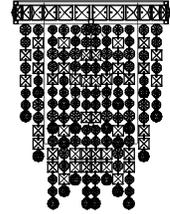

WARNING - TO REDUCE THE RISK OF FIRE OR INJURY:


1. If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit. More than one person may be necessary to install fixture, make sure you have enough qualified help.
2. Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.
3. DO NOT install bulb which exceeds the maximum wattage specified on the socket label.

Fixture Assembly

Step 1. Place mount mounting and wiring steps before crystal installation step

Step 2. Assemble crystal bowl to the lamp body as shown, Align holes in crystal bowl with holes in fixture and secure crystal bowl to fixture using headless screw

Step 3. Install candelabra bulbs bulb, do not use bulbs that exceeds 60W

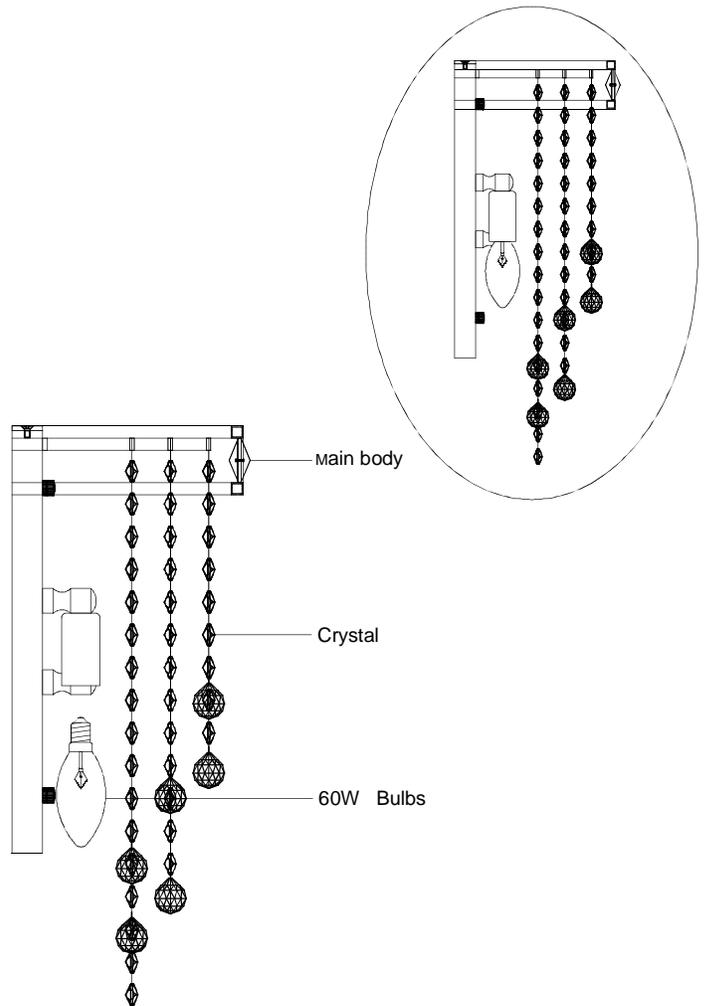



BY KALCO LIGHTING

Customer Service : (702)361-4345, (800)525-2655, customer.service@kalco.com

Fixture Assembly

ATTENTION

1. Take all crystal or glass parts carefully from carton, then put them on a clean cloth.
2. Start hanging crystals from bottom center to top of fixture in an alphabetical order as shown in diagram

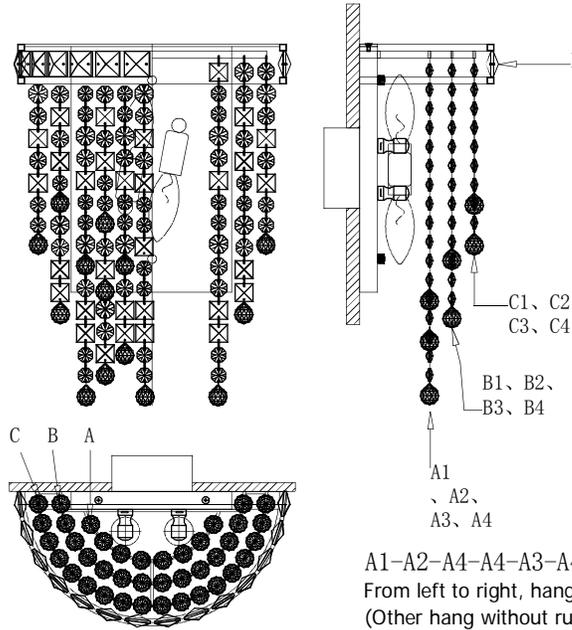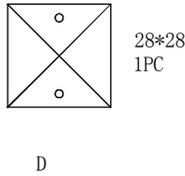

Code	Quantity
A1	2
B2	2
A3	1
A4	3
B1	2
B2	5
B3	4
B4	3
C1	6
C2	5
C3	4
C4	3
D	14

A1-A2-A4-A4-A3-A4-A2-A1
From left to right, hang in turn.
(Other hang without rules)



K9/2020:20#/3PCS
K9/1080:20#/3PCS
18#/3PCS
16#/2PCS
K9/701:20# 1PC

A1



K9/2020:20#/3PCS
18#/2PCS
K9/1080:18#/4PCS
16#/4PCS
K9/701:20# 1PC

A2



K9/2020:18#/3PCS
K9/1080:20#/2PCS
18#/6PCS
16#/3PCS
K9/701:20# 1PC

A3



K9/2020:18#/3PCS
K9/1080:20#/4PCS
18#/4PCS
16#/4PCS
K9/701:20# 1PC

A4



K9/2020:20#/2PCS
K9/1080:20#/1PC
18#/2PCS
16#/2PCS
K9/701:20# 1PC

B1



K9/2020:20#/1PC
18#/1PC
K9/1080:18#/4PCS
16#/3PCS
K9/701:20# 1PC

B2



K9/2020:18#/2PCS
K9/1080:20#/3PCS
18#/4PCS
16#/2PCS
K9/701:20# 1PC

B3



K9/2020:20#/2PCS
18#/1PC
K9/1080:18#/5PCS
16#/3PCS
K9/701:20# 1PC

B4



K9/2020:20#/1PC
18#/1PC
K9/1080:20#/1PC
18#/1PC
16#/1PC
K9/701:20# 1PC

C1



K9/2020:20#/1PC
18#/1PC
K9/1080:20#/2PCS
18#/2PCS
K9/701:20# 1PC

C2



K9/2020:20#/2PCS
18#/1PC
K9/1080:20#/2PCS
16#/2PCS
K9/701:20# 1PC

C3



K9/2020:20#/2PCS
K9/1080:20#/3PCS
18#/2PCS
16#/1PC
K9/701:20# 1PC

C4

Customer Service : (702)361-4345, (800)525-2655, customer.service@kalco.com

Fixture Assembly

Step 4. Fasten 2 (state specification of screw) into mounting plate so that they extend away from wall when mounting plate is installed

Step 5. Attach the mounting plate to outlet box with screws

Step 6. Refer to wiring diagram.
Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector

Step 7. Carefully tuck in all wires. Attach the backplate with the mounting screw on the crossbar. Secure fixture with shell knobs.

