


HOW TO MEASURE

MEASURE WIDTH OF INSTALLATION SPACE


- Measure the width in at least two (2) locations, use the narrowest of your measurements

INSTALLATION TIPS FOR WINDOWS


- Your fabric will be narrower than the outer dimensions of your shade
 - To prevent light from entering the sides of your shade, we suggest ordering your fabric at least 6" wider than your installation space (3" per side) (outside mount)
- Remember to consider the depth of your shade prior to installation, especially when installing inside a window frame

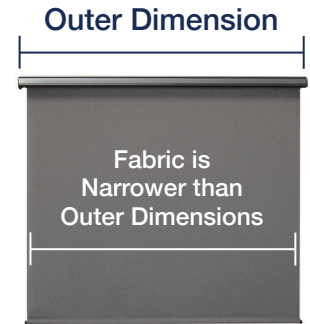


Cordless
Outdoor Sun Shade

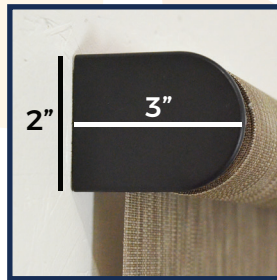

Supreme Cordless
Outdoor Sun Shade

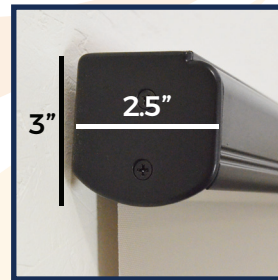

Supreme Cordless
Outdoor Sun Shade
with Protective Valance

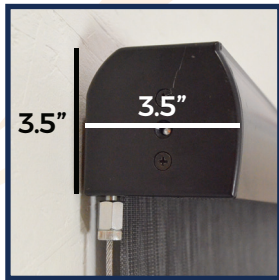

Supreme Rechargeable Motor
Outdoor Sun Shade
with Protective Valance



Outdoor Valanced
Pole Operated Sun Shade



Outdoor Valanced
Remote Control Operated
Sunshade

- For shades that include a Valance, you will need to allow for 1-2" of minimum mounting space for the Valance to snap onto the brackets (see below)



Wall Installations

- 1-2" of clearance above the bracket is required



Ceiling Installations

- 1-2" of clearance behind the bracket is required