


ASSEMBLY INSTRUCTIONS

SKU: ADC-LC


EAST WEST
FURNITURE, LLC
175 Southbelt Industrial Dr
Houston, TX 77047

Email: info@eastwestfurniture.net

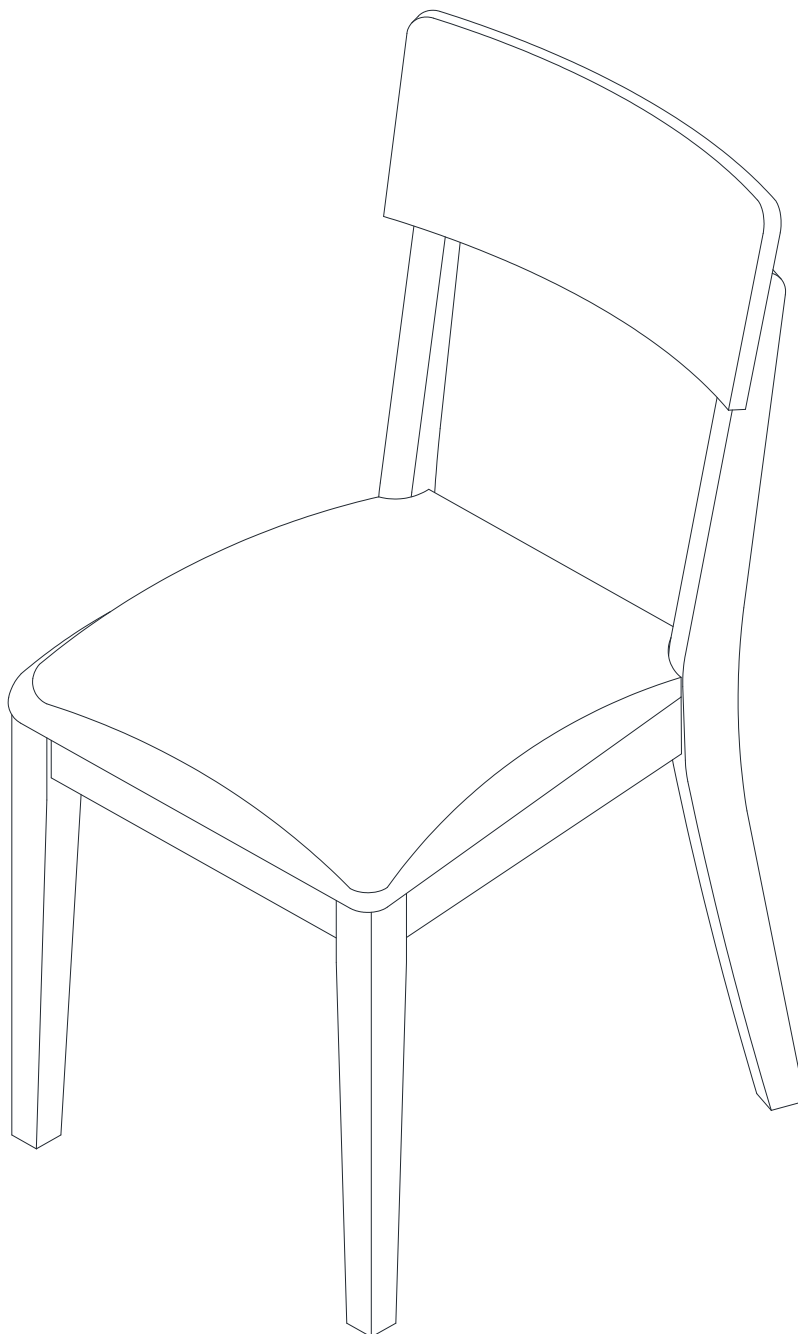

Description : **ANDI CHAIR WITH FAUX LEATHER**

Dimension : **17.5"Wx21.5"Dx35.8"H**

Cube Size : **37.4"x19.4"x12"**

NW: 29.7 LBS

GW: 39.6 LBS

ANDI CHAIR WITH FAUX LEATHER

BEFORE ASSEMBLY

Thank you for purchasing our product. This product has been designed for easy assembly and long lasting use. Please take the time to read and follow the assembly instructions carefully.

Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Please separate, identify, and count all parts and metal hardware. Compare with part list to be sure all parts are present. If hardware is missing or you have difficulty assembling this product, please call for us.

IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.




ASSEMBLY TOOLS REQUIRED

NOT INCLUDED






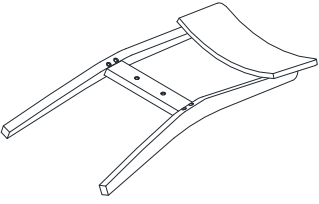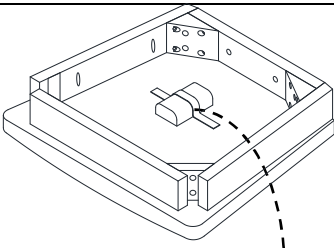


PART LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
A	Chair back	1		B	Seat Frame	1	 <div data-bbox="1209 1592 1513 1742" style="border: 1px dashed black; padding: 5px; margin-top: 10px;"> Hardware bag location </div>
C	Front Leg	2					

HARDWARE LIST


When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
1	Long bolt (M6x80mm)	4		2	Medium bolt (M6x60mm)	4	
3	Short bolt (M6x40mm)	2		4	Lock Washer (ø6.5x9)	10	
5	Flat Washer (ø6.5x19)	10		6	Allen Key (4mm)	1	

STEP 1


Attach seat frame (B) to the back (A) by using bolts (3) & (1), washers (4) and (5). Tighten with Allen Key (6).

Note: DO NOT tighten any of the bolts, until the chair is assembled.

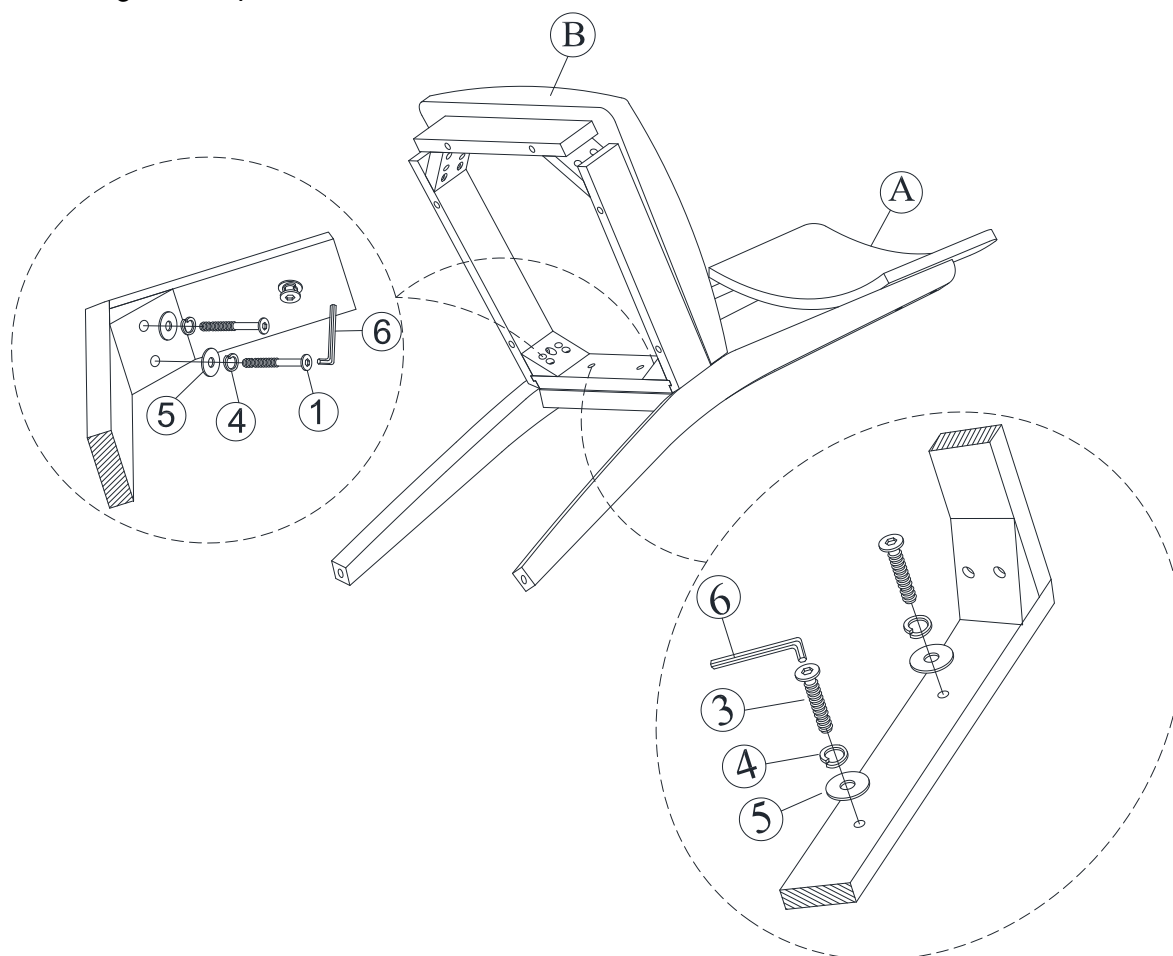

STEP 2

Attach front legs (C) to the seat frame by using bolts (2), washers (4) and (5). Tighten with Allen Key (6).

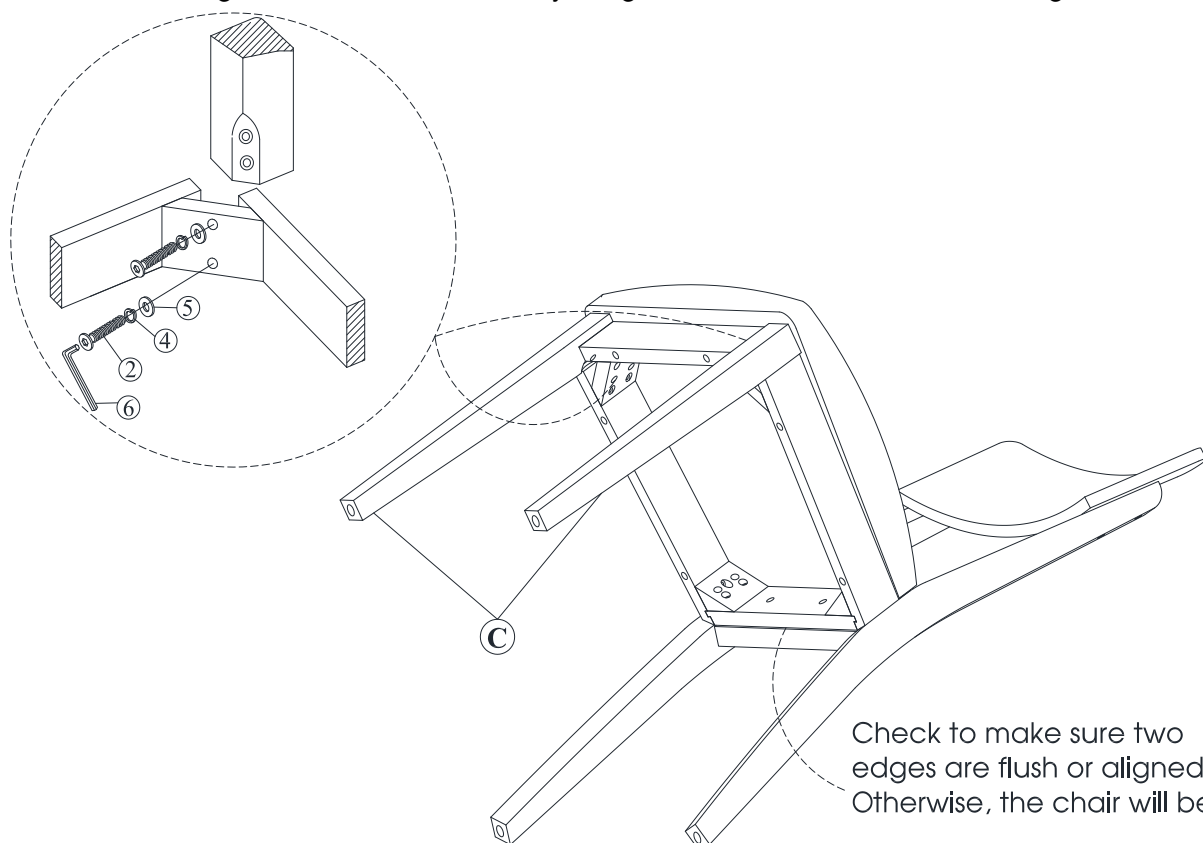

STEP 3

Put the chair on a flat level surface to make sure the chair is level and then tighten the all bolts.

