



ASSEMBLY INSTRUCTION

BROOME - CORNER DESK L

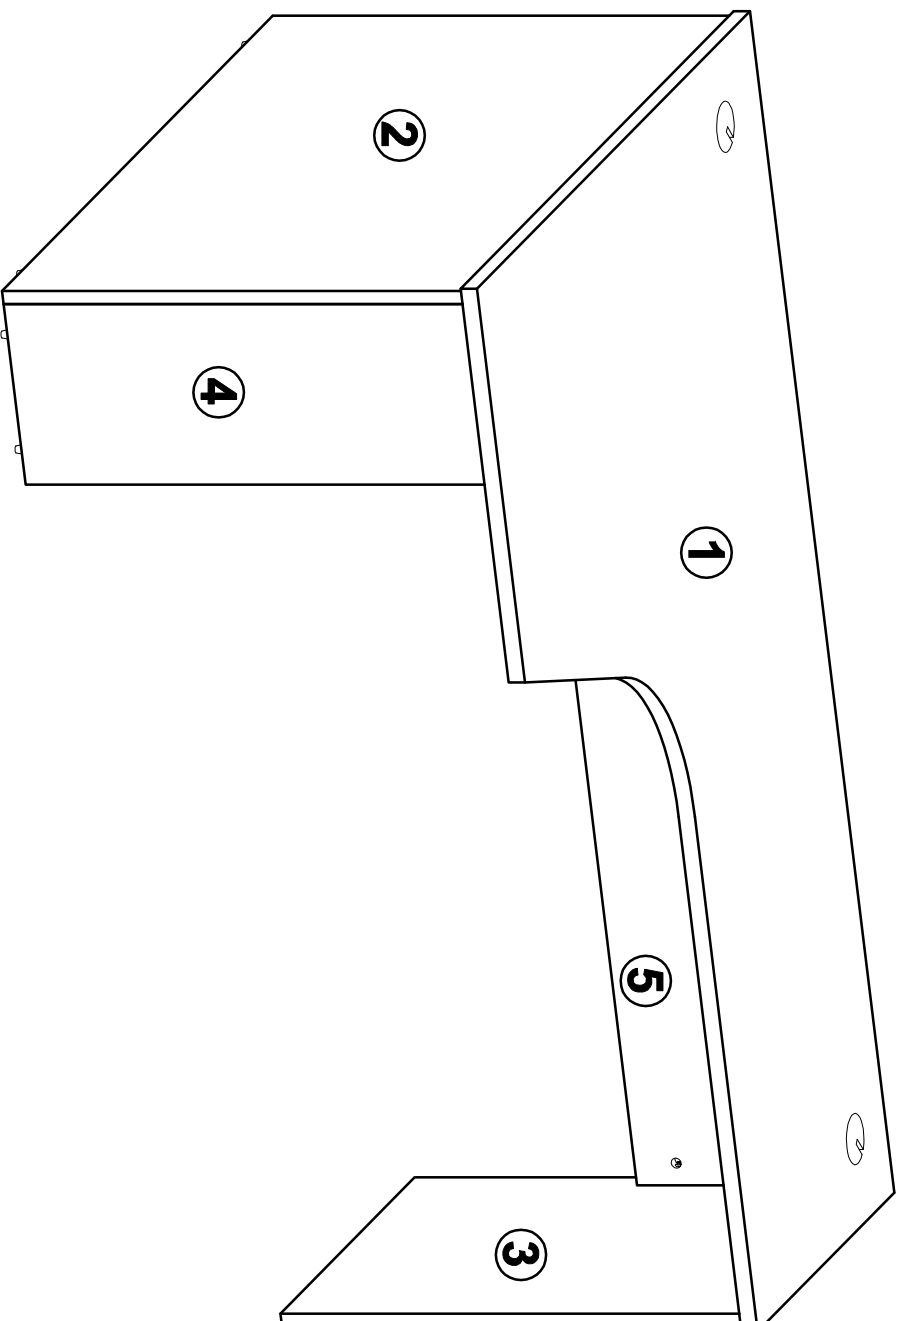


PARTS


① **1 x 1**

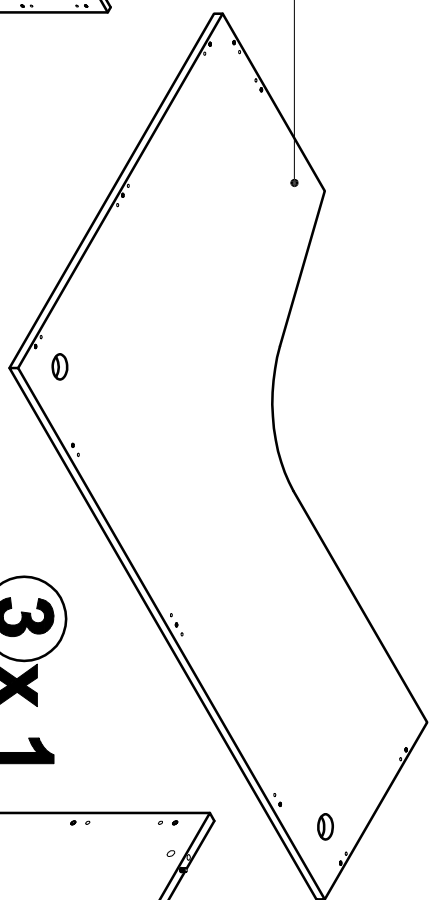


② **2 x 1**

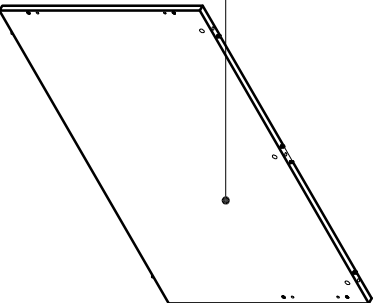


④ **4 x 1**

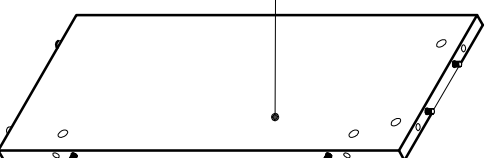


③ **3 x 1**

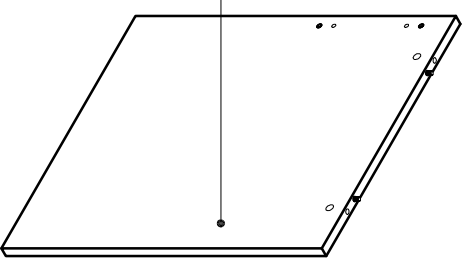

⑤ **5 x 1**

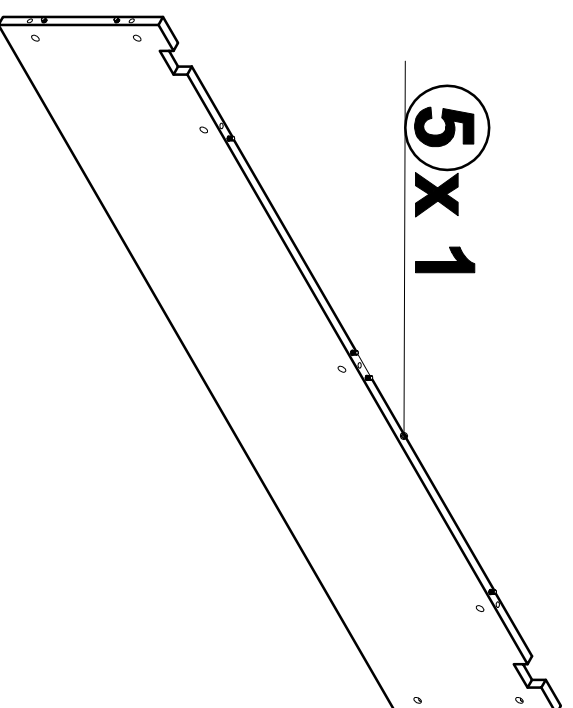


STEP 1

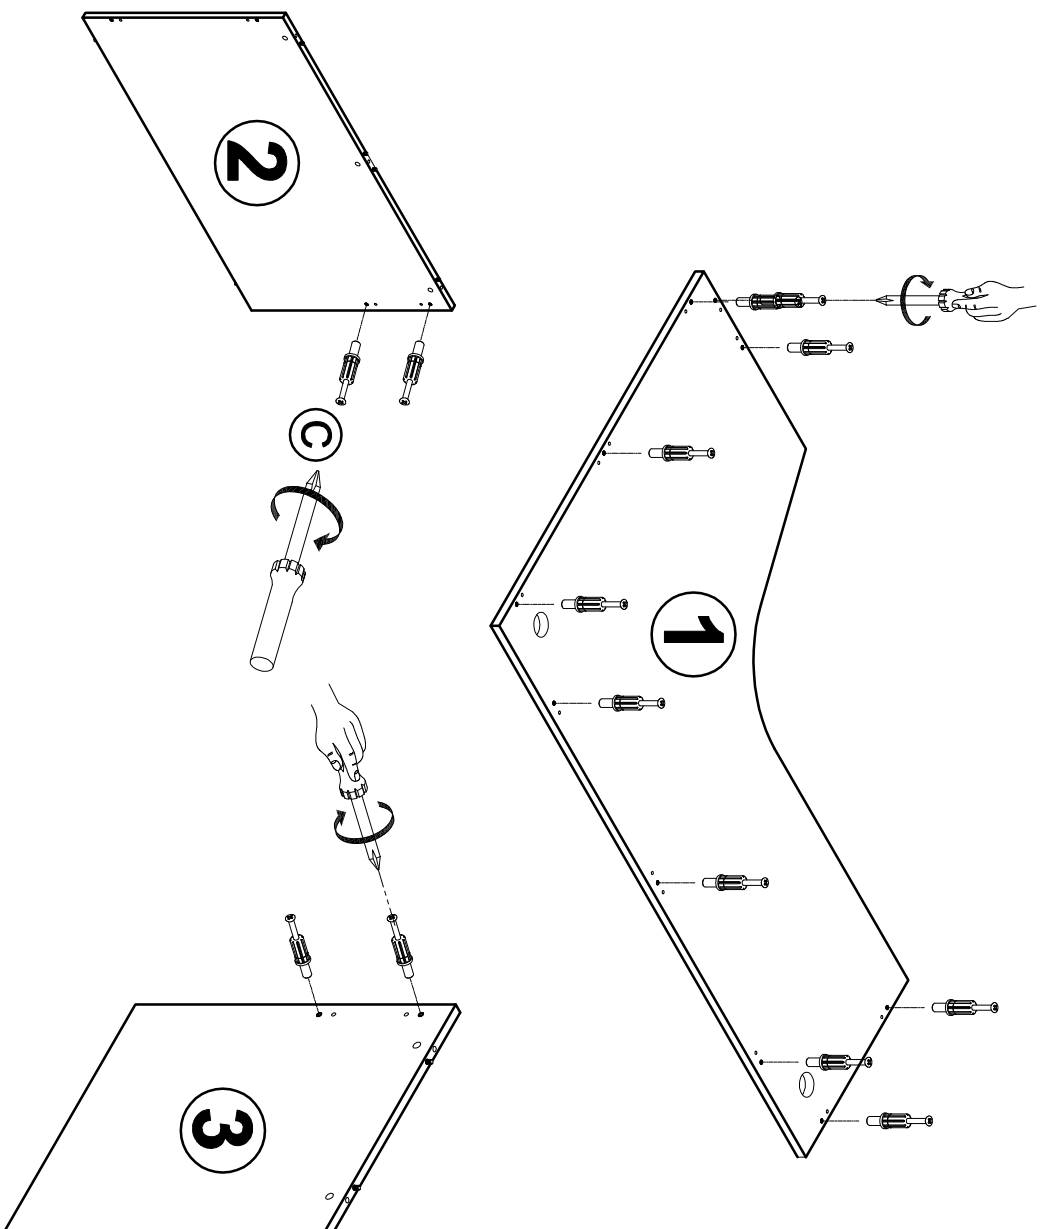

HARDWARE



(A) x 2

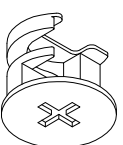


(B) x 16




(C) x 16


TOOL




STEP 2

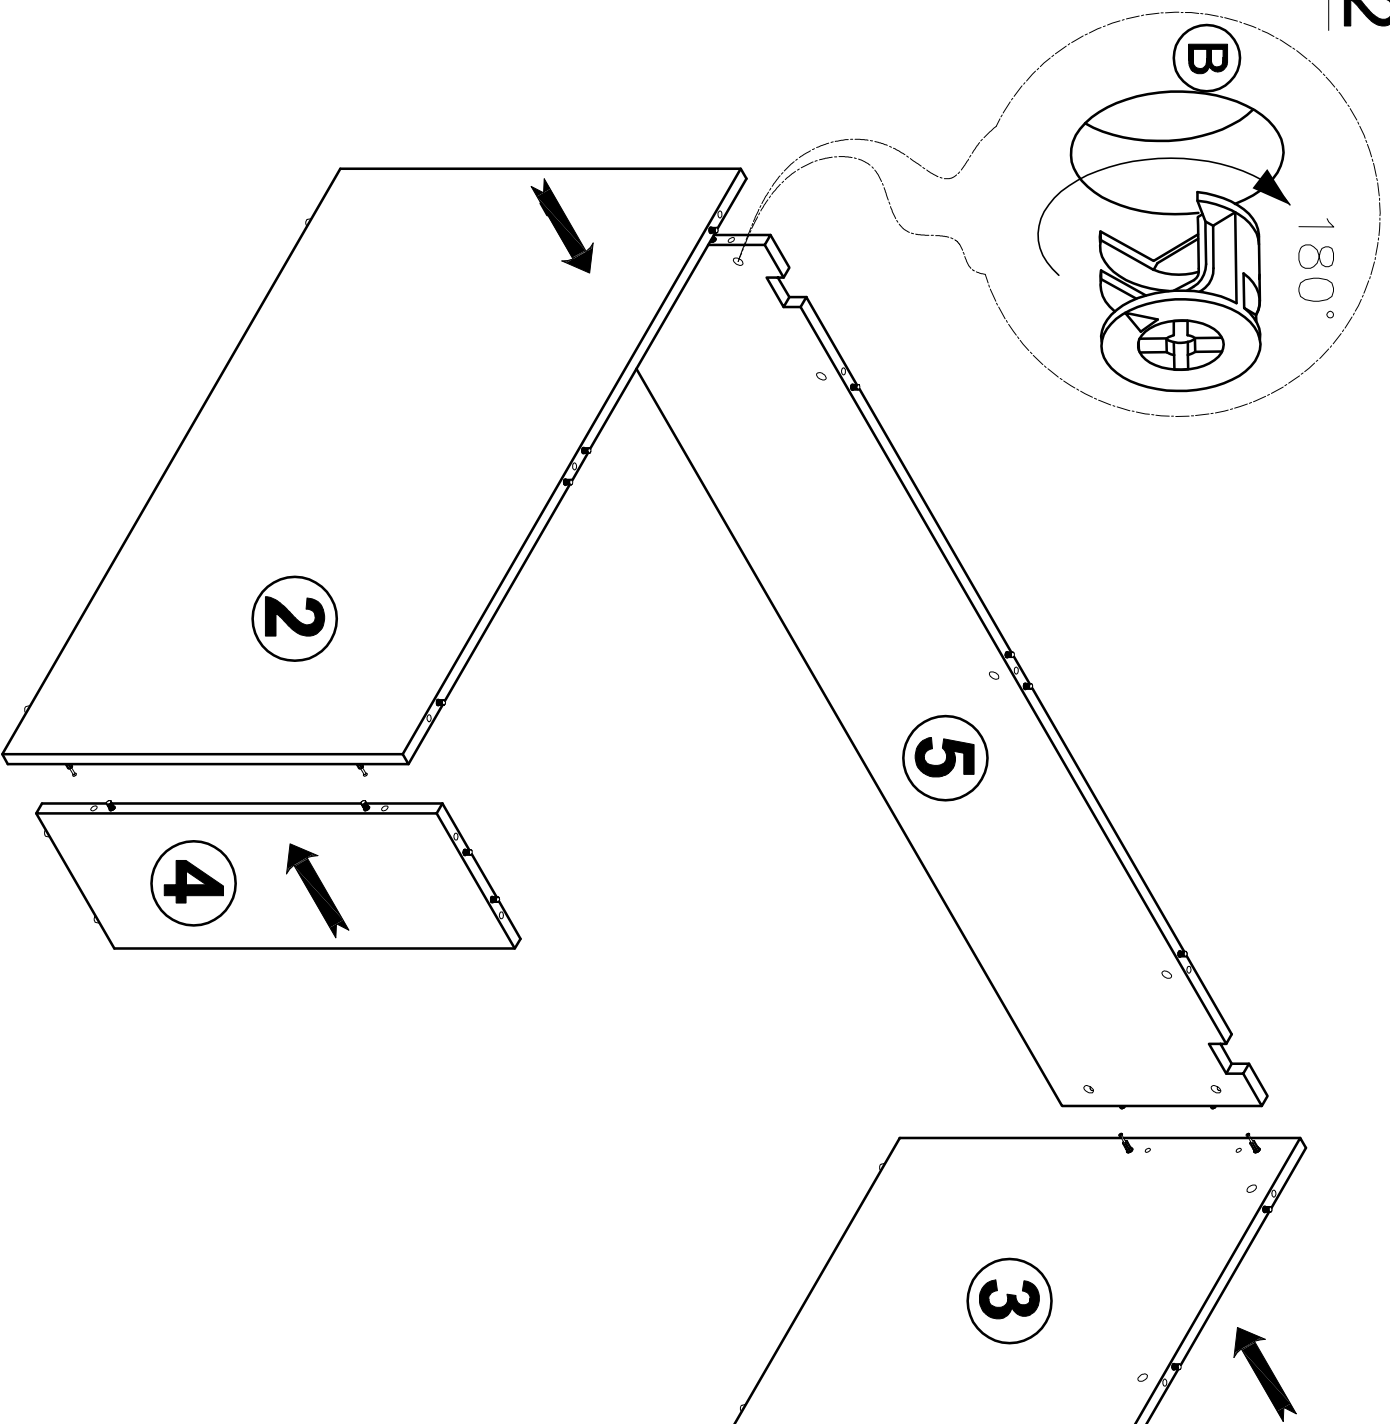

STEP 3

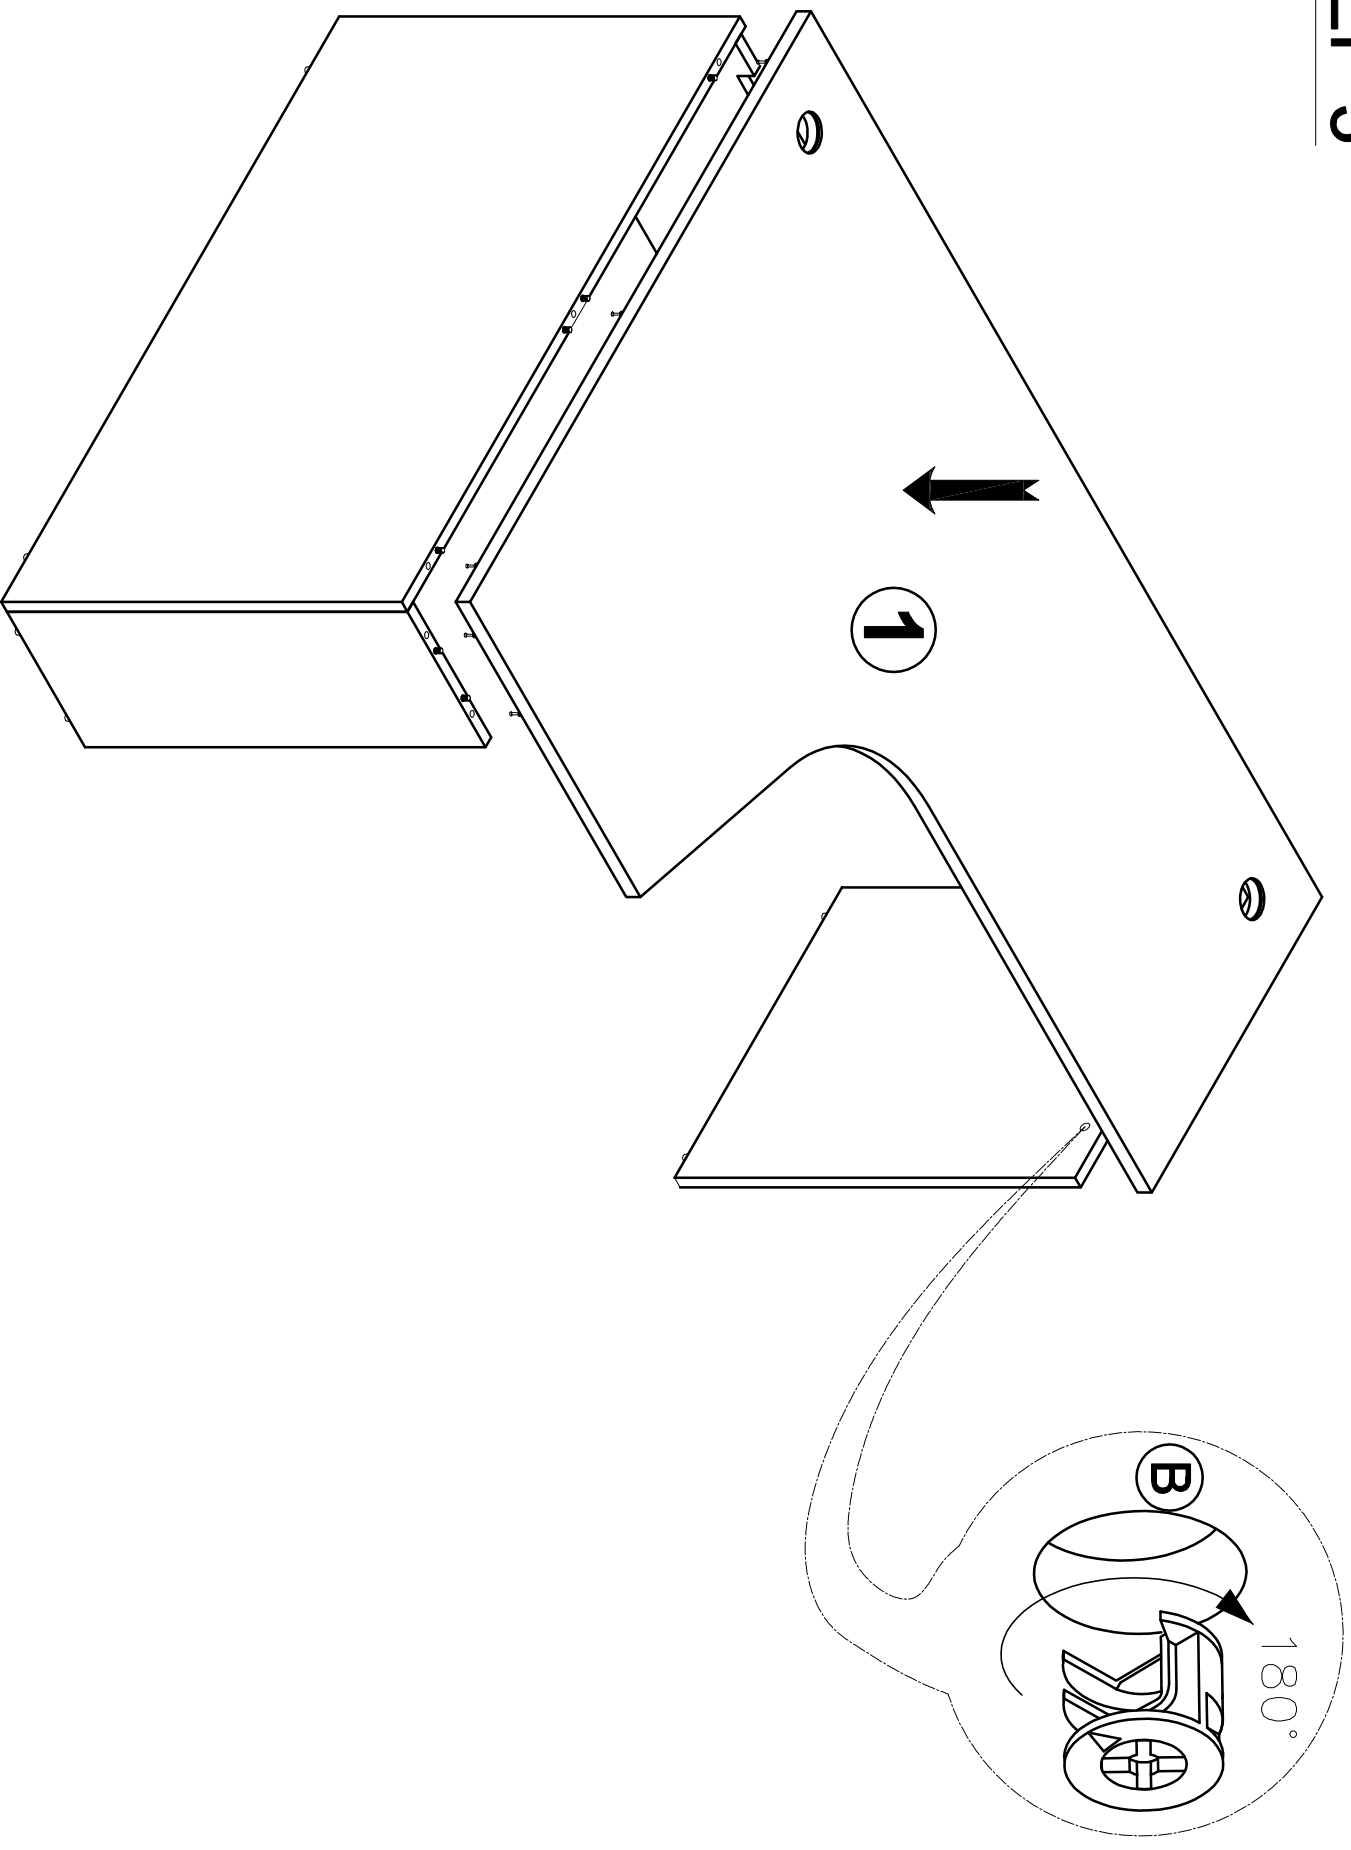


STEP 4

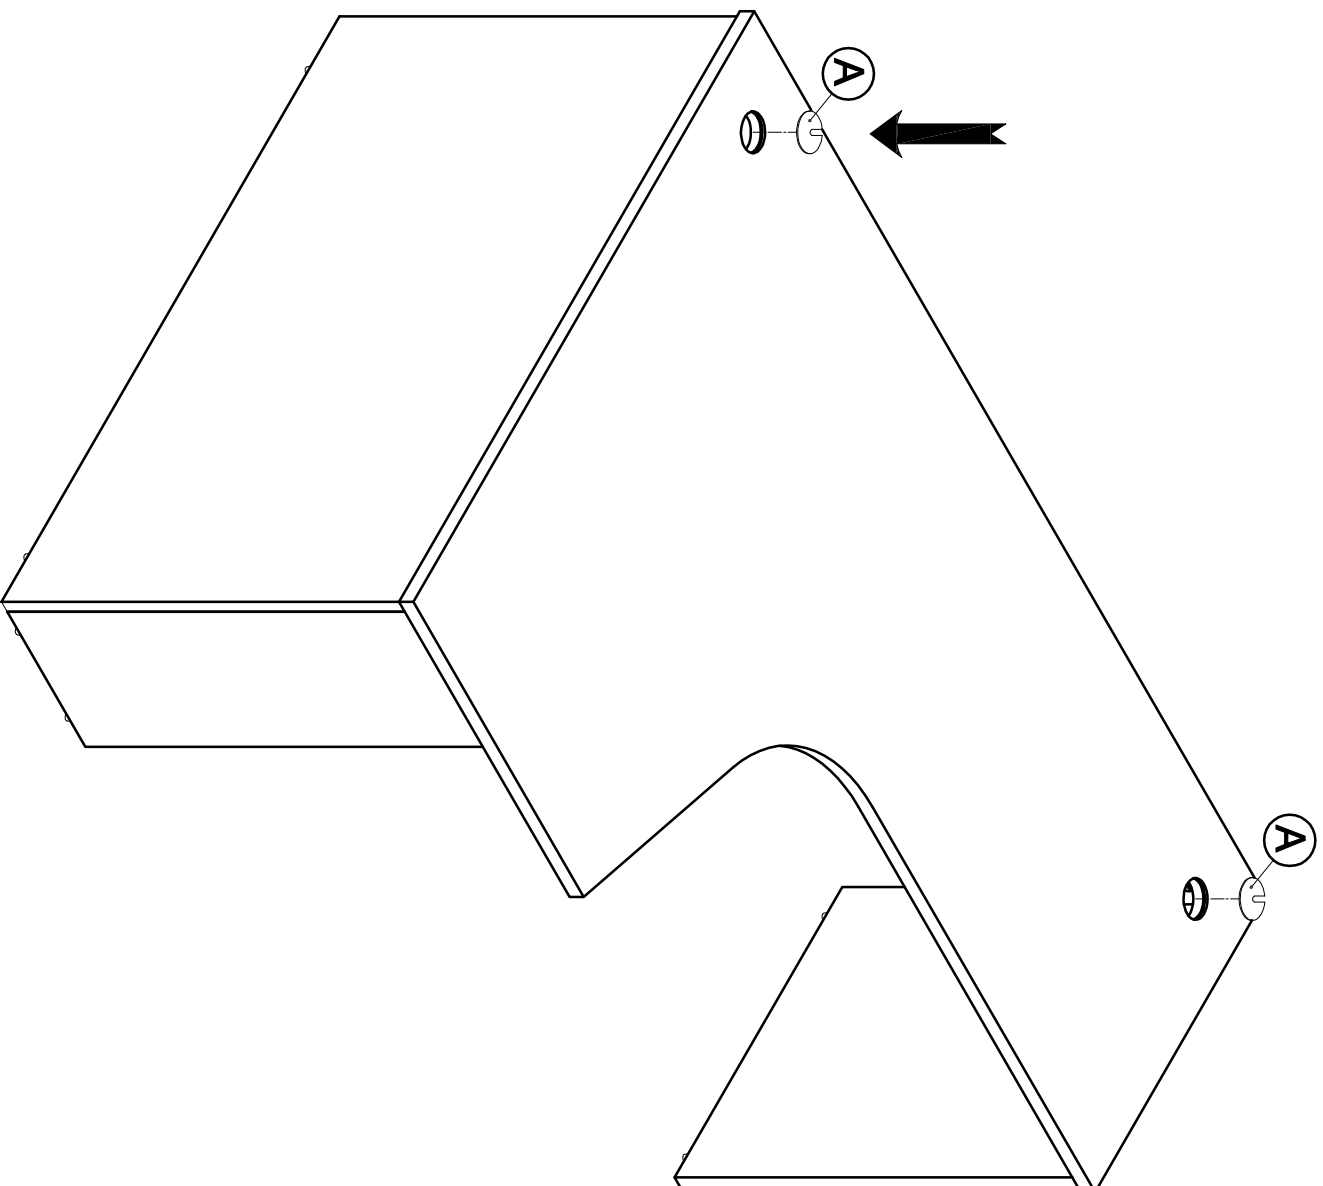


ASSEMBLY INSTRUCTION

BROOME - DESK 36W24D - LEFT

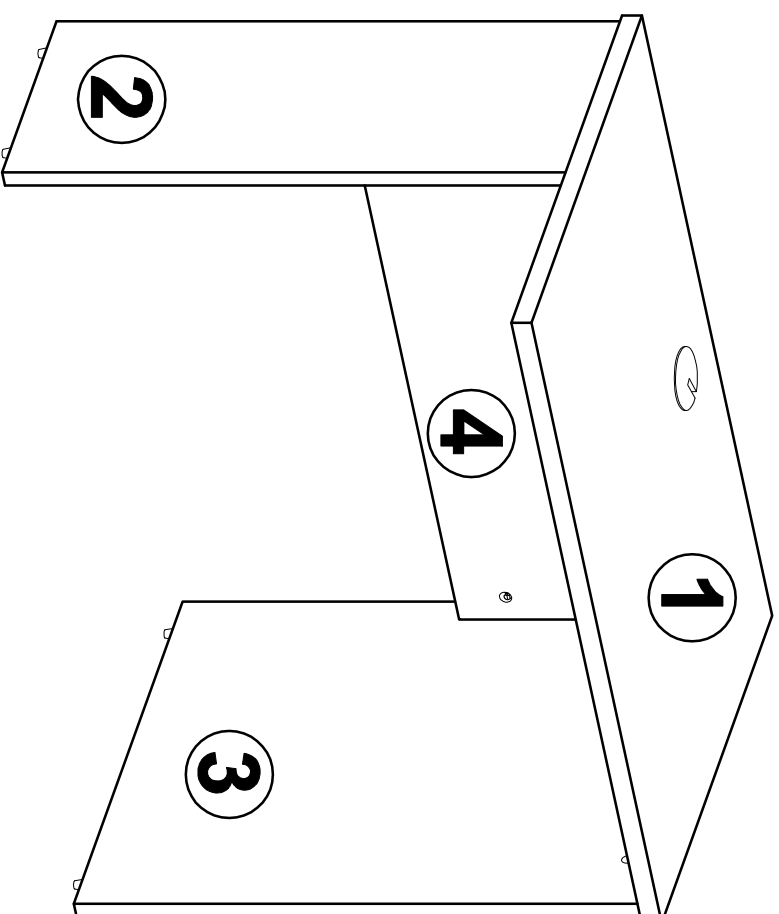


PARTS


①x 1

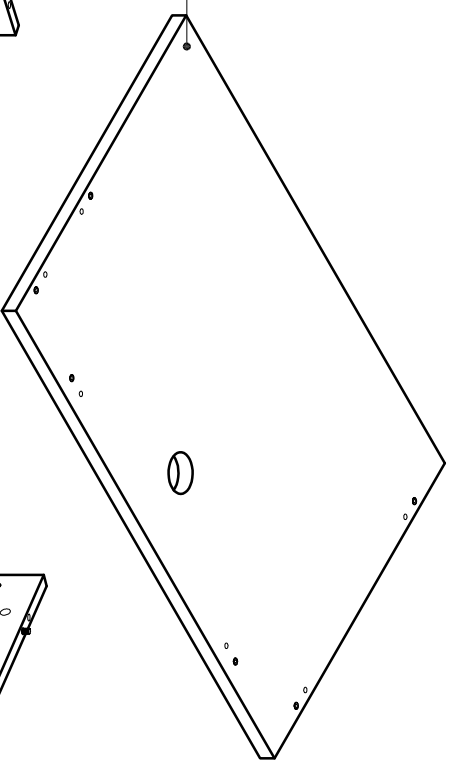


②x 1

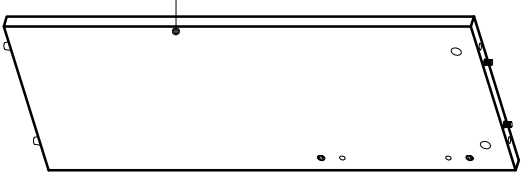


③x 1

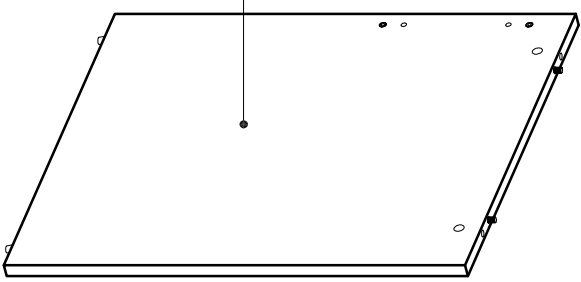

④x 1

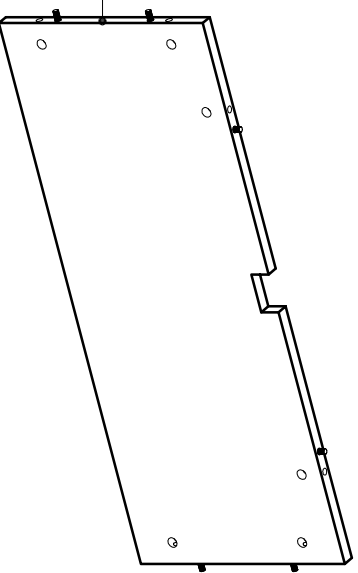


STEP 1

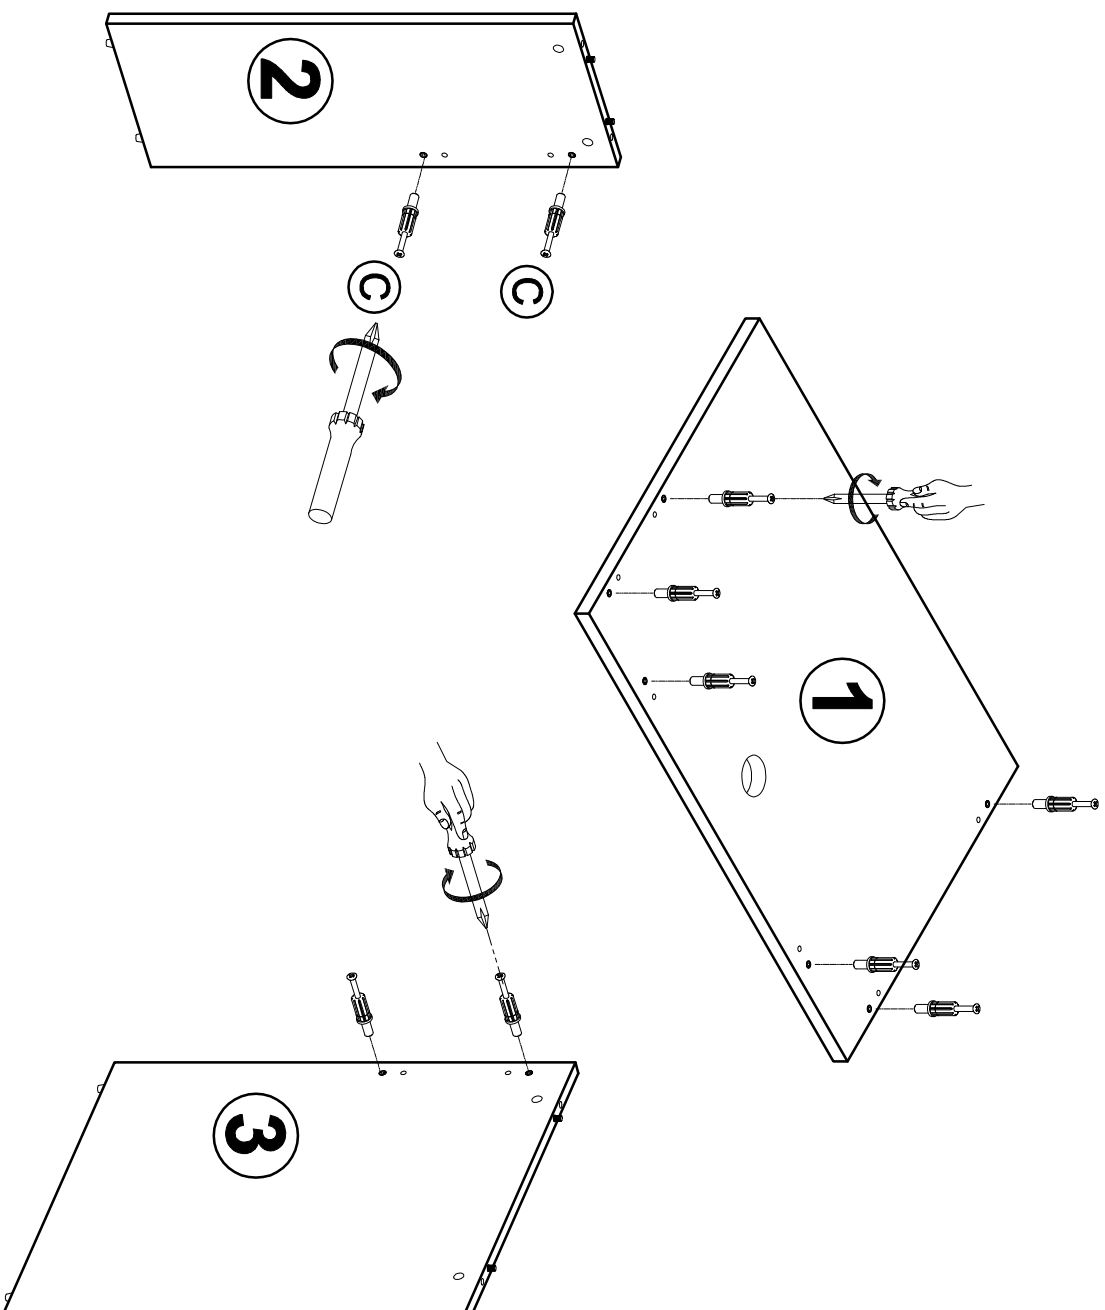

HARDWARE




(A) x 1

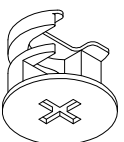


(B) x 10



(C) x 10




(D) x 8

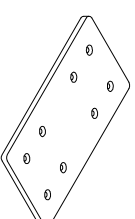


(E) x 1


TOOL




STEP 2

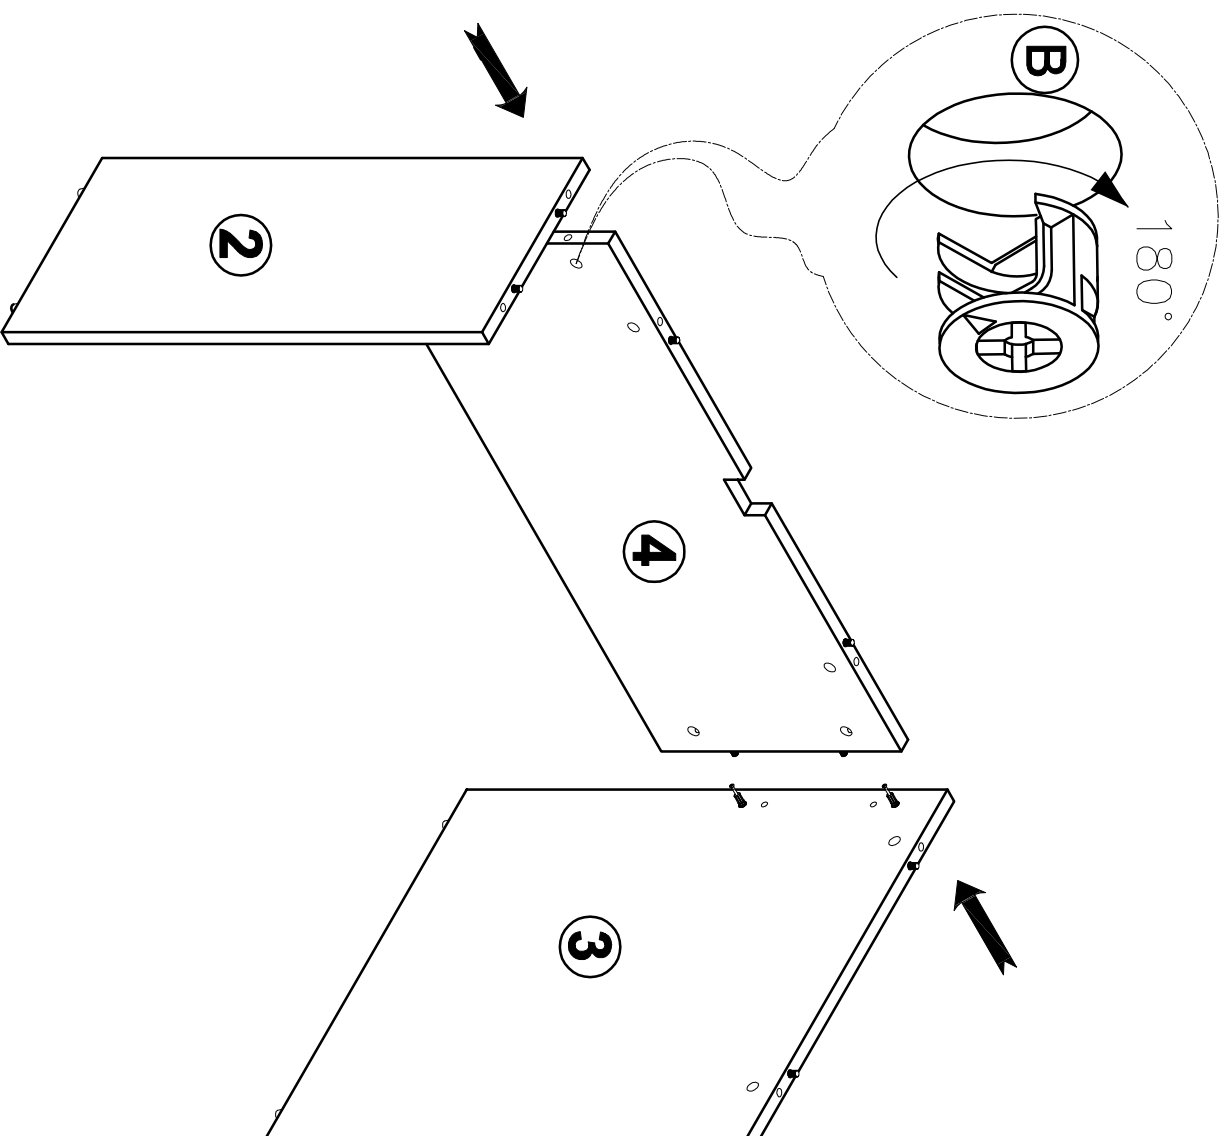



STEP 3

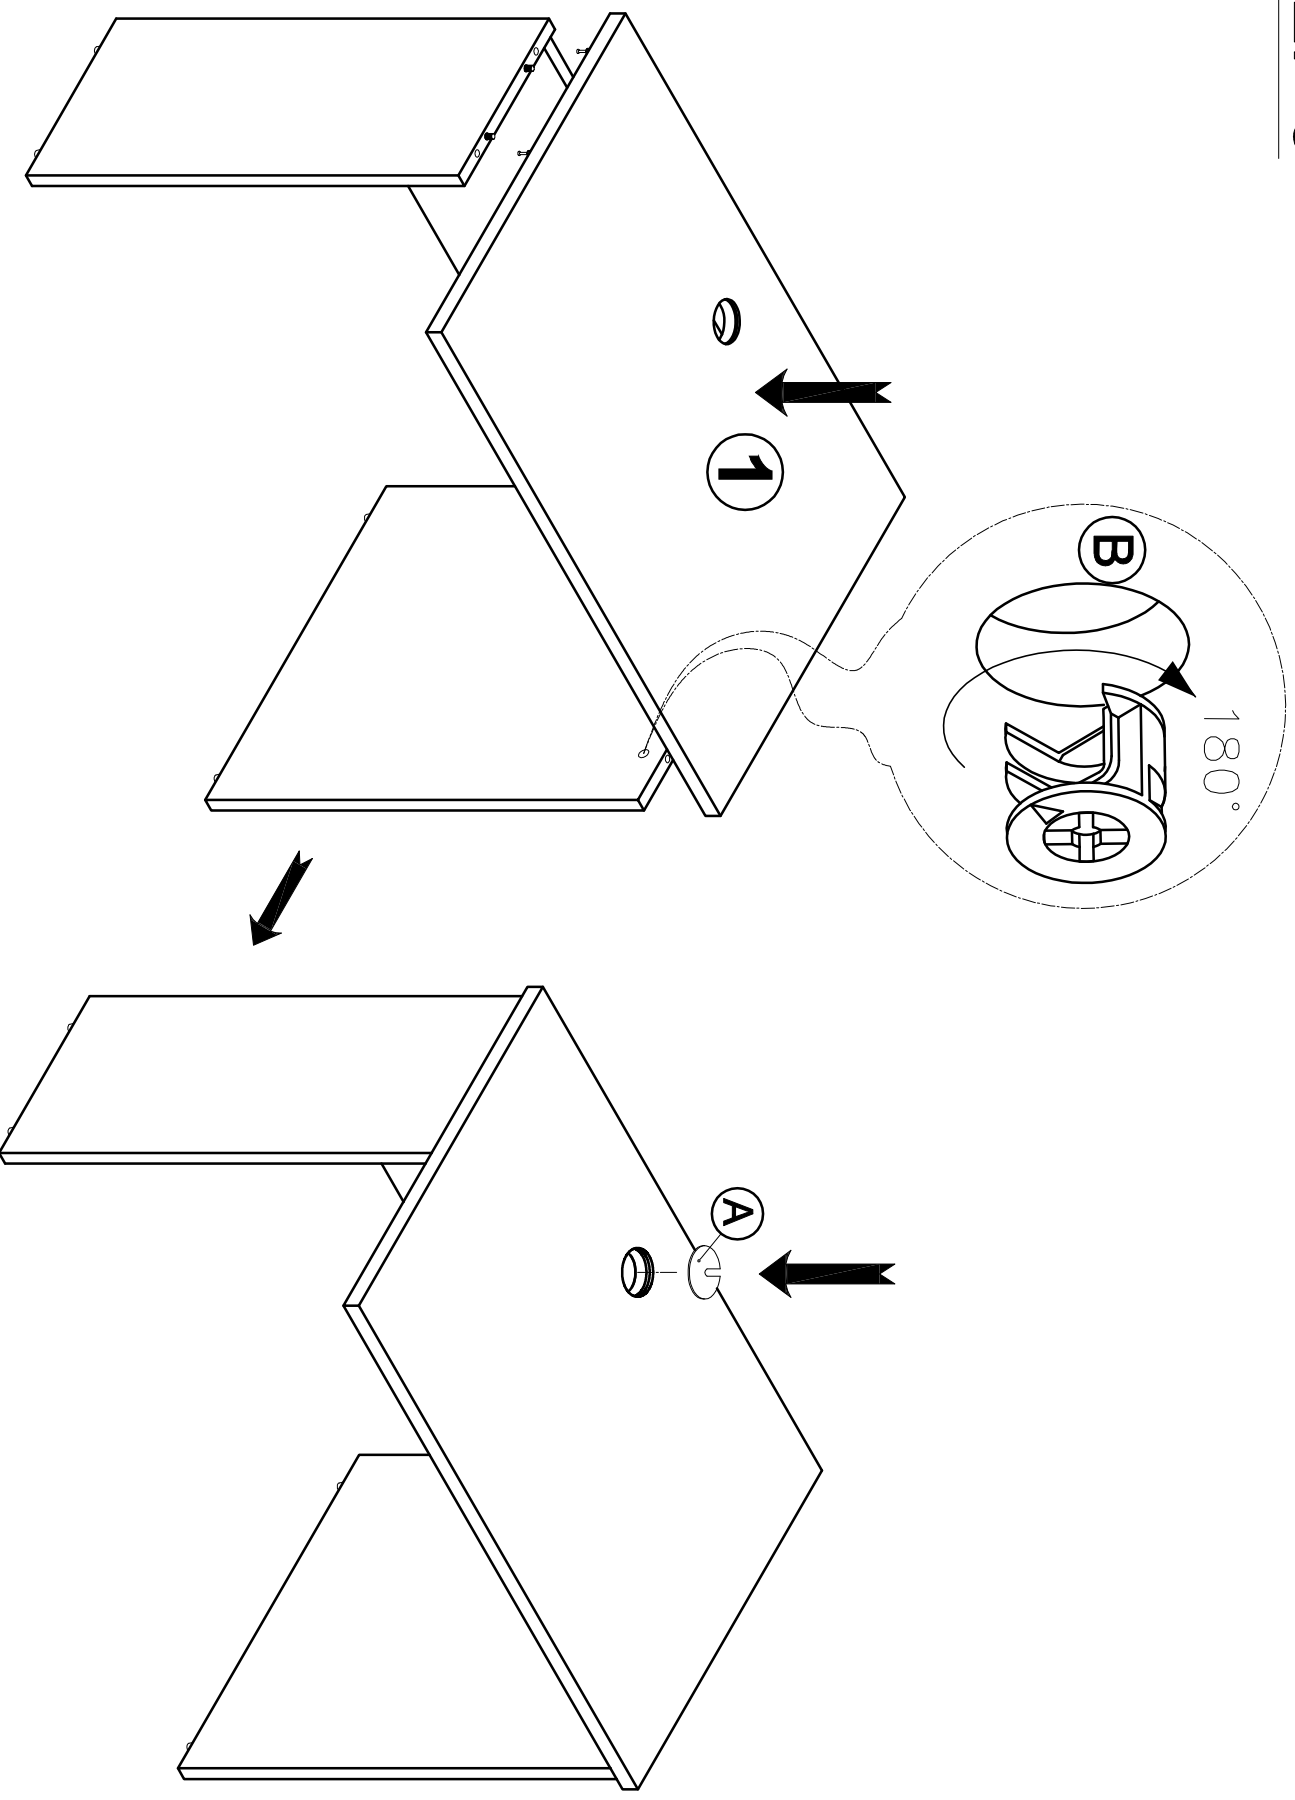


STEP 4

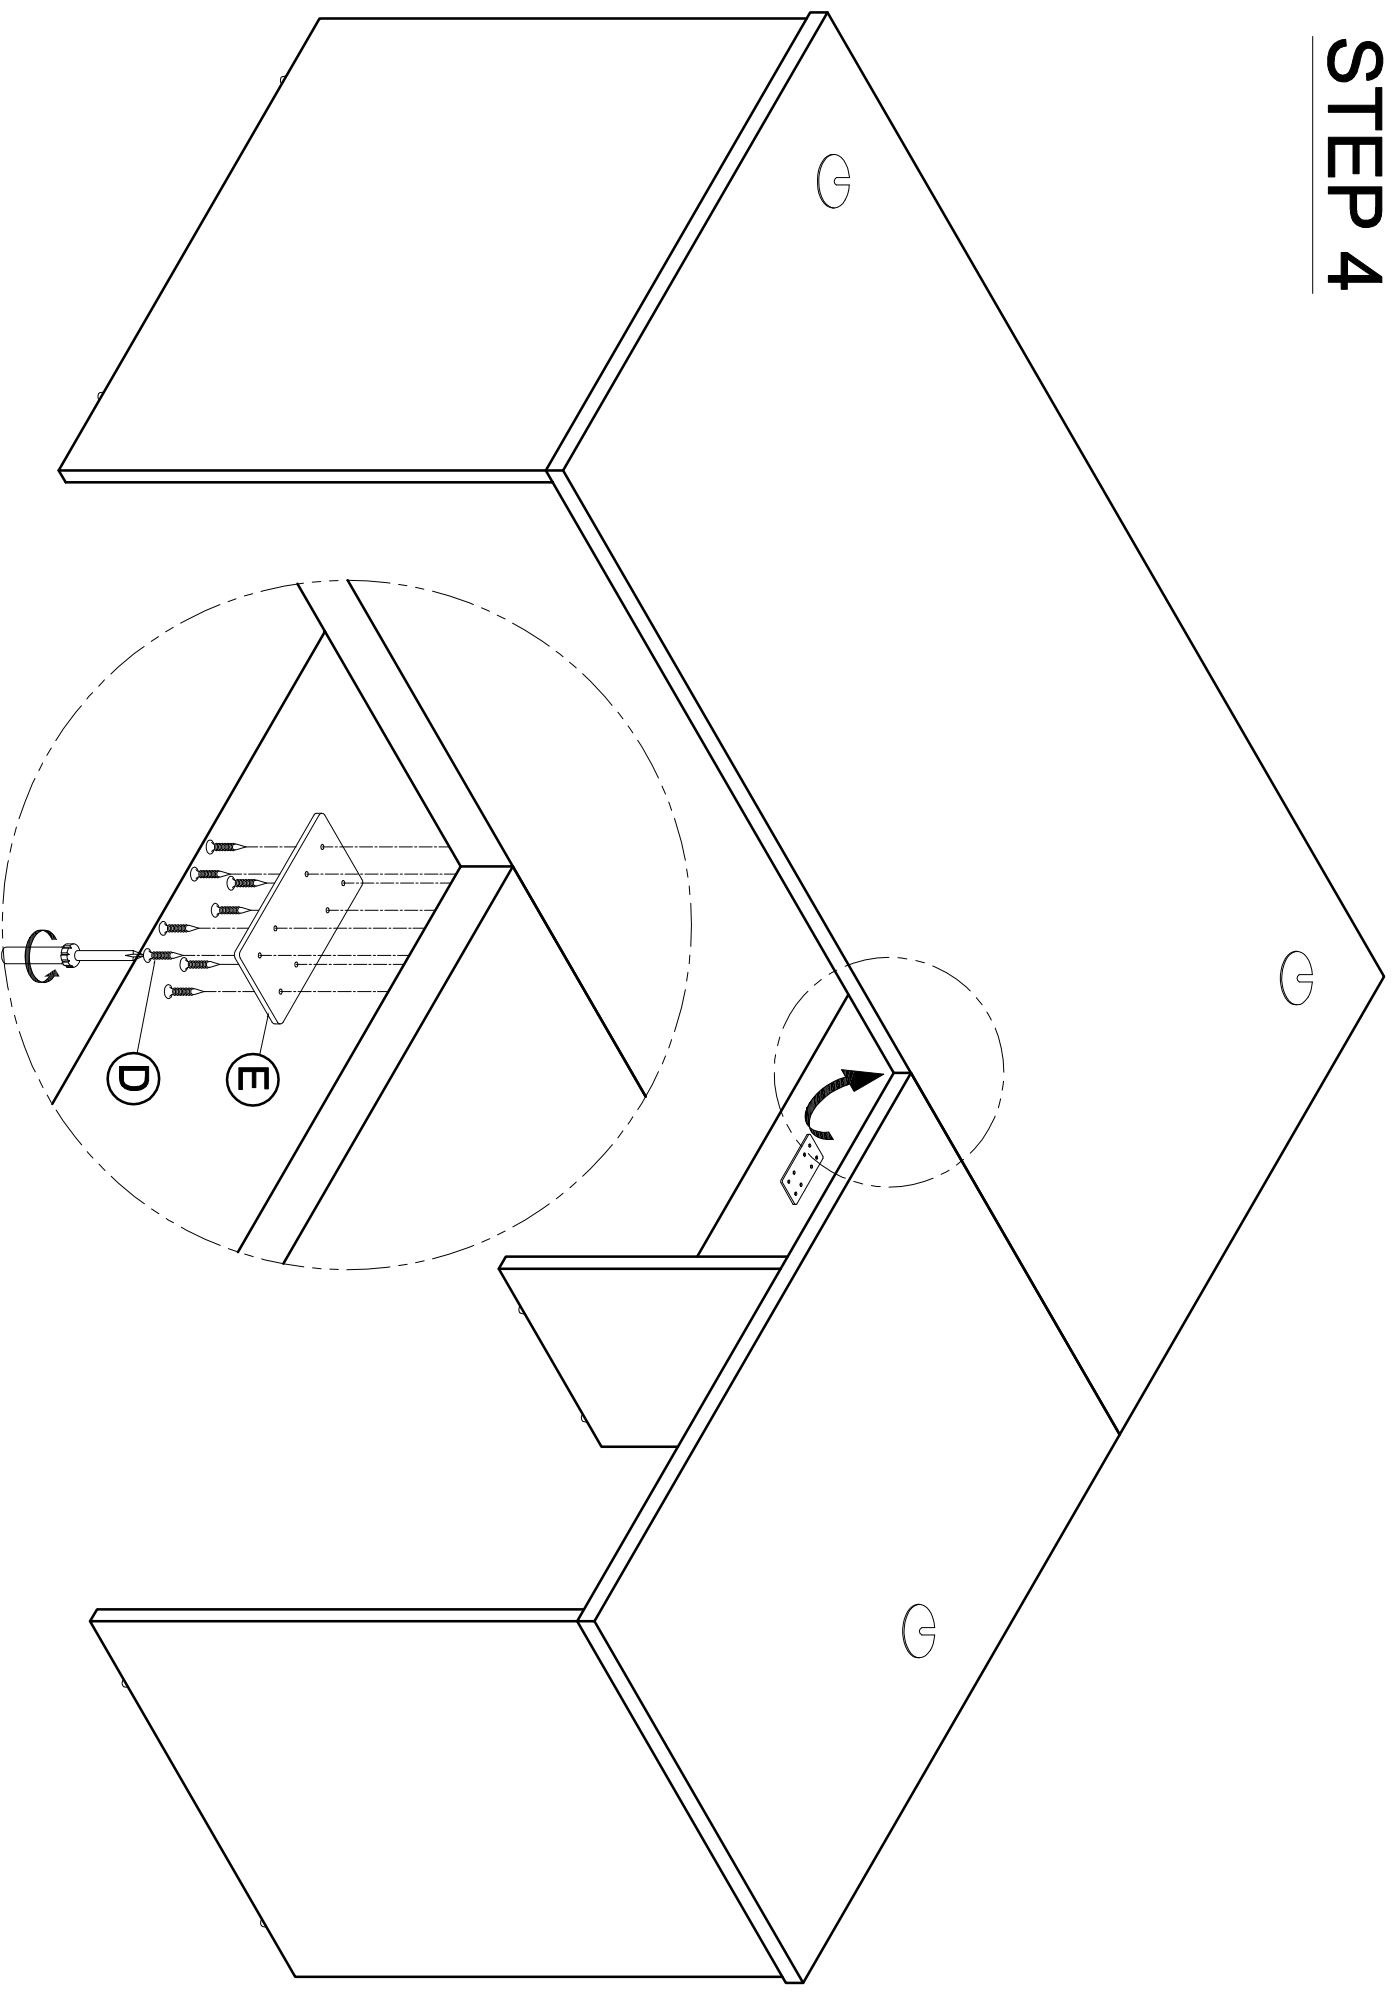



ASSEMBLY INSTRUCTION
BROOME - MOBILE CABINET

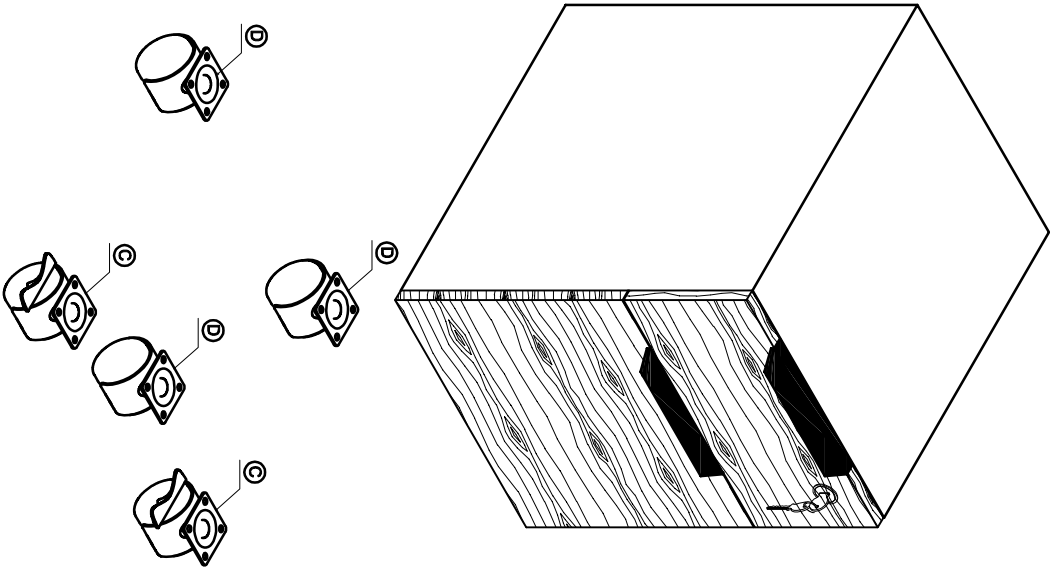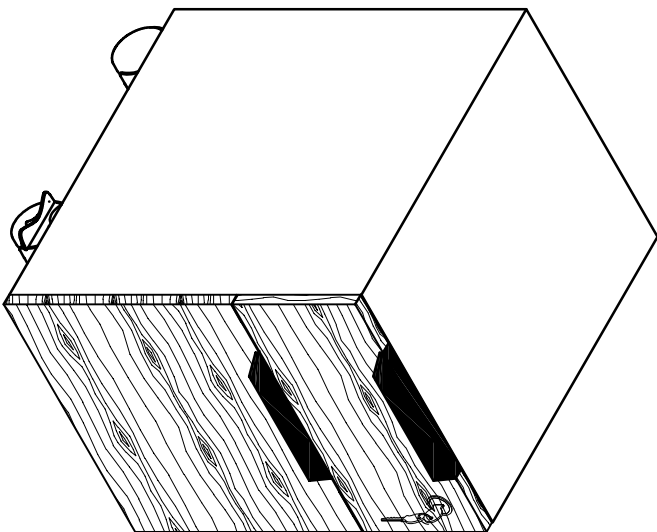


HARDWARE



TOOL

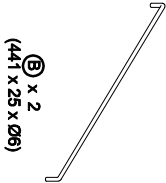

STEP 1

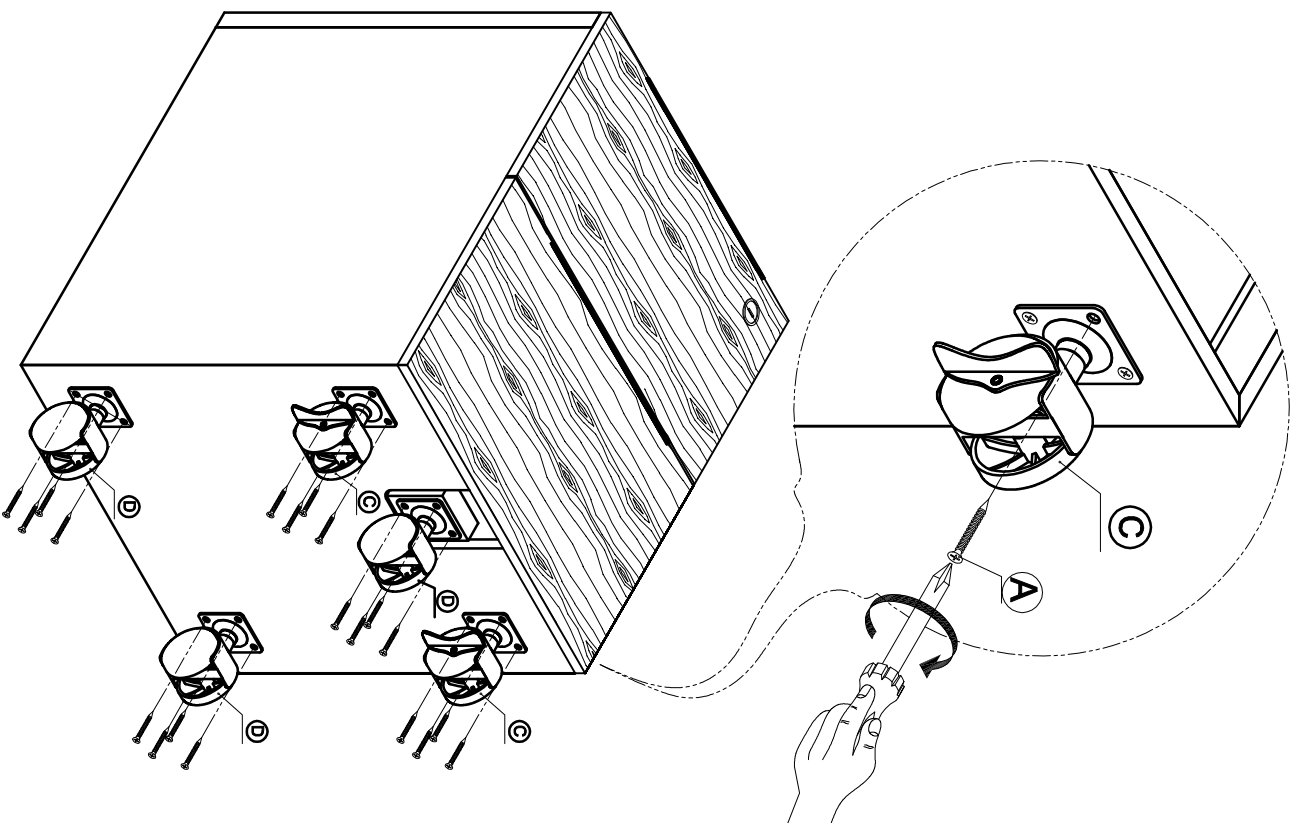

STEP 2

