

MADISONPARK®

ASSEMBLY INSTRUCTIONS

Description: Brody Dining Chair




Important safety instructions:


- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:






- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

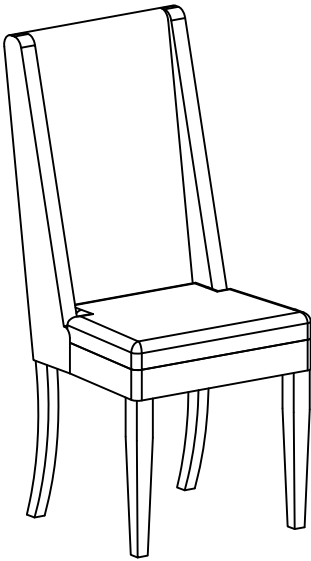Parts List

Item	Description		QTY
P1	Chair Back		1
P2	Seat Cushion		1
P3	Front Legs		2



Hardware List

Item	Description		QTY
H1	Short Bolts Ø5/16**2"		4
H2	Long Bolts Ø5/16**2-1/4"		4
H3	Lock Washers 5/16"		8
H4	Flat Washers 5/16"		8
H5	Allen Wrench 5/16"		1

DISCLAIMER:


WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

Assembly Procedures:

Step 1. Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach the seat cushion (P2) to chair back (P1) using bolts (H1), lock washers (H3), flat washers (H4). Loosely tighten by Allen wrench (H5).

- (H1)x2 Short Bolts Ø5/16**2"
- (H3)x2 Lock Washers 5/16"
- (H4)x2 Flat Washers 5/16"
- (H5)x1 Allen Wrench 5/16"
- 

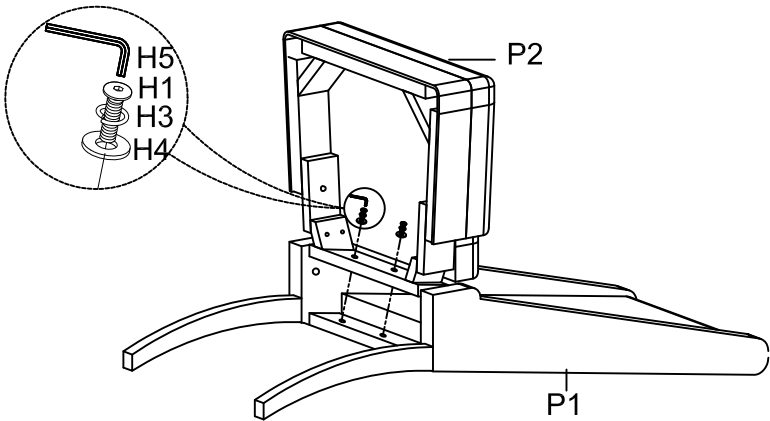

Step 2. Attach the seat cushion (P2) to the leg of chair back (P1) using bolts (H1), lock washers (H3) and flat washers (H4). Loosely tighten with Allen wrench (H5).

(H1)x2 Short Bolts Ø5/16"x2"




(H3)x2 Lock Washers 5/16"



(H4)x2 Flat Washers 5/16"



(H5)x1 Allen Wrench 5/16"

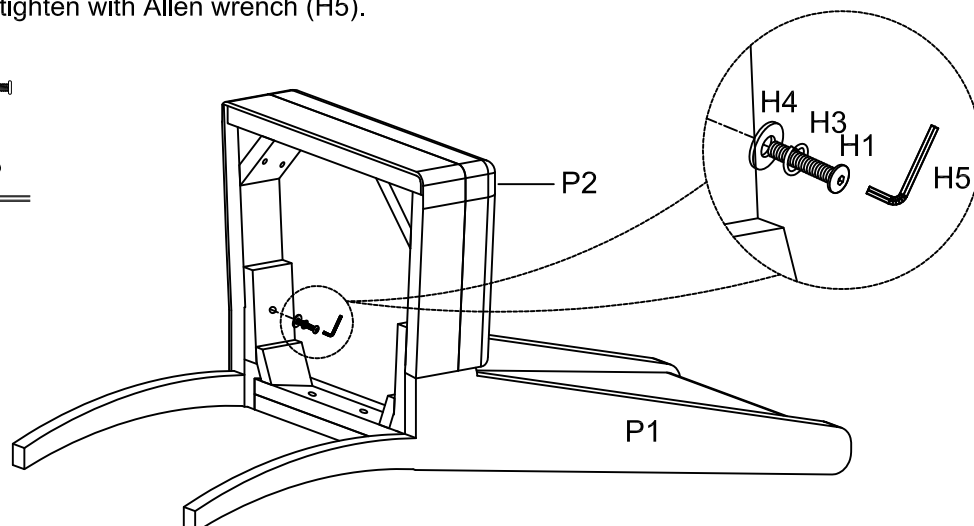

Step 3. Attach front legs (P3) to seat cushion (P2) using bolts (H2), lock washers (H3) and flat washers (H4). Loosely tighten the bolts with Allen wrench (H5).

(H2)x4 Long Bolts Ø5/16"x2-1/4"




(H3)x4 Lock Washers 5/16"




(H4)x4 Flat Washers 5/16"



(H5)x1 Allen Wrench 5/16"

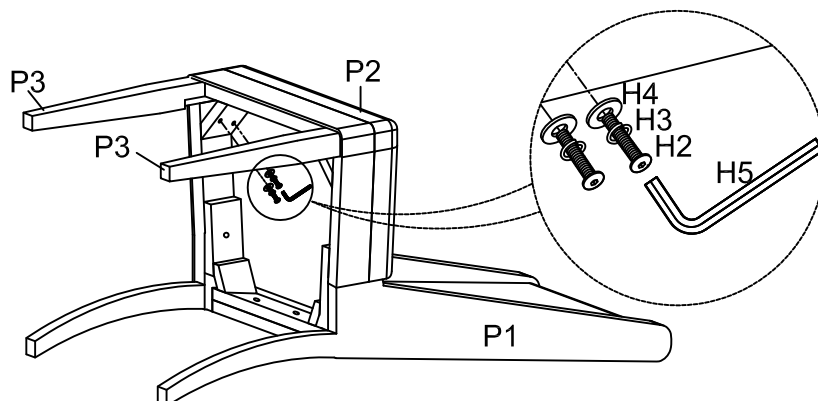

Step 4. Securely tighten all bolts with Allen wrench (H5), but do not over tighten the bolts. Turn the assembled chair to upright position. Make sure the chair is level. Assembly is complete. **Failure to follow these unstructions may cause the bolts to misalign during assembly.**

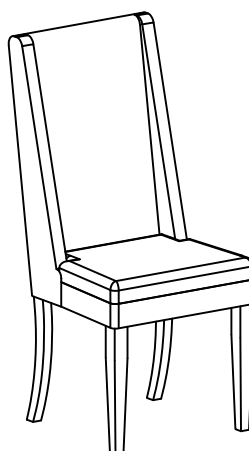

ADDITIONAL NOTE ABOUT SAFETY:

BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE.

THEY SHOULD BE INSPECTED AT LEAST EVERY 3 MONTHS AND RE-TIGHTENED AS NEEDED TO PREVENT DAMAGE OR INJURY, AND ENSURE STABILITY.

Thank you for your purchase